



PORTABLE AIR CONDITIONER



Download the app & activate product

Before using this product, please read this manual carefully and keep it for future reference.
The design and specifications are subject to change without prior notice for product improvement for product improvement. contact a service center.

⚠ CAUTION

- The air conditioner is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- If the power cord needs to be replaced, please contact a service center.
- Electrical installation must be performed in accordance to national regulation standards by qualified personnel only.

Please read through these instructions before you start the installation process. Improper installation can cause damage to the unit, your personal property, and also poses a personal safety hazard.

WARNINGS (for using R32 refrigerant only)

- Do not use any means to accelerate the defrosting process or to clean the unit, other than those recommended by the manufacturer.
- Do not use or store the appliance in spaces with potential ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- Store the appliance in a way that will prevent mechanical damage from occurring.
- Store the appliance in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- Flammable refrigerant (R32) is used within the air conditioner. please follow the instruction carefully to avoid any hazard. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself.
- When maintaining or disposing of the air conditioner, the refrigerant (R32) shall be recovered properly, do not discharge to air directly.

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The level of risk is shown by the following indications. Please read through these instructions before you start the installation process. Improper installation can cause damage to the unit, your personal property, and also poses a personal safety hazard.

- Installation must be performed according to the installation instructions. Improper installation can cause water leakage, electrical shock, or fire.
- Use only the included accessories and parts, and specified tools for the installation. Using non-standard parts can cause water leakage, electrical shock, fire, and injury or property damage.

- Make sure that the outlet you are using is grounded and has the appropriate voltage. The power cord is equipped with a three-prong grounding plug to protect against shock. Voltage information can be found on the side of the unit, behind the grille.

- Install the unit on a flat, sturdy surface. Failure to do so could result in damage or excessive noise and vibration.

- The unit must be kept free from obstruction to ensure proper functioning and to mitigate safety hazards.

- DO NOT modify the length of the power cord or use an extension cord to power the unit. DO NOT share a single outlet with other electrical

- appliances. Improper power supply can cause fire or electrical shock.
- DO NOT install your air conditioner in a wet room such as a bathroom or laundry room. Exposure to water can cause electrical components to short circuit.
- DO NOT install the unit in a location that may be exposed to combustible gas, as this could cause fire.

- The unit has wheels to facilitate moving. Do not attempt to roll the unit across thick carpet or to roll over objects, as this could cause the unit to tip over.
- DO NOT attempt to operate a unit that has been dropped or damaged.
- DO NOT allow children to play with the air conditioner. Children must be supervised around the unit at all times.


- If the air conditioner is knocked over during use, turn off the unit and unplug it from the main power supply immediately. Visually inspect the unit to ensure there is no damage. If you suspect the unit has been damaged, contact a service center.
- In a thunderstorm, the unit should be turned off to avoid damage to the machine due to lightning.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Do not install the appliance in a location that may be exposed to combustible gas. If combustible gas accumulates around the unit, it may cause fire.
- Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To reduce the risk of fire or electric shock, do not use this air conditioner with any solid-state speed control device.
- The appliance shall be installed in accordance with national wiring regulations.
- Contact a service center for repair or maintenance of this unit.
- Contact the authorized installer for installation of this unit.
- When there are significant differences between features or operation implied by the remote control illustration and the actual functions described in the USER MANUAL, the descriptions in the USER MANUAL shall prevail.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.



Caution: Risk of fire/flammable materials
(Required for R32/R290 units only)

Operation of Current Device

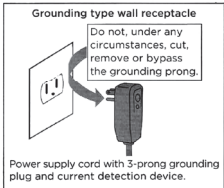

The power supply cord contains a measurement current device that senses damage to the power cord. Test your power supply cord as follows:

1. Plug in the air conditioner.
2. The power supply cord will have TWO buttons on the plug head. Press the TEST button. You will notice a click as the RESET button pops out.
3. Press the RESET Button. You will notice a click as the button engages.
4. The power supply cord is now supplying electricity to the unit. (On some products this is also indicated by a light on the plug head.)

NOTICE


The power supply cord with this air conditioner contains a current detection device designed to reduce the risk of fire.
In the event that the power supply cord is damaged, it can not be repaired. It must be replaced with a cord from the manufacturer.

NOTICE

- Do not use this device to turn the unit on or off.
- Always make sure the RESET button is pushed in for correct operation.
- The power supply must be replaced if it fails to reset when either the TEST button is pushed, or it can not be reset. Please contact a service center.

Unit Specifications and Features

Preparation

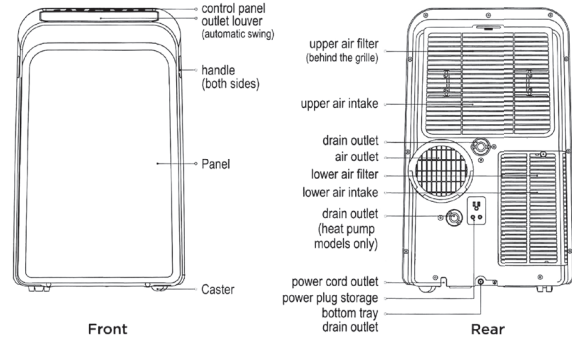

Unit Operating Temperature Range:


Mode	Temperature Range
COOL	17°C - 35°C (62°F - 95°F)
Dry	13°C - 35°C (55°F - 95°F)
Heat (heat pump models only)	5-30°C (41-86°F)

EXHAUST HOSE INSTALLATION:

The exhaust hose and adaptor must be installed or removed in accordance with the usage mode. For COOL or AUTO mode, exhaust hose must be installed. For FAN or DEHUMIDIFY exhaust hose must be removed.

Operating Instructions

Control Panel Features

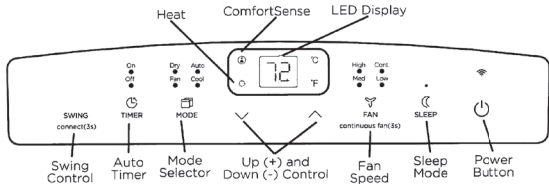

The actual descriptions of control panel and their locations may vary depending on the model.

Swing Button

Used to initiate the Auto Swing feature. When the operation is ON, pressing the SWING button can stop the louver at the desired angle.

Wireless Button

- Also used to initiate the Wireless connection mode. To initiate the Wireless connection mode, power on the air conditioner then press the SWING button for 3 seconds. The LED DISPLAY will show "AP" to indicate the unit is in Wireless connection mode. Refer to the app connection instructions to finish the connection process. If the connection is successful, the unit will exit Wireless connection mode and illuminate the Wireless LED. If the connection fails, the unit will exit Wireless connection mode automatically after 8 minutes and the Wireless LED does not illuminate. Note: The Wireless connection process must be completed within 8 minutes after powering the air conditioner on

Timer Button

Used to initiate the AUTO ON start time and AUTO OFF stop time program. The timer on or off light will illuminate depending on the selected setting.

Mode Button

Selects the desired operating mode. Each time you press the button, a mode is selected in a sequence that goes from AUTO, COOL, DRY FAN and HEAT. The mode light illuminates and indicates the selected mode. Note the HEAT mode light is located next to the LED Display.

Up (+) and Down (-) Buttons

Used to increase/decrease temperature settings. temperature settings in 1°C/1°F increments in a range of 17°C/62°F to 30°C/86°F or the TIMER setting in a range of 0 - 24hrs. To change between °F or °C, simultaneously press and hold the Up and Down buttons for 3 seconds.

COOL operation

- Press the "MODE" button until the "COOL" indicator light comes on.
- Press the Up (+) or Down (-) buttons to select your desired room temperature. The temperature can be set within a range of 17°C-30°C/62°F-86°F.
- Press the "FAN SPEED" button to choose the fan speed.

DRY operation

- Press the "MODE" button until the "DRY" indicator light comes on.
- While in this mode, you cannot select a fan speed or adjust the temperature. The fan motor operates at LOW speed. Keep windows and doors closed for the best dehumidifying effect.

AUTO operation

- When you set the air conditioner to AUTO mode, it will automatically select cooling, heating (cooling only models excluded), or fan only operation depending on what temperature you have selected and the current room temperature.
- The air conditioner will automatically control the room temperature based on the desired temperature setpoint.
- Under AUTO mode, you cannot select the fan speed.

FAN operation

- Press the "MODE" button until the "FAN" indicator light comes on.
- Press the "FAN SPEED" button to choose the fan speed. The temperature cannot be adjusted.

TIMER: Auto Start/Stop Operation

- When the unit is on, pressing the Timer button will initiate the Auto stop program. The TIMER OFF indicator light illuminates. Press the Up or Down button to select the desired time. Press the TIMER button again

Fan

Controls the fan speed. Press to control the fan speed in four steps - LOW, MED, HIGH and AUTO. The selected fan speed light (except AUTO) will illuminate. When AUTO is selected, no lights will illuminate.

NOTICE

Applicable to models with the Constant Fan feature. In COOL or DRY mode, press the button for 3 seconds to turn on or off the constant fan function. When the function is turned on, the constant fan light will illuminate, identifying the fan continuous run for cooling. When the function is turned off, the constant fan light will go out, identifying the fan cycle run with compressor stop.

Sleep Button

Used to initiate the SLEEP operation.

Power Button

Power switch on/off.

LED display

Shows the set temperature in °C or °F and the Auto-timer settings. While on DRY and FAN modes, it shows the room temperature.

Shows Error codes and protection code:

- E1 - Room temperature sensor error.
- E2 - Evaporator temperature sensor error.
- E3 - Condenser temperature sensor error (select models).
- E4 - Display panel communication error.
- P1 - Bottom tray is full -- Connect the drain hose and drain the collected water away. If protection code repeats, contact a service center.

NOTICE

When one of the above malfunctions occurs, turn off the unit and check for any obstructions. Restart the Unit. If the malfunction persists, turn off the unit and unplug the power cord. Contact a service center.

within 5 seconds. The Auto start program is initiated and the TIMER ON indicator light illuminates. Press the up or down button to select the desired Auto start time.

- When the unit is off, press the Timer button to initiate the Auto start program. Pressing it again within five seconds will initiate the Auto stop program.

- Press or hold the Up or Down button to change the Auto time by 0.5 hour increments, up to 10 hours, then at 1 hour increments up to 24 hours. The control will count down the time remaining until start.

- The system will automatically revert back to display the previous temperature setting if there is no operation within 5 seconds.
- Turning the unit ON or OFF at any time or adjusting the timer setting to 0.0 will cancel the Auto Start/Stop timer program.
- Should a malfunction occur, the Auto Start/Stop timed program will be cancelled.

SLEEP operation

- Pressing this button will increase (during cooling operation) or decrease (during heating operation) 1°C/1°F after 30 minutes. The temperature will again increase (cooling) or decrease (heating) by another 1°C/1°F after an additional 30 minutes. This new temperature will be maintained for 7 hours before returning to the originally selected temperature. This ends the SLEEP mode and the unit will continue to operate as originally programmed.

NOTICE

The SLEEP operation feature is unavailable in FAN or DRY mode.

Other Features

COMFORTSENSE FEATURE

NOTICE

This feature can ONLY be activated from the remote control. The remote control serves as a remote thermostat allowing for the precise temperature control at its location which must be within 26 feet of the air conditioner.

To activate the ComfortSense feature, point the remote control towards the unit and press the ComfortSense button. The remote's display will show actual temperature at its location and must be within 26 feet of the air conditioner to work. The remote control will send this signal to the air conditioner. every 3 minutes until the ComfortSense button is pressed again. If the unit does not receive the ComfortSense signal during any 7 minutes interval, the unit will beep to indicate the ComfortSense mode has ended.

AUTO-RESTART




If the unit shuts off unexpectedly due to a power outage, it will restart with the previously set function automatically when the power resumes.

WAIT 3 MINUTES BEFORE RESUMING OPERATION

After the unit has stopped, it cannot be restarted until 3 minutes time has elapsed. This is to protect the unit. Operation will automatically resume after 3 minutes.

AIRFLOW DIRECTION ADJUSTMENT

For models with the Auto Swing feature, the louver can be adjusted automatically using the SWING button. When the Power is ON, the louver fully opens. Press the SWING button to initiate the Auto Swing feature. The louver will swing up and down automatically. Do not adjust the louver manually.

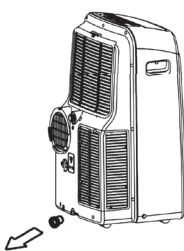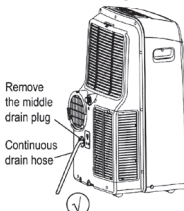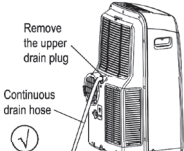

Water drainage

- During Dry mode, remove the upper drain plug from the back of the unit and install the drain connector (5/8" universal female adapter) with a 3/4" rose (not included). For models without the drain connector, attach the drain hose to the connector. Place the end of the hose in the drain area you're using.


- When the water level of the bottom tray reaches a predetermined level, the unit beeps 8 times. The digital display shows "Pl.". At this time the air conditioning/dehumidification process will immediately stop. However, the fan motor will continue to operate (this is normal). Carefully move the unit to a drain location, remove the bottom drain plug and let the water drain away. Reinstall the bottom drain plug and restart the machine until the "Pl." symbol disappears. If the error repeats, call a service center.

NOTICE


Be sure to reinstall the bottom drain plug firmly to prevent leakage before using the unit.

Installation Instructions

Choosing the Right Location

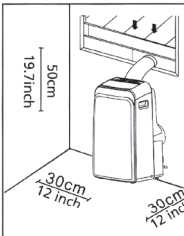

Recommend Installation

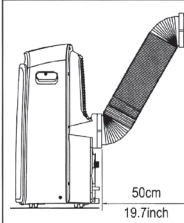

- Service, maintenance and repair of this unit must be performed by a certified technician.
- Product recycling must be done according to local regulations.

Tools Needed (Not Supplied)


- Phillips screwdriver
- Knife or scissors
- Tape measure or ruler
- Saw (optional, to shorten window adaptor for narrow windows).

Accessories


Your Window Installation Kit fits windows 19.4"-62.2"(49.3-158.1cm) and can be shortened for smaller windows.

Description	Description
Unit adaptor	Foam seal C (Non-adhesive)
Exhaust hose	Security bracket and 2 screws
Window slider adaptor	Remote controller (For remote control models only)
Bolt or Screw	
Window slider set	Accessory type and quantity may vary depending on the model.
Foam seal A (adhesive)	

Window Installation Kit

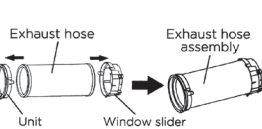

- 1. Preparing the exhaust hose assembly**
Press the exhaust hose into the window slider adaptor and the unit adaptor until the plastic clips click onto the hose.

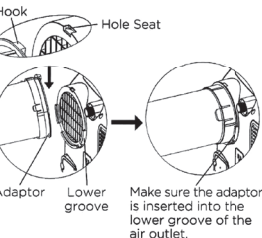

- 2. Install the exhaust hose assembly to the unit**
Insert the unit adapter side of the exhaust hose assembly into the groove of the air outlet on the back of the unit. Align the hook of the unit adapter with the seat on the air outlet and slide the assembly down until seated.




- 3. Preparing the Adjustable Window Slider**
 1. Depending on the size of your window, adjust the size of the window slider.
 2. If the length of the window requires two or three window sliders, use the bolt or screw to fasten the window sliders once they are adjusted to the proper length.

NOTICE

Once the Exhaust Hose assembly and Adjustable Window Slider are prepared, choose from one of the following two installation methods.

Type 1: Hung window installation

   
1. Cut the adhesive foam seal A and B strips to the proper lengths, and attach them to the window sash and frame as shown.




3. Cut the non-adhesive foam seal C strip to match the width of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room.



 4. If desired, install the security bracket with 2 screws as shown.



5. Insert the window slider adaptor into the hole of the window slider.

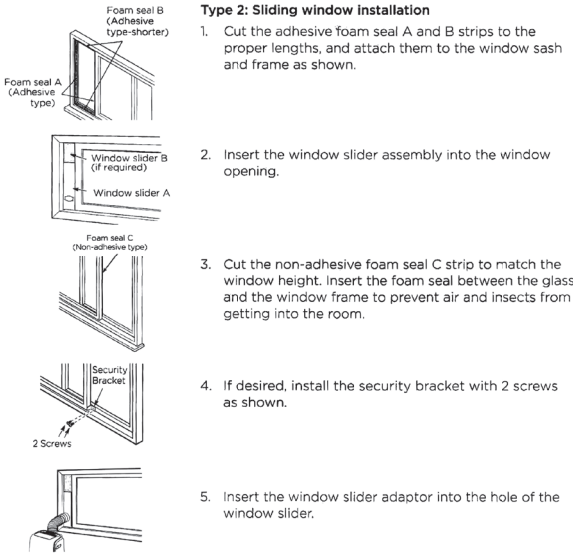

NOTICE

To ensure proper functioning, DO NOT overextend or bend the hose. Make sure there are no obstacles within 0.5m (1.6ft) of the air outlet of the exhaust hose for the exhaust system to properly function. All illustrations in this manual are for explanation purposes only. Your air conditioner may slightly differ."




Care and Cleaning

Safety Precautions

- Always unplug the unit before cleaning or servicing.
- DO NOT use flammable liquids or chemicals to clean the unit.
- DO NOT wash the unit under running water. Doing so causes electrical danger.
- DO NOT operate the machine if the power supply was damaged during cleaning. A damaged power cord must be replaced with a new cord from the manufacturer.

Clean the Air Filter

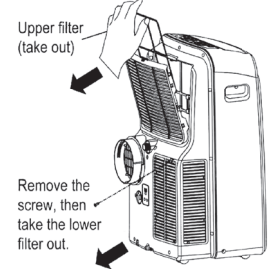

Maintenance Tips

- Be sure to clean the air filter every 2 weeks for optimal performance.
- The water collection tray should be drained immediately after P1 error occurs, and before storage to prevent mold.
- In households with animals, you will have to periodically wipe down the grill to prevent blocked airflow due to animal hair.

Clean the Unit

Clean the unit using a damp, lint-free cloth and mild detergent. Dry the unit with a dry, lint-free cloth.

Store the Unit When Not in Use

- Drain the unit's water collection tray according to the instructions in the following section.
- Run the unit on FAN mode for 12 hours in a warm room to dry it and prevent mold.
- Turn off the unit and unplug it.
- Clean the air filter according to the instructions in the previous section. Reinstall the clean, dry filter before storing.
- Remove the batteries from the remote control.

NOTICE

Be sure to store the unit in a cool, dark place. Exposure to direct sunlight or extreme heat can shorten the lifespan of the unit.

DO NOT REMOVE OR INSTALL THE LOWER FILTER BY YOURSELF. It should be befoermed by an authorized dealer or a licensed service provider.

PRINTED IN MEXICO Elbrd: J.E.
OBPN: 16120600A26779
SC: 10-17-2024_TAB MODEL: MAP08S1WGR_B
Add: MAP08S1WGR



804106482A



TROUBLESHOOTING TIPS

Before calling for service, review ths list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Problem	Solution
Unit does not turn on when pressing ON/OFF button	Displays P1 Error Code and means the water collection tray is full. Turn off the unit, drain the water from the water collection tray, and restart the unit. If room temperature is lower than the set temperature in COOL mode, reset the temperature.
Unit does not cool well	The air filter is blocked with dust or animal hair. Turn off the unit and clean the filter according to the instructions. Exhaust hose is not connected or is blocked. Turn off the unit, disconnect the hose, check for blockage, and reconnect the hose. Temperature setting is too high; decrease the set temperature. Make sure all windows and doors are closed. The room area could be too large; doublecheck the cooling area. Check the room for possible heat sources and remove them if possible.
The unit is noisy and/or vibrates too much.	The floor is not level. Place the unit on a flat, level surface. The air filter is blocked with dust or animal hair. Turn off the unit and clean the filter according to the instructions.
The unit makes a gurgling sound.	This sound is cause by the refrigerant flow inside the unit and is normal.
Unit will not connect to wireless or App does not work(some models).	For additional support and troubleshooting tips, visit the "Help" tab within the MSmartHome app.

REMOTE CONTROL AND APP INSTRUCTIONS

Handling the Remote Control

Location of the remote control
Use the remote controller within a distance of 26.2 ft (8 meters) from the air conditioner, pointing it towards the receiver. Reception is confirmed by a beep.

CAUTION

- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote control to the unit.
- Prevent any liquid from spilling onto the remote control. Do not expose the remote control to direct sunlight or heat.
- If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote control, either move these appliances or consult your local dealer.

NOTICE

- Button design is based on typica model and may vary slightly from the actual one you purchased.
- All the functions described are accomplished by the unit. If the unit is without a feature, the unit will not respond if the corresponding button on the remote is pressed.
- When there are significant differences between features or operation implied by the remote control illustration and the actual functions described in the USER'S MANUAL, the descriptions in the USER'S MANUAL shall prevail.

Remote Controller Specifications
Rated Voltage: 3.0V (Dry batteries R03/LR03x2)
Environment: 23°F -140°F (-5°-60°)

• Accessory type and quantity may vary depending on the model.

• The image shown here is for illustrative purposes only and may be subject to change.

• The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

(Batteries Not Included)

Function Buttons

TEMP DOWN Button

Press this button to decrease the indoor temperature setting.

TEMP UP Button

Press this button to increase the indoor temperature setting.

SPEED Button

Used to select the desired fan speed.

TIMER Button

Press this button to activate the "Auto Start" or "Auto Stop" program.

°C/°F Button

Press this button to change the temperature display between Celsius and Fahrenheit

SLEEP Button

Press this button to activate the Sleep mode. This function is available on COOL or AUTO mode only and will maintain the most comfortable temperature for you while saving energy. For more details, see "sleep operation"

LED DISPLAY Button

Turns the unit's LED display on/off

MODE Button

Press this button to select the desired operation mode.

SWING Button

Press this button to start and stop the horizontal louver movement. Hold down for 2 seconds to initiate vertical louver auto swing feature (some units) .

COMFORTSENSE Button

Press this button to active the ComfortSense mode, to optimize the temperature around you and ensure maximum comfort.

Remote Screen Indicators

Information are displayed when the remote controller is power up.

AUTO (Auto icon)

COOL (Cool icon)

DRY (Dry icon)

SETTEMP (Temperature display)

FAN (Fan speed icon)

HIGH (High fan speed)

MED (Medium fan speed)

LOW (Low fan speed)

Mode display
AUTO ▼ COOL ▼ DRY ▼ FAN ▼

Indicators:
- Appears when the remote is enabled and can send a signal to the unit. If you would like to turn the remote off without affecting the unit, point the remote away from the unit and press the ON/OFF button.
- To turn the remote on, point the remote away from the unit and press the ON/OFF button. The unit will not receive commands from the remote if this indicator is not illuminated.

Fan speed indication
► **HIGH** High speed
► **MED** Medium speed
► **LOW** Low speed
NO display Auto fan speed

How to Use the Buttons

NOTES

To cancel the **TIMER** setting, push the **TIMER** button and press or hold the **TEMP UP** (v) (▲) / **DOWN** (v) (▼) until 0 hour is displayed on the LCD window of the air conditioner.

TIMER OPERATION

Press the **TIMER** button to initiate the Auto-start and Auto-stop setting program of the unit.

To set the Auto-start/stop time.

- Press the **TIMER** button, when the **TIMER ON** indicator is displayed on the LED window of the air conditioner, it indicates the Auto Start setting program is initiated. When the **TIMER OFF** indicator is displayed on the LED window of the air conditioner, it indicates the Auto Stop setting program is initiated.
- Press or hold the **TEMP UP** (▲) / **DOWN** (▼) to change the Auto time. The control will count down the time remaining until start/stop.
- The selected time will register in 5 seconds and the air conditioner will automatically revert back to display the previous temperature setting.
- Turning the unit **ON** or **OFF** at any time will cancel the Auto Start/stop function.

COMBINED TIMER
(Setting both ON and OFF timers simultaneously)
AUTO STOP > AUTO START
(On > Stop > Start operation)
This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

Example:

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

- Press the **TIMER** button until the **TIMER OFF** indicator is displayed on the LED display of the air conditioner.
- Use the **TEMP UP** (▲) / **DOWN** (▼) button to display "2.0" on the LED display of the air conditioner.
- Press the **TIMER** button again to display the **TIMER OFF** on the LED display of the unit.
- Use the **TEMP UP** (▲) / **DOWN** (▼) button to display "10" on the LED display of the unit.
- Wait for 5 seconds until the previous display appears in LED window.

AUTO START > AUTO STOP
(Off > Start > Stop operation)

NOTES

- Button design is based on a typical model and may slightly vary from the actual one you purchased.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 - Changes or modifications not approved by the party responsible for compliance could void users authority to operate the equipment.

Battery Warning:

Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries

SPECIFICATION OF WIRELESS MODULE	
Model: US-SK109	Dimensions: 41 x 24 x 5 (mm)
Antenna Type: Printed PCB Antenna	Operation Temperature: 0°C - 45°C / 32°F - 113°F.
Frequency: 2400-2483.5MHz	Operation Humidity: 10% - 85%
MaximumTransmittedPower: <20dBm	Power Input: DC 5V/500 mA

PRECAUTIONS

- Supports operating systems: iOS 10+ or Android 5+.
- In the event of a OS update, there may be a delay between the update of the OS and a related software update during which your OS may or may not be supported until a new version is released. Your specific mobile phone or problems in your network may prevent the system from working and Midea will not be responsible for any problems that could be caused by incompatibility or network issues.
- This Smart AC only supports WPA-PSK/WPA2-PSK (recommended) encryption.
- To ensure proper scanning of the QR code, your smart phone must have at least a 5-megapixel camera.
- Due to unstable network connectivity, requests may time out. If this happens, rerun the network configuration.
- Due to unstable network connectivity, commands may time out. If this happens, the smartphone app and the actual product may display conflicting information. The information displayed on the actual product is always the most accurate available. Refresh the app to re-sync.

NOTICE

Midea will not be responsible for any problems that could be caused by incompatibility or network issues, your wireless router and mobile phone.

SYSTEM OVERVIEW

Devices required to use the Smart AC:

- Smart Phone with compatible iOS or Android system.
- Wireless Router
- Smart Air Conditioner

DOWNLOAD AND INSTALL THE APP


Scan to download app.
• You can also go to the Google Play or App Store and search for SmartHome.

NOTICE

All the images in this manual are for reference only, your product and app may look slightly different. The actual product and app instructions have to be considered.

CREATE YOUR ACCOUNT

- Make sure your smartphone is connected to your wireless router and your wireless router has a working 2.4 GHz internet connection.
- It is recommended to activate your account immediately to be able to recover your password by email.

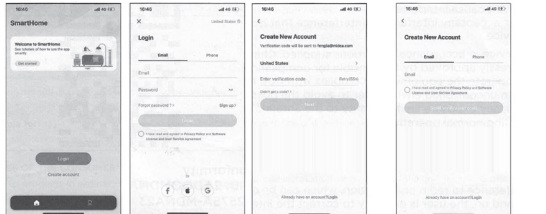

- Press Login.
- Select Sign Up.
- Enter your email address.
- Enter the verification code that was sent to your email address.

NOTICE

- Make sure your smartphone is able to connect to the wireless network which will be used.
- Make sure also that the device is not connecting to other networks in range.

ADDITIONAL APP AND SMART HOME FUNCTIONS

For additional instructions regarding the features of the app and Smart Home skill capabilities, scan the QR code below.



Declaration of conformity
CONTAINS FCC ID: 2ADG0MDNA23
CONTAINS IC: 12575A-MDNA23

This device complies with Part 15 of the FCC Rules and Industry Canada's license exempt RSSs.

Operation is subject to the following two conditions:
(1) This device may not cause interference;and
(2) This device must accept any interference,including interference that may cause undesired operation of the device.

Only operate the device in accordance with the instructions supplied. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

NOTE:
All the illustrations in the manual are for explanation purpose only. Your unit may be slightly different. The actual shape shall prevail.