



PROFESSIONAL XL
FOOD PROCESSOR WITH AUTO-IQ®
Recipe book is not included.

It's important to read this instruction book prior using your new product for the first time.

804106891

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

WARNING

 
To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- Read all instructions prior to using the appliance and its accessories.
- Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- Blades are sharp. Handle carefully.
- This product is provided with a Chopping Blade Assembly. **ALWAYS** exercise care when handling blade assembly. The blade assembly is sharp and is **NOT** locked in place in the container. The blade assembly is designed to be removable to facilitate cleaning and replacement if needed. **ONLY** grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assembly will result in a risk of laceration.
- Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact a service center.
- Extension cords should **NOT** be used with this appliance.
- To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- ALWAYS** use the appliance on a dry and level surface.
- DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- NEVER** place a blade assembly on the motor base without it first being attached to its corresponding container (bowl) and lid.
- Keep hands, hair, and clothing out of the container when loading and operating.
- During operation and handling of the appliance, avoid contact with moving parts.
- DO NOT** fill container past the 12-Cup line.
- DO NOT** operate the appliance with an empty container.
- DO NOT** microwave any containers or accessories provided with the appliance.
- NEVER** leave the appliance unattended while in use.
- DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- DO NOT** process dry ingredients with the Chopping Blade Assembly.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- DO NOT** perform grinding operations with the Chopping Blade Assembly.
- NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- Keep hands and utensils out of containers while processing to reduce the risk of severe personal injury or damage to the appliance. A scraper may be used **ONLY** when the processor is not running. When using the processor, always use food pusher to add food. **NEVER** add food by hand.
- DO NOT** attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
- If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- Upon completion of processing, ensure that the blade assembly is removed **BEFORE** emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- The maximum wattage rating for this appliance is based on the configuration of the food processor bowl.
- DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- DO NOT** attempt to sharpen blades.
- Turn off the appliance and unplug the motor base before cleaning.
- Never feed food by hand. Always use food pusher.
- To reduce the risk of injury from damage to the food processing bowl or separation of the lid, **DO NOT** load the bowl with ice cubes for crushing.
- Unit is intended to create a dough ball. It is **NOT** intended to continuously knead. After dough ball forms, additional kneading should be done by hand on a work surface. If the unit moves excessively on the work surface, remove the dough ball and knead by hand.

SAVE THESE INSTRUCTIONS

PARTS

- A Part Food Pusher for Feed Chute Lid
B Feed Chute Lid
C Cup Precision Processor® Bowl
D Motor Base (attached power cord not shown)
E Small Chopping Blade Assembly*
F Cup Nesting Workbowl*
G Disc Spindle
H Chopping Blade Assembly
I Dough Blade Assembly
J Adjustable Slicing Disc*
K Reversible Shredding Disc*
L Reversible Slicing/Shredding Disc*

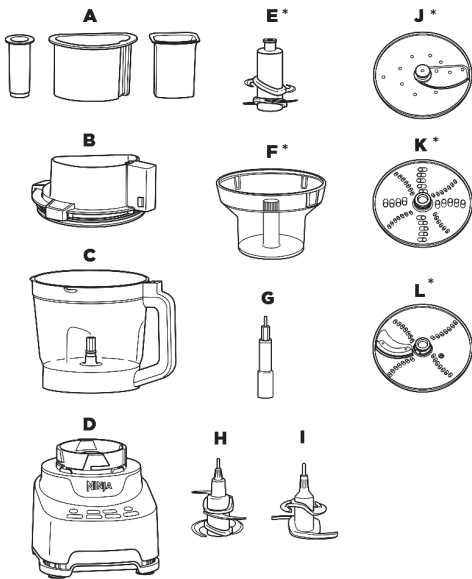

*Not included on all models

NOTE: Discs, blade assemblies, and accessories vary by model.

NOTE: CLEAN BEFORE USE

BEFORE FIRST USE

IMPORTANT: Review all warnings before proceeding

- Remove all packaging materials from the unit. Exercise care when unpacking blade and disc assemblies, as they are sharp.
 - Chopping blade assemblies are NOT locked in place in the bowl or nesting bowl. Handle each chopping blade assembly by grasping the top of the shaft.
 - Wash bowl, lid, discs, and blade assemblies in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the discs and blades are sharp.
 - Thoroughly rinse and air-dry all parts.
- NOTE:** All attachments are BPA free and dishwasher safe. Ensure all parts are separated from each other before placing in the dishwasher. Exercise care when handling blade assemblies.

 
FEATURES

Use the Power button to turn the unit on or off.

AUTO-IQ® PROGRAMS

Intelligent preset programs combine unique blending and pausing patterns that do the work for you. Once an Auto-iQ program is selected, it will start immediately and automatically stop when processing is complete. To stop processing before the end of a program, press the currently active button again.

NOTE: Program run times vary from a few seconds to just over a minute.

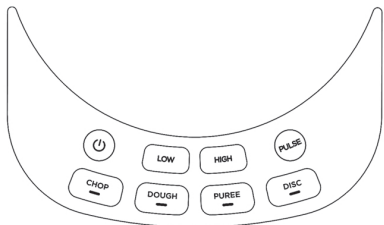

CHOP

Timed pulses and pauses give you consistent chopping results. Run program once for a large chop, twice for a small chop, and three times for a mince. Use with chopping blade assembly.

DOUGH

Ideal for creating delicious dough, from pie to pizza to cookie doughs. Use with dough blade assembly.

NOTE: Use PULSE to add mix-ins, such as chocolate chips or raisins, after dough program has completed.

PUREE

Create anything from silky-smooth sauces to the perfect hummus. Use with chopping blade assembly or nesting workbowl with small chopping blade assembly.

DISC

Slice and shred a variety of ingredients, such as vegetables, cheese, and potatoes. Use with adjustable slicing, reversible slicing/shredding, or reversible shredding disc.

MANUAL PROGRAMS

LOW and HIGH: When selected, each of these speeds runs continuously for 60 seconds. They do not work in conjunction with any Auto-iQ programs.

PULSE: Offers greater control of pulsing and processing. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

IMPORTANT:

- DO NOT** run the unit on HIGH if using the dough blade or disc assemblies.
- The unit is **NOT** intended to crush ice. Refer to the warnings in the Safety Instructions.

GET TO KNOW THE ATTACHMENTS

BLADE ASSEMBLIES



CHOPPING BLADE ASSEMBLY



DOUGH BLADE ASSEMBLY

Use the Chopping Blade Assembly and Dough Blade Assembly in the 12-Cup Precision Processor Bowl.

3-PART FOOD PUSHER



To accommodate different-sized ingredients, the pusher can be split into 3 different sizes (small, medium, large). Use the small pusher for ingredients like carrots, the medium pusher for ingredients like cucumbers and zucchini, and the large pusher for ingredients like potatoes.

 
NOTES:

- Large food pusher must be inserted in the feed chute for the unit to run.
- DO NOT** exceed the **CHUTE MAX FILL** line on the large feed chute. Unit will not run if ingredients exceed this line.

DISC ASSEMBLIES

(disc assemblies vary by model)

IMPORTANT: Ensure adjustable slicing disc is **NOT** on the **S** (storage) setting before installing it. Return disc to **S** position after use.



4.5-CUP NESTING WORKBOWL
(not included with all models)

NOTE: Nesting workbowl also uses the included disc spindle.



4.5-CUP NESTING WORKBOWL

The 4.5-Cup Nesting Workbowl is perfect for smaller quantities of output. Place inside the Precision Processor Bowl and you will be ready to make all the delicious recipes in smaller quantities.



SMALL CHOPPING
BLADE ASSEMBLY

USING THE BLADE ASSEMBLIES

IMPORTANT:

- As a safety feature, if the blade assembly is not fully seated, you will not be able to install and lock the lid in position.
- If the control panel is flashing, this means the lid, bowl, or food pushers are not locked in place correctly. Review steps to ensure you are installing all components correctly.

NOTE: DO NOT add ingredients before completing installation of the blade assembly.

- Place motor base on a clean, dry, level surface such as a countertop or table, then plug in the unit.
- Lower the Precision Processor® Bowl onto the motor base and rotate clockwise until it clicks into place.
- Exercising care, grasp the blade assembly by the top of the shaft and place it onto the drive gear inside the bowl. Note that the blade assembly will fit loosely on the drive gear.
- Add ingredients to the bowl, making sure not to exceed the 12-Cup line.
- Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place. Press the Power button to turn unit on.
- If using the Auto-iQ® Program **CHOP**, **PUREE** or **DOUGH**, the preset feature will automatically stop at the end of the program. To stop the unit at any time, press the currently active program again.
- If using a manual program, once the ingredients have reached your desired consistency, press the active button again, or wait for the unit to come to a complete stop after 60 seconds.
- When finished, press the button on the lid near the handle to unlock, then turn counterclockwise and lift up from the bowl. Always remove the blade assembly before emptying ingredients from the workbowl by carefully grasping it by the top of the shaft and lifting it out of the bowl.
- To remove the bowl from the motor base, turn the bowl counterclockwise and then lift it up.
- Press the Power button to turn the unit off, then unplug the unit. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE DISC ASSEMBLIES (discs vary by model)

IMPORTANT:

- Use only the DISC program or LOW setting when using the disc assemblies.
- If the control panel is flashing, this means the lid, bowl, or food pushers are not locked in place correctly. Review steps to ensure you are installing all components correctly.

NOTES:

- Ensure the desired side is facing up on the reversible slicing/shredding disc or reversible shredding disc before use.
- Ensure the desired thickness is set on the adjustable slicing disc before use.
- The 3-part food pusher separates into a small, medium and large food pusher to guide ingredients through the different size feed chute openings. Use the small feed chute opening for ingredients like carrots, the medium feed chute for ingredients like cucumbers and zucchini, and the large feed chute for ingredients like potatoes.
- The large food pusher must be inserted in the feed chute for the unit to run.

- Place motor base on a clean, dry, level surface such as a countertop or table, then plug in the unit.
- Lower the Precision Processor® Bowl onto the motor base and rotate clockwise until it clicks into place.
- 3a. REVERSIBLE SLICING/SHREDDING** Use the plastic grip to place disc over spindle with the desired output facing up. Use the side labeled SLICER for slicing and the side labeled SHREDDER for shredding.
- 3b. ADJUSTABLE SLICING** Use dial on disc to select the desired thickness (0.3–8mm). Then use plastic grip to carefully place disc over disc spindle. Ensure disc is NOT on the S (storage) setting before installing it. Return disc to S position after use.
- 3c. REVERSIBLE SHREDDING** Use the plastic grip to place the disc over the disc spindle with the desired shredding size (either COARSE or FINE) facing up.
- Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in. Based on the ingredient, use the smallest possible feed chute opening for best slicing and shredding results. Press the Power button to turn unit on.
- Prior to slicing or shredding, prep ingredients to fit the feed chute opening. Cut both ends off ingredients to create flat surfaces. Trim tapered ingredients like carrots to make them more symmetrical. Ensure cheese is well chilled. **DO NOT** slice or shred frozen cheese. Keep ingredients as steady as possible when pushing through the feed chute to minimize waste.
- If using the small or medium feed chute opening, select **DISC** or **LOW**. The disc will begin spinning. Add ingredients through the feed chute on the lid.
- If using the large feed chute opening, place ingredients up to, but not exceeding, the **CHUTE MAX FILL** line. Insert the pusher into the feed chute, then select **DISC** or **LOW**. The disc will begin spinning.
- If using the Auto-iQ® program, **DISC**, the disc will automatically stop spinning at the end of the program. If using the manual program **LOW**, press the button again, or wait for the unit to come to a complete stop after 60 seconds.
- To remove the lid, press the button on the feed chute lid near the handle to unlock, then turn the lid counterclockwise. Lift the lid from the bowl.
- Remove the disc assembly by grasping the plastic grip, then carefully lifting the disc out of the bowl. Then, grasp the spindle by the top of the shaft and lift it out of the bowl.
- To remove the bowl from the motor base, turn the bowl counterclockwise and then lift it up.
- Press the Power button to turn the unit off, then unplug the unit. Refer to the Care & Maintenance section for cleaning and storage instructions.

In order to ensure the highest possible standard for refurb-bished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing pro-cess and so; you may notice some condensation in the water reservoir. It is recom-mended to rinse the water reservoir with fresh water prior to its first use.

USING THE NESTING WORKBOWL

 
(not included with all models)

IMPORTANT: If the control panel is flashing, this means the lid, bowl, or food pushers are not locked in place correctly. Review steps to ensure you are installing all components correctly.

NOTES:

- Do not make dough in the workbowl.
- Large food pusher must be inserted in the feed chute for the unit to run.
- Use only the PUREE program or the manual programs when using the nesting workbowl.

- Place Precision Processor® Bowl on base and turn clockwise to lock in place.
- Place the nesting workbowl in the processor bowl with the arrow on the workbowl aligned with the arrow on the processor bowl handle.
- Place the disc spindle through the opening in the middle and sit it on the drive gear. Then, place the small chopping blade over the spindle inside the workbowl.

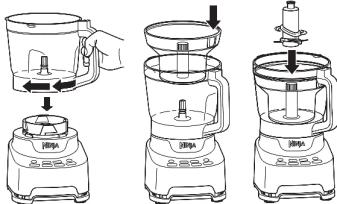

- Place ingredients in the workbowl, then place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place. Press the Power button to turn unit on.
- If using the Auto-iQ® Program **PUREE**, the preset feature will automatically stop at the end of the program. To stop the unit at any time, press **PUREE**.
- If using a manual program, once the ingredients have reached your desired consistency, press the active button again, or wait for the unit to come to a complete stop after 60 seconds.
- When finished, press the button on the lid near the handle to unlock, then turn counterclockwise and lift up from the bowl. Always remove the small chopping blade assembly before emptying ingredients from the workbowl by carefully grasping it by the top of the shaft and lifting it out of the bowl. Then, remove the disc spindle.
- Remove workbowl by grasping the textured center and lifting up. Remove bowl from base by turning it counterclockwise, then lifting it up.
- Press the Power button to turn the unit off, then unplug the unit. Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING

Separate all parts. Wash all containers in warm, soapy water with a soft cloth.

• Hand-Washing

Wash processor bowl, nesting workbowl, lid, spindle, discs, and blade assemblies in warm, soapy water. When washing the blade and disc assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades.

Handle blade and disc assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

• Dishwasher

All attachments are dishwasher safe. Ensure the blade or disc assemblies are is removed from the bowl before placing in the dishwasher. Exercise care when handling blade or disc assemblies.

• Motor Base

Turn off the unit and unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads, or brushes to clean the base.

STORING

Wrap the power cord around the cord wrap on the back of the motor base. Store the unit upright and store all blade assemblies inside or attached to their respective containers with their lids locked in place.

DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR THERMOSTAT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the unit. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- Unplug the unit from the electrical outlet.
- Allow the unit to cool for approximately 15 minutes.
- Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

If your unit needs servicing, please contact a sevice center.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Program will not run and/or LEDs are flashing.

- Make sure the unit is plugged in, fully assembled, and powered on.
- The LEDs on the motor base will flash if the unit is powered on but the feed chute lid, processor bowl, and largest food pusher are not properly installed. Install bowl by lowering it onto the motor base and rotating it clockwise until it clicks into place. Install the lid onto the bowl by turning it clockwise to click into place. Insert the food pushers into the lid by pressing down.
- Largest feed chute pusher must be installed for unit to run.

Motor base moves around on countertop.

- Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces.
- Suction feet will not stick to some surfaces such as wood, tile, and non-polished finishes.
- DO NOT** attempt to use unit when the motor base is stuck to a surface that is not secure (cutting board, platter, plates, etc.).

Unit is difficult to remove from counter for storage.

- Place your hands underneath both sides of the motor base and gently pull the unit up and toward you.

Food is not evenly chopped.

- For best results when chopping, cut ingredients in a uniform size and don't overfill the bowl.
- For smaller quantities, use 4.5-Cup Nesting Workbowl (not included on all models).

Ingredients are unevenly sliced.

- For best results when using the reversible slicing/shredding disc (not included on all models) or adjustable slicing disc (not included on all models), trim ingredients to a uniform size.
- For the most even results, place ingredients in the smallest possible of the 3 feed chutes.

Cannot install lid on bowl.

- If any components are misaligned, the lid will not install properly. Make sure the disc spindle and discs or blade assembly are fully seated on the drive gear inside the bowl after the bowl is fully installed on the motor base.

How many settings are there on the adjustable slicing disc (not available with all models)?

- The adjustable slicing disc has 8 main settings with 1/3-mm microsettings between each (for a total of 24 individual settings) ranging from 0.3mm to 8mm.

How do I use different food pusher sizes?

- Using the narrowest feed chute possible allows ingredients to be guided down towards the discs for the most even output.
- To use the largest feed chute, assemble the lid and place ingredients into the chute. Install the largest pusher with the medium and small pusher nested inside to push ingredients through. Large pusher must be installed to the chute max fill line before selecting a program.
- To use the medium or small feed chute, install the large pusher into the lid and use smaller pushers to guide food through the center of the large or medium pusher.

The Dough program is flashing.

- As a safety feature, the unit prevents running the dough program more than 3 consecutive times.
- The unit is not intended to continuously knead. Remove the dough from the bowl and knead the dough by hand. Unplug the unit and let cool for 15 minutes.

TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz

804106891



PRINTED IN MEXICO / SC.21-10-2022
OBPN:NF700Series_IB_MP_Mv11_220210
SHNMDL:NF700_B / TAB/ Elbrd:J.E.