



Owner's Manual



814100062

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. For bag sealers: To reduce the risk of burns, do not touch the sealing strip while using the appliance.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Contact a Service Center.
8. The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.
9. Do not use in wet locations or leave outdoors. Do not use for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Place cord where it cannot be tripped over, pulled on, cause user to become entangled with, especially by children, or cause the appliance to be overturned.
12. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or heated oven. Always use appliance on a dry, stable, level surface.
13. Extreme caution must be used when sealing bags or moving an appliance containing hot liquids.
14. Always attach plug to appliance first, then plug cord into outlet (for appliances with detachable cords).
15. Use appliance only for its intended use.
16. Vacuum packaging is not a substitute for the heat process of canning. Perishables still need to be refrigerated or frozen.



SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

 


POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord (shorter than 4 ½ feet or 1.4m) is provided on some models to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. Models provided with cords longer than 4 ½ feet (1.4m), or if a long detachable power-supply cord or extension cord is used on short-cord models:

- a. The marked electrical rating of the detachable power-supply cord or extension cord should be no less than the marked electrical rating of the product;
- b. When the product is of the grounded type, the extension cord shall be a grounding type 3-wire cord.
- c. The longer cord shall be arranged so that it does not drape over the counter-top or tabletop where it is capable of being tripped over, snagged, or pulled on unintentionally, especially by children.

Product Features

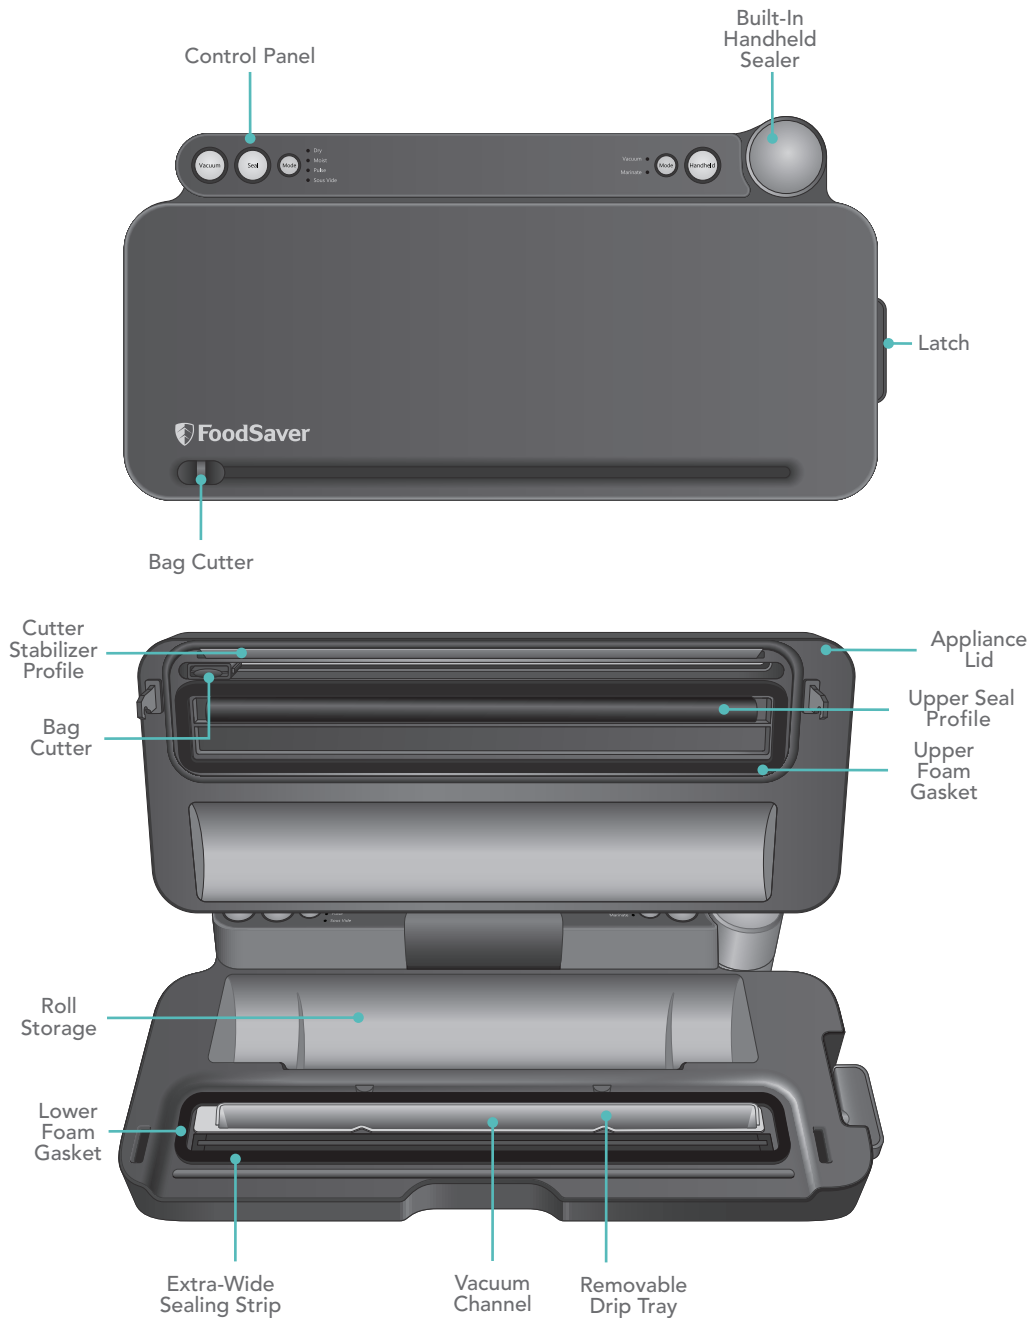

*The images shown here are for illustrative purposes only and may be subject to change.



The user-friendly, intuitive control panel makes it easy for you to get the most out of your FoodSaver® System:

Heat Seal Controls

1. Vacuum Button

Press to vacuum seal food airtight. Appliance shuts off automatically.

2. Seal Button

This button has three uses:

- i. Press button to create a seal when making bags using a FoodSaver® Roll.
- ii. Press to immediately stop vacuum process and begin sealing bag.
- iii. Press to create a seal on film bags (such as a potato chip and cereal bags) to keep food sealed airtight.

3. Mode Button

Press Mode Button to select custom setting. Indicator light will illuminate next to the custom setting that is initiated.

3a. Dry

For optimal vacuuming and sealing of dry foods. This is the default setting.

3b. Moist

For optimal vacuuming and sealing of moist or juicy foods.

3c. Pulse (*available on select models*)

Press and hold to manually control the vacuum function. Press Seal Button when ready to seal bag.

3d. Sous Vide (*available on select models*)

For optimal vacuuming and sealing of bags to use in Sous Vide cooking.

Handheld Sealer Controls

4. Handheld Button

Press for use with FoodSaver® accessories using Built-In Handheld Sealer.

5. Mode Button (*available on select models*)

Press Mode Button to select setting. Indicator light will illuminate next to the custom setting that is initiated.

5a. Vacuum

For use with FoodSaver® Zipper Bags, Containers, Bottle Stoppers, and other accessories using built-in Handheld Sealer.

5b. Marinate (*available on select models*)

For use with FoodSaver® Marinator Containers using built-in Handheld Sealer. Vacuum pulse sequence takes 12 minutes or less. It allows for optimum flavor infusion in less time. Appliance will vacuum and release three times.

6. Latch

Operate - Adjust Down to put unit in Operate Mode. This turns unit on for vacuuming and sealing.

Store - Adjust Center to Store

 
 
 
Open - Adjust Up to Open

How to


1 Make a FoodSaver® Bag

1. Turn Latch to Open position **A** and open lid.
2. Place roll inside unit's internal storage space as indicated. Pull enough bag material to edge until it is on top of the sealing strip to make the first seal **B** and close lid.
3. Turn Latch to Operate position **C**.
4. Press Seal Button **D** to seal open end of bag. Wait until Seal Indicator Light turns off.


CAUTION: To reduce risk of burns, do not touch sealing strip while using appliance.

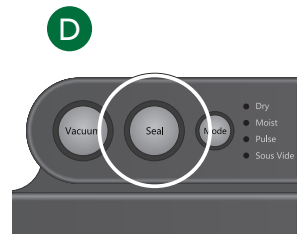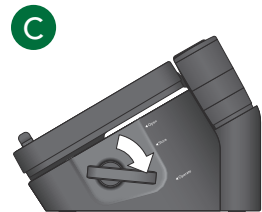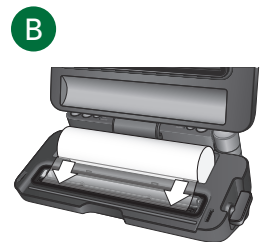

*The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

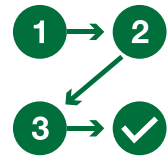 

 5. Turn Latch to Open position **E**, open lid and pull enough bag material out to desired length for whatever you intend to vacuum seal **F** and close lid.
6. Turn Latch to Operate position **G**.
7. Press Seal Button **H** to make seal for next bag. While sealing, you can slide bag cutter across **I** to remove bag.

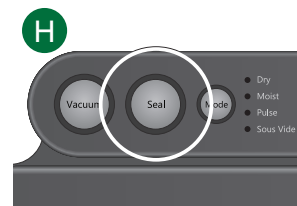

*The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

How to

② Vacuum Seal a FoodSaver® Bag

1. Turn Latch to Open position **A** and open lid.
2. Place item(s) in bag, allowing at least 3 inches (7.62 cm) of space between contents and open end of bag. Place open end of bag into Vacuum Channel (Drip Tray) **B** and close lid.
3. Turn Latch to Operate position **C**.
4. Press Vacuum Button **D** to begin vacuum and sealing process of open end of bag. Motor will continue to run until bag is fully vacuumed, then will automatically seal.
5. When Seal Indicator Light turns off, turn Latch to Open position **A** and open lid. Remove bag. Refrigerate, freeze or store as needed. (See FoodSaver® Guidelines, pg. 12 for safe food storage tips.)

CAUTION: To reduce risk of burns, do not touch sealing strip while using appliance.

IMPORTANT TIPS:

- Let appliance cool down for 20 seconds after each use. Always store appliance with Latch in center Store position.
- To minimize bag waste, do not insert too much bag material into Removable Drip Tray. Place bag just over edge of Removable Drip Tray.

A



 
B




C



D

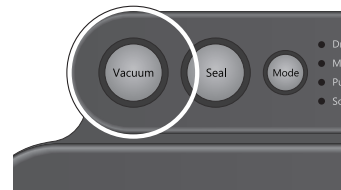

*The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

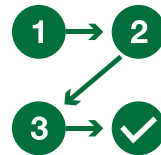 

3 Vacuum Seal with FoodSaver® Accessories

Your new FoodSaver® Appliance includes a Built-In Handheld Sealer for accessories. *Accessories sold per separately*

For Zipper Bags & Containers:

1. Turn Latch to Operate position and pull Handheld Sealer **A** from appliance.
2. Place Built-in Handheld Sealer on zipper bag **B** or container **C** valve.
3. Press Press Mode button (*on select models*) until the Indicator light next to Vacuum is illuminated. Then press Handheld button to vacuum **D**.

 
 
 
 
For Canisters, Jar Sealers, & Bottle Stoppers

1. Turn Latch to Operate position and pull Built-in Handheld Sealer **A** from appliance.
2. Disassemble Handheld Sealer to remove clear bottom portion from top handle. Insert tip into port on accessory **E**.
3. Press Mode button (*on select models*) until the Indicator light next to Vacuum is illuminated. Then press Handheld button to vacuum **D**.

NOTE: FoodSaver® Jar Sealers are for use with Ball® and Kerr® brand Mason jars only.

For Quick Marinators:

1. Turn Latch to Operate position and pull Built-in Handheld Sealer **A** from appliance.
2. Disassemble Handheld Sealer to remove clear bottom portion from top handle. Insert tip into port on Quick Marinator **E**.
3. Press Mode button (*on select models*) until the Indicator light next to Marinate is illuminated. Then press Handheld button to marinate **F**.

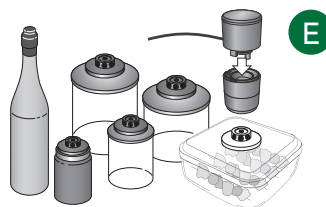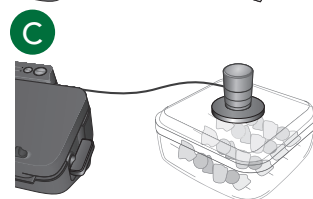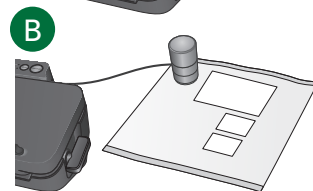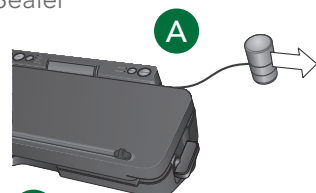

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.

Care & Cleaning



of your Vacuum Sealer

To Clean Appliance:

CAUTION: Remove Power Cord from electrical outlet. Do not immerse in liquid.

Check Gaskets and around Drip Tray to make sure they are free from food materials. Wipe off Gasket with warm soapy cloth if needed **A**. Upper and Lower Gaskets may be removed for cleaning. Clean with warm, soapy water and allow gaskets to dry before reinserting in machine.

 
The Removable Drip Tray makes cleanup easy when small amounts of liquids are pulled into Vacuum Channel during vacuum process.

Empty Drip Tray after each use. Wash in warm soapy water or place in top rack of dishwasher. Check for food residues in Drip Tray Slot. Clean if needed. Dry thoroughly before reinserting into appliance.


To Clean Built-in Handheld Sealer Reservoir:

Empty Reservoir after each use. To remove Reservoir from Handheld Sealer, holding top portion (black upper piece) firmly, pull Lower Reservoir down and off **B**. Wash in warm soapy water. Air dry before replacing.

NOTE: Always clean after each use when fluid is visible.

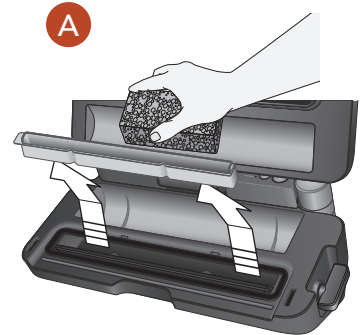

Lift Drip Tray out

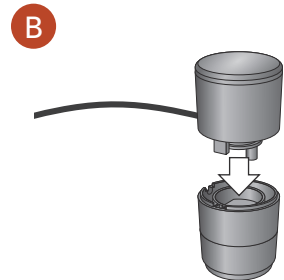 

Pull Reservoir off

Storage Guide



of your Vacuum Sealer

To Store Appliance:

Clean unit thoroughly as detailed in "Care & Cleaning" section.

After unit has been cleaned and allowed to fully dry, close lid and push Latch into Store (middle) position **A**. This setting will keep lid closed but prevents any undue pressure from being applied to internal sealing Gaskets of unit.

Always leave Latch in Store position when not in use. Never store Lid in Operate position as Gaskets may become compressed and unit will not vacuum bag.

A



Push Latch into Store position to store.

Guidelines

Vacuum Sealing and Food Safety

*Please read this guide carefully before operating your unit and retain for future reference.t

The vacuum sealing process extends the life of foods by removing most of the air from the sealed container, thereby reducing oxidation, which affects nutritional value, flavor and overall quality. Removing air can also inhibit growth of microorganisms, which can cause problems under certain conditions:

Mold – Easily identified by its fuzzy characteristic. Mold cannot grow in a low oxygen environment, therefore vacuum sealing can slow the growth of mold.

Yeast – Results in fermentation, which can be identified by smell and taste. Yeast needs water, sugar and a moderate temperature to grow. It can also survive with or without air. Slowing the growth of yeast requires refrigeration, while freezing stops it completely.

Bacteria – Results in an unpleasant odor, discoloration and/or soft or slimy texture. Under the right conditions, anaerobic bacteria such as Clostridium Botulinum (the organism that causes Botulism) can grow without air and sometimes cannot be detected by smell or taste. Although it is extremely rare, it can be very dangerous.

To preserve foods safely, it is critical that you maintain low temperatures. You can significantly reduce the growth of microorganisms at temperatures of 40°F (4°C) or below. Freezing at 0°F (-17°C) does not kill microorganisms, but stops them from growing. For long-term storage, always freeze perishable foods that have been vacuum sealed, and keep refrigerated after thawing.

It is important to note that vacuum sealing is NOT a substitute for canning and it cannot reverse the deterioration of foods. It can only slow down the changes in quality. It is difficult to predict how long foods will retain their top-quality flavor, appearance or texture because it depends on age and condition of the food on the day it was vacuum sealed.

IMPORTANT:

Vacuum sealing is NOT a substitute for refrigeration or freezing.

Any perishable foods that require refrigeration must still be refrigerated or frozen after vacuum sealing.



Food Preparation & Reheating Tips



Thawing and Reheating Vacuum-Sealed Foods

Always thaw foods in either refrigerator or microwave — do not thaw perishable foods at room temperature.

To reheat foods in a microwave in a FoodSaver® Bag, always cut corner of the bag before placing it on a microwave-safe dish. However, to avoid hot spots, do not reheat bone-in meat or greasy foods in microwave within a FoodSaver® Bag. You can also reheat foods in FoodSaver® Bags by placing them in water at a low simmer below 170°F (75°C).



Preparation Guidelines for Meat and Fish:



For best results, pre-freeze meat and fish for 1-2 hours before vacuum sealing in a FoodSaver® Bag. This helps retain the juice and shape, and guarantees a better seal.



If it's not possible to pre-freeze, place a folded paper towel between meat or fish and top of bag, but below seal area. Leave paper towel in bag to absorb excess moisture and juices during vacuum sealing process.

NOTE: Beef may appear darker after vacuum sealing due to the removal of oxygen. This is not an indication of spoilage.



Preparation Guidelines for Hard Cheeses:

To keep cheese fresh, vacuum seal it after each use. Make your FoodSaver® Bag extra long, allowing one inch (2.54 cm) of bag material for each time you plan to open and reseal in addition to the three inches (7.62 cm) room you normally leave between contents and seal. Simply cut sealed edge and remove cheese. When you're ready to reseal the cheese, just drop it in bag and reseal.

IMPORTANT:

Due to the risk of anaerobic bacteria, Soft cheeses should never be vacuum sealed.

Guidelines

Food Preparation & Reheating Tips



Preparation Guidelines for Vegetables:

Vegetables need to be blanched before vacuum sealing. This process stops the enzyme action that could lead to loss of flavor, color and texture.

To blanch vegetables, place them in boiling water or in the microwave until they are cooked, but still crisp. Blanching times range from 1 to 2 minutes for leafy greens and peas; 3 to 4 minutes for snap peas, sliced zucchini or broccoli; 5 minutes for carrots; and 7 to 11 minutes for corn on the cob. After blanching, immerse vegetables in cold water to stop the cooking process. Finally, dry vegetables on a towel before vacuum sealing.

NOTE: All vegetables (including broccoli, brussels sprouts, cabbage, cauliflower, kale, turnips) naturally emit gases during storage. Therefore, after blanching, they must be stored in freezer only.

When freezing vegetables, it is best to pre-freeze them for 1-2 hours or until solidly frozen. To freeze vegetables in individual servings, first place on a baking sheet and spread them out so they are not touching. This prevents them from freezing together in a block. Once they are frozen, remove from baking sheet and vacuum seal vegetables in a FoodSaver® Bag. After they have been vacuum sealed, return them to the freezer.

IMPORTANT:

Due to the risk of anaerobic bacteria, Fresh mushrooms, onions and garlic should never be vacuum sealed.



Preparation Guidelines for Leafy Vegetables:

For best results, use a canister to store leafy vegetables. First wash the vegetables, and then dry with a towel or salad spinner. After they are dried, put them in a canister and vacuum seal as normal. Store in refrigerator.



Food Preparation & Reheating Tips



Preparation Guidelines for Fruits:

When freezing soft fruits or berries, it is best to pre-freeze them for 1-2 hours or until solidly frozen. To freeze fruit in individual servings, first place on a baking sheet and spread them out so they are not touching. This prevents them from freezing together in a block. Once they are frozen, remove from baking sheet and vacuum seal fruit in a FoodSaver® Bag. After they have been vacuum sealed, return them to the freezer.

You can vacuum seal portions for baking or in your favorite combinations for easy fruit salad all year round. If storing in the refrigerator, we recommend using a FoodSaver® Canister.



Preparation Guidelines for Baked Goods:

To vacuum seal soft or airy baked goods, we recommend using a FoodSaver® Canister so they will hold their shape. If using a bag, pre-freeze for 1-2 hours or until solidly frozen. To save time, make cookie dough, pie shells, whole pies, or mix dry ingredients in advance and vacuum seal for later use.



Preparation Guidelines for Coffee and Powdery Foods:

To prevent food particles from being drawn into vacuum pump, place a coffee filter or paper towel at top of bag or canister before vacuum sealing. You can also place the food in its original bag inside a FoodSaver® Bag, or use a FoodSaver® Universal Lid with the original container to vacuum seal.

Guidelines

Food Preparation & Reheating Tips



Preparation Guidelines for Liquids:

Before you vacuum seal liquids such as soup stock, pre-freeze in a casserole dish, loaf pan or ice cube tray until solid. Remove frozen liquid from pan and vacuum seal in a FoodSaver® Bag. You can stack these “frozen bricks” in your freezer. When you’re ready to use, just cut corner of bag and place in a dish in microwave or drop into water at a low simmer, below 170°F (75°C).

To vacuum seal non-carbonated bottled liquids, you can use a FoodSaver® Bottle Stopper with the original container. Remember to leave at least one inch (2.54 cm) of room between contents and bottom of Bottle Stopper. You can reseal bottles after each use.



Preparation Guidelines for Make-ahead Meals, Leftovers and Sandwiches:

Efficiently store your make-ahead meals, leftovers and sandwiches in the stackable, lightweight FoodSaver® containers. They are microwaveable, top rack dishwasher safe and come with a custom adaptor. The lightweight containers will be ready to head off to the office, to school or the great outdoors whenever you are!



Preparation Guidelines for Snack Foods:

Your snack foods will maintain their freshness longer when you vacuum seal them. For best results, use a FoodSaver® Canister for crushable items like crackers.



Vacuum Sealing Non-Food Items

The FoodSaver® Vacuum Sealing System also protects non-food items from oxidation, corrosion and moisture. Simply follow directions to vacuum seal items using FoodSaver® Bags, Canisters and Accessories.



Silverware

To vacuum seal silver, wrap fork tines in soft cushioning material, such as a paper towel, to avoid puncturing bag, and seal as normal. Your silver will be clean, fresh and untarnished right when you need it for your next dinner gathering.



Camping

Your FoodSaver® Bags are ideal for outdoor excursions. For camping and hiking, keep your matches, maps and food dry and compact.



Water

To have fresh water for drinking, simply fill a FoodSaver® Bag with ice, seal it, and when needed, let the ice pack melt. You can trim the corner off the bag to make a spout for drinking or pouring.



Boating

If you're going sailing or boating, you can vacuum seal your food, extra batteries, memory cards, cash, identification cards, boating license and a dry change of clothes. Just remember to bring scissors or a knife to open the bags when you need them!



Emergency

To keep emergency kits safe and dry, vacuum seal flares, batteries, flashlights, matches, candles, first aid kits, extra food and other necessities. Your emergency items will stay dry and organized in your home, car, boat or RV.

Troubleshooting

Problem

Solution

Seal LED flashing	• Unit is overheated. Always allow 20 seconds between seals. Under heavy usage, appliance will shut off automatically and Seal Light will flash. Wait for 20 min. for unit to cool off. • Always wait 20 seconds between seals. • Latch has been left in Operate position: Gaskets may be compressed. Turn Latch to Open or Store position and allow 10 to 20 minutes for Gaskets to expand. • Vacuum pump running more than 120 seconds. Under heavy usage, appliance will shut off automatically and Seal Light will flash. See next section Vacuum Pump is running, but bag is not evacuating. • Latch was left in On position for 5 minutes and not being used reminding user to turn Latch to Open or Store position.
Vacuum Pump is running, but bag is not evacuating	• If making a bag from a roll, make sure one end of bag is sealed. See How to Make a Bag from a FoodSaver® Vacuum Sealing Roll. • Adjust the bag and try again. Make sure the open end of the bag is down inside the Drip Tray. • Check for wrinkles in bag along Sealing Strip. To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into Drip Tray. • Open unit and make sure Gaskets are inserted properly and there are no foreign objects, dirt or debris on the Upper or Lower Gasket. • Latch has been left in Operate position: Gaskets may be compressed. Turn Latch to Open or Store position and allow 10 to 20 minutes for Gaskets to expand. • Make sure the lid is latched down all the way. If the Latch does not catch the lid and bring it down, there will be a leak between the Gaskets.
Gasket is loose or has a tear	• Take out the gasket, clean it and re-insert the Gasket into the Gasket Channel. • If Gasket has minor damage remove, flip over and reinstall.
Bag is not sealing properly	• Too much liquid in bag, freeze before vacuuming. • Check for food debris around seal area. If present, take out the gasket, clean it and re-insert the Gasket into the Vacuum Channel. • Bag has wrinkles: To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into Gasket Channel.



Problem

Solution

No lights on the control panel	• Make sure unit is plugged in. • Make sure wall outlet is functional. • Make sure lid is all the way down, and the Latch is in the Operate position.
Nothing happens when Latch is closed and Button is pressed	• Make sure unit is plugged in. • Make sure wall outlet is functional. • Open Latch, make sure lid is all the way down, re-latch lid.
Cannot insert bag into machine	• Make sure there is enough bag material to reach center of drip tray. Always allow three inches (7.62 cm) extra space to allow the bag to seal tightly around food contents. • Gently stretch bag flat while inserting. Insert bag curl down into Drip Tray.
Air was removed from the bag, but now air has re-entered	• Examine the seal. A wrinkle along the seal may cause air to re-enter the bag. To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into Drip Tray. • Sometimes moisture or food material (such as juices, grease, crumbs, powders, etc.) along seal prevents bag from sealing properly. Cut bag open, wipe top inside of bag and re-seal. • Sharp food items may have punctured bag. Use a new bag if there is a hole. Cover sharp food items with a soft cushioning material, such as a paper towel, and re-seal. • Fermentation or the release of natural gases from inside the foods may have occurred. When this happens, food may have begun to spoil and should be discarded. • Faulty bag. Bag could be punctured. Try another bag.
Bag melts	• Sealing Strip may have become too hot. Always wait at least 20 seconds for appliance to cool down before you vacuum seal another item. • Use FoodSaver® brand bags. Our FoodSaver® Bags and Rolls are specially designed for FoodSaver® units.
Container does not vacuum	• The lid of the container must be correctly placed on and aligned to the container. • Make sure you press the Handheld Button. • Make sure lid is closed securely on all 4 sides. • Make sure rubber gasket on inside of lid is free from food residues. • Examine rim of container for cracks or scratches. Make sure container valve is clean.
If you need further assistance:	• Contact a Service Center.

