



It's important to read this manual prior to using your new product for the first time.

**FOR HOUSEHOLD USE ONLY • PLEASE READ
ALL INSTRUCTIONS BEFORE USING THIS VACUUM.**

To reduce the risk of shock and unintended operation, turn off power and remove the battery before servicing.

 
To reduce the risk of fire, electric shock, injury, or property damage:

7. Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.

15. Keep nozzle and all vacuum openings away from hair, face, fingers, uncovered feet, or loose clothing.

- d) Spaces that are enclosed and may contain explosive or toxic fumes

38. DO NOT expose the battery to fire or temperatures above 265°F (130°C) as it may cause explosion.




*Accessories may vary depending on the model.

To remove the battery from the hand vacuum, press the release tabs on the battery cap and slide out the battery. To reinstall, slide the battery into the compartment in the handle until it clicks into place.

USING YOUR VACUUM


CONTROLS

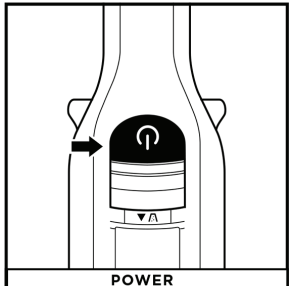

Press the **On/Off** button on the handle to turn on power. To turn off power, press the button again.

POWER

CLEANING MODES

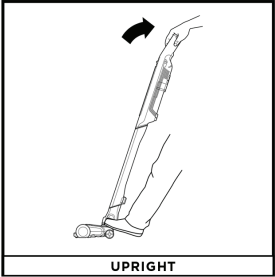


UPRIGHT

Use the PowerFins floor nozzle for powerful cleaning on both bare floors and carpets. The brushroll is activated when the hand vacuum is connected and powered on, and the handle is tilted back.



ABOVE-FLOOR WITH HAND VACUUM

Detach the hand vacuum to clean above-floor areas. Slide the release buttons on both sides of the handle, and lift the hand vacuum off the wand. To attach an accessory to the hand vacuum, slide it into the opening in the nozzle. To remove, slide the release buttons on both sides of the handle and slide out the accessory.

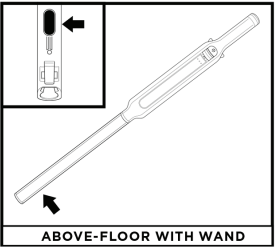


ABOVE-FLOOR WITH WAND

To detach the floor nozzle from the wand, step on the nozzle while pressing the nozzle release button at the bottom of the wand. Lift the wand to remove it. To reattach the wand, align it over the neck of the floor nozzle, then slide it on until it clicks into place.


NOTE: All accessories are compatible with both the wand and the hand vacuum.

MAINTAINING YOUR VACUUM

EMPTYING THE DUST CUP

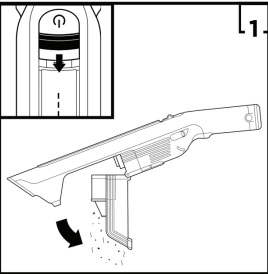

1.

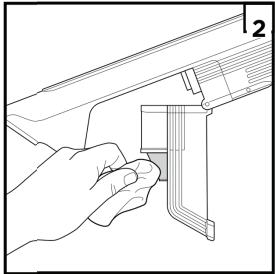


2.

1. With the power off, slide the release button forward, and the dust cup will swing open. Tap the filter screen lightly to knock off dust and debris.


2. Wipe the screen inside the dust cup lightly with a dry cloth to remove dust and dirt.

NOTE: Do not wash any parts or accessories in a dishwasher.

CLEANING THE DUST CUP AND FILTER

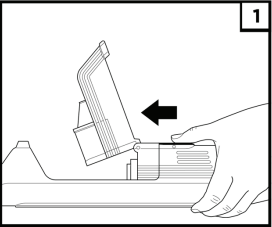


1

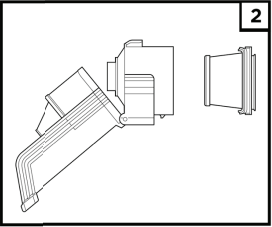


2

1. With the dust cup open and the power off, press the filter release latch below the handle and pull out the filter housing.

2. Press the tabs on both sides of the filter housing and pull out the filter. To clean the filter, hand-wash only with water and let air-dry for 24 hours before reinstalling. To reinstall the filter, slide it back into the housing, then slide the housing back into place.

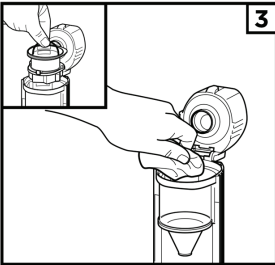

3

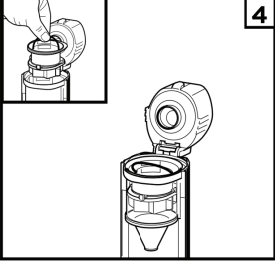


4

3. To deep-clean the dust cup, open the dust cup 90 degrees until it clicks open. Lift the **Cyclone Filter** out, using the wire handle on the frame. Rinse the dust cup with water, and wipe clean with a damp cloth. Allow to air-dry completely (approximately 24 hours).


4. When the dust cup is completely dry, slide the cyclone filter back into place. Tuck the wire handle away, then reinstall the dust cup.

MAINTAINING YOUR VACUUM


NOZZLE MAINTENANCE

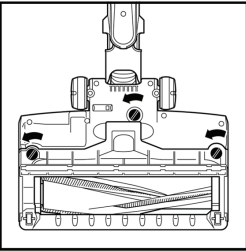


1. Turn off the vacuum.

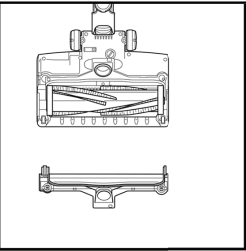


2. Press the nozzle release button to detach the nozzle from the wand.

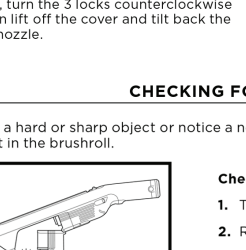


3. Using a coin, turn the 3 locks counterclockwise to open, then lift off the cover and tilt back the neck of the nozzle.

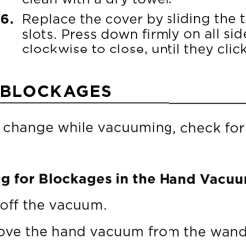

4. Clear any blockages and remove any debris from the brushroll and floor nozzle.

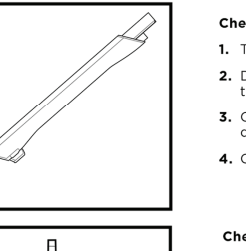


5. With the cover removed, wipe the brushroll clean with a dry towel.

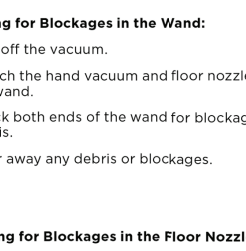

6. Replace the cover by sliding the tabs into the slots. Press down firmly on all sides. Turn locks clockwise to close, until they click into place.

CHECKING FOR BLOCKAGES

If you run over a hard or sharp object or notice a noise change while vacuuming, check for blockages or objects caught in the brushroll.

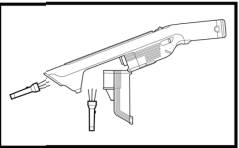


Checking for Blockages in the Hand Vacuum:

1. Turn off the vacuum.

2. Remove the hand vacuum from the wand.

3. Check all intake openings to the dust cup and remove any debris or blockages.

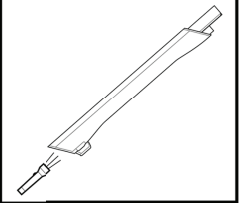


Checking for Blockages in the Wand:

1. Turn off the vacuum.

2. Detach the hand vacuum and floor nozzle from the wand.

3. Check both ends of the wand for blockages and debris.

4. Clear away any debris or blockages.

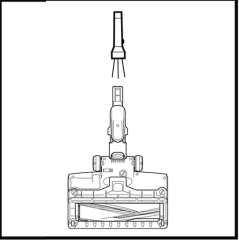

Checking for Blockages in the Floor Nozzle:

1. Turn off the vacuum.

2. Detach the wand.

3. Using a coin, turn the 3 locks on the bottom of the nozzle counterclockwise to open.

4. Lift off the nozzle cover and tilt back the neck of the nozzle.

5. Check the opening and remove any debris.

6. Replace the cover by sliding the tabs into the slots. Press down firmly on all sides. Turn the locks clockwise to close.

MAINTAINING YOUR VACUUM

TROUBLESHOOTING



WARNING: To reduce the risk of shock and unintended operation, turn off power and remove the battery before servicing.

Vacuum is not picking up debris. No suction or light suction. Third indicator light on hand vacuum is solid yellow. (Refer to Checking for Blockages section for more information.)

1. Dust cup may be full; empty dust cup.

2. Check floor nozzle for blockages; clear blockages if required.

3. Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.

4. Check connection between hand vacuum and wand for blockages; clear blockages if required.

5. Check filters to see if they need cleaning. Follow instructions for rinsing and completely air-drying the filters before reinstalling them.

Vacuum lifts area rugs.

1. Make sure you are not engaging Boost mode. Take care when vacuuming area rugs or rugs with delicately sewn edges.

2. Turn off the unit to disengage from the carpet, then restart.

My vacuum has a PowerFins nozzle but the brushroll doesn't spin.

1. Immediately turn off the vacuum. Remove any blockages before turning the vacuum back on. Make sure the hand vacuum is tilted back far enough for the brushroll to engage while in use.

2. If the floor nozzle has headlights and they are not illuminated, there is a connection issue between the hand vacuum, wand, and nozzle. Try detaching the parts, then reconnecting them.

Vacuum turns off on its own.

There are several possible reasons for the vacuum turning off on its own, including blockages, battery issues, and overheating. If vacuum turns off on its own, perform the following steps:

1. Turn on the vacuum and check the battery indicator lights on the hand vacuum. If recharging is needed, make sure vacuum power is off before plugging in the charger.

2. Empty dust cup and clean filters (See the Cleaning the Dust Cup and Filter section).

3. Check wand, accessories, and inlet openings and remove any blockages.

4. Allow unit and battery to cool for at least 45 minutes, until they return to room temperature.

5. Press the On/Off switch to restart the vacuum.

Battery Indicator Lights on hand vacuum are flashing.

• Middle LED is solid yellow (Fig. A): Nozzle clog or motor is overheating. (See the Maintaining Your Vacuum section.)

• Right LED is flashing (Fig. B): Battery needs to be charged.

Contact a Service Center if you experience any of the indications listed below:

• Right and middle LEDs are flashing (Fig. C): Overcurrent or short.

• Middle LED is flashing (Fig. D): Overspeed.

• Left LED is flashing (Fig. E): Communication.

• Middle LED blinking yellow (Fig. F): There may be an electrical problem with the nozzle.

BATTERY REMOVAL AND DISPOSAL

This product uses a lithium-ion rechargeable and recyclable battery. When the battery no longer holds a charge, it should be removed from the vacuum and recycled. **DO NOT** incinerate or compost the battery.

When your lithium-ion battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium-ion batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

The RBRC™ (Rechargeable Battery Recycling Corporation) seal on the lithium-ion battery indicates that the costs to recycle the battery at the end of its useful life have already been paid by SharkNinja. In some areas, it is illegal to place spent lithium-ion batteries in the trash or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC, in cooperation with SharkNinja and other battery users, has established programs in the United States and Canada to facilitate the collection of spent lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent lithium-ion battery to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery

NOTE: Your Quick Guide shows the accessories that are included with your model. The images shown here are for illustrative purposes only and may be subject to change.

*Accessories may vary depending on the model.



PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® vacuum.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2022 SharkNinja Operating LLC. SHARK and WANDVAC are registered trademarks of SharkNinja Operating LLC. RBRC is a trademark of Rechargeable Battery Recycling Corporation.



814100022

PRINTED IN MEXICO

OBPN: WS640Series_IB_E_MP_Mv8

SHNMDL: WS640_B


SC: 04-21-2023_TAB

Elbrd: M.C.



Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

QUICK START GUIDE

WHAT'S INSIDE

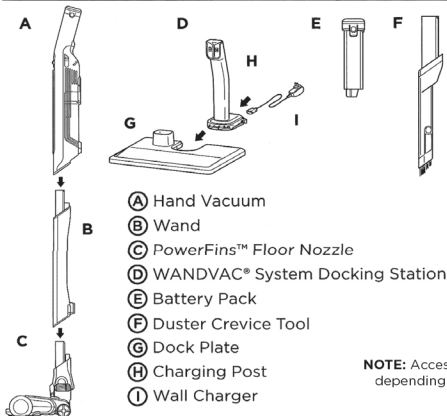

CHARGING OPTIONS

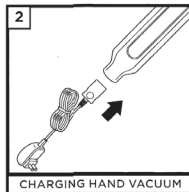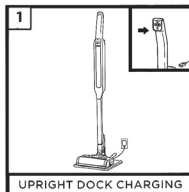

Make sure the contacts on the wand or hand vacuum are aligned with the contacts on the charging dock. When docked properly, the charging lights on the hand vacuum will blink, indicating that charging has begun. When charging is complete, all three indicator lights will remain on for 5 minutes, then shut off.

NOTE: Accessories may vary depending on the model.

The image shown here is for illustrative purposes only and may be subject to change.



8 1 4 0 0 0 2 2

PRINTED IN MEXICO / SC: 04-21-2023
MODEL: WS640_B / Elbrd: M.C. / 0.25P / OBPN: N/A