


Shark HYDRODUO

WET-DRY HARD FLOOR CLEANING SYSTEM

WW200
Series

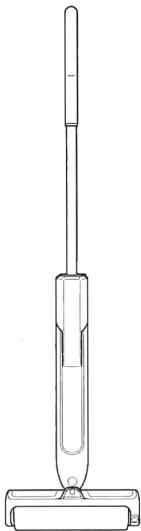

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

IMPORTANT SAFETY INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS.

READ ALL INSTRUCTIONS BEFORE USING THIS CLEANER.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. It is not recommended to use an extension cord with this product.

⚠ WARNING

To reduce the risk of fire, electric shock, or injury:

GENERAL WARNINGS: WHEN USING YOUR SHARK® HYDRO DUO, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. If the charging cord plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** force into outlet or try to modify to fit.
2. To reduce the risk of shock and unintended operation, turn off power before servicing.
3. This Hydro Duo consists of a motorized nozzle, main body, pole, and handle. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.

Warning: Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.

4. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
5. Use only identical replacement parts. Only use parts designed for this product.

6. Use only as described in this manual. **DO NOT** use the Hydro Duo for any purpose other than those described in this manual.
7. **DO NOT** immerse or spray water on the body of the Hydro Duo. To clean the surface, wipe with a dry cloth.
8. Keep the Hydro Duo and the cord out of reach of children. Do not allow the appliance to be used by children. Do not allow to be used as a toy. Close supervision is necessary when used near children.
9. This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be done by children.
10. **DO NOT** handle plug or Hydro Duo with wet hands.
11. **DO NOT** use without the debris holder, clean solution tank, filter, and brushroll cover in place.
12. Only use Shark® branded accessories.
13. **DO NOT** put any objects into nozzle openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce pick up.
14. Keep nozzle and all openings away from hair, face, fingers, uncovered feet, or loose clothing.

15. **DO NOT** use if Hydro Duo is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. Use extra care when cleaning on stairs.
17. **DO NOT** leave the Hydro Duo unattended while powered on.
18. **DO NOT** place Hydro Duo on unstable surfaces such as chairs or tables.
19. **DO NOT** use to pick up:
 - a. Large objects
 - b. Hard or sharp objects (nails, screws, or coins)
 - c. Large quantities of dust (e.g., drywall dust).
 - d. Smoking or burning objects (hot coals, cigarette butts, or matches)
 - e. Flammable or combustible materials
 - f. Toxic materials (chlorine bleach, ammonia, or drain cleaner)
20. **DO NOT** use in the following areas:
 - a. Poorly lit areas
 - b. Outdoor areas
 - c. Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
21. Turn off the Hydro Duo before any adjustment, cleaning, maintenance or troubleshooting.
22. During cleaning or routine maintenance, **DO NOT** cut anything other than hair, fibers, or string wrapped around the brushroll.
23. Allow all filters to air-dry completely before reinstalling them to prevent liquid from being drawn into electric parts.
24. Use only Shark brand cleaning fluids intended for use with this

appliance to prevent internal component damage.


BATTERY PACK

25. The battery is the power source for the Hydro Duo. Carefully read and follow all charging instructions.
26. To prevent unintentional starting, ensure the appliance is powered off before picking up or carrying it. **DO NOT** carry the appliance with your finger on the power switch.
27. Use only with charger Yinli YLS0056E-T096050 or E-TEK ZD006C096050USE. Use of an incorrect charger may result in no charging, and/or unsafe conditions.
28. The battery pack is non-serviceable. Call Contact a Service Center. Service with any questions and concerns.
29. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
30. Battery should not be stored at temperatures below 37.4° F (3° C) or above 104° F (40° C) to maintain long-term battery life.
31. **DO NOT** charge battery at temperatures below 40° F (5° C) or above 104° F (40° C). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
32. Store the appliance indoors. **DO NOT** use or store it below 37.4° F (3° C). Ensure the appliance is at room temperature before operating.
33. **DO NOT** expose the battery to fire or temperatures above 265° F (130° C) as it may cause explosion.


WHAT'S INCLUDED

- Ⓐ Handle
- Ⓑ Spray Trigger
- Ⓒ Pole
- Ⓓ Power Button
- Ⓔ Clean Solution Tank
- Ⓕ Debris Holder
- Ⓖ Nozzle Cover
- Ⓗ Spray Nozzle
- Ⓘ Brushroll
- Ⓙ Charging Dock
- Ⓚ Shark® Hard Floor Multi-Surface Concentrate
- Ⓛ Brushroll Cleaning Tool
- Ⓜ Debris Illumination Light


Accessory type and quantity may vary depending on the model.

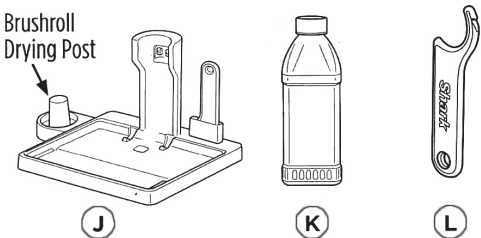


Note: Not all accessories come with all units and may vary by model.

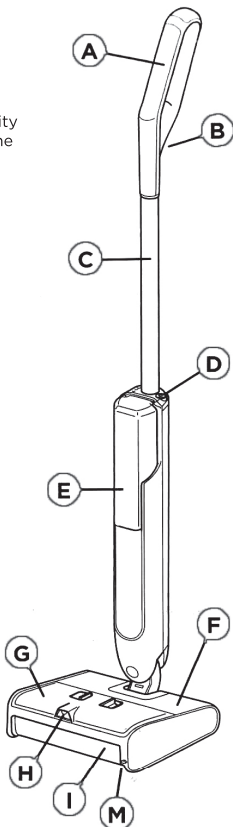

ASSEMBLY

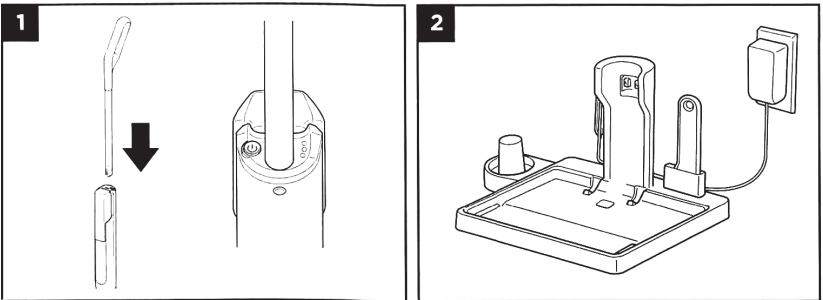

1. Align the **Pole** with the opening in the Main Body and insert firmly until it clicks into place.
2. Place the **Charging Dock** on the floor near a wall outlet and plug in the cord.

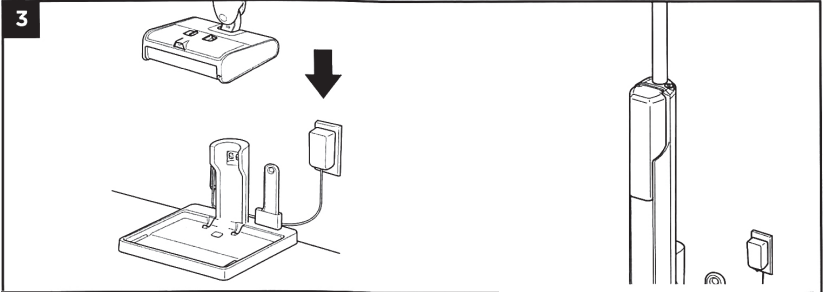


3. Charge the unit by placing it on the **Charging Dock**. Make sure the contacts on the body are aligned with the contacts on the charging dock. The LEDs on the main body will illuminate when charging begins.

Note: To detach the handle, press the release button on the back of the unit and lift off the handle.


CHARGING YOUR HYDRO DUO

Prior to first use, charge the battery completely.

LED BATTERY POWER AND CHARGING INDICATOR

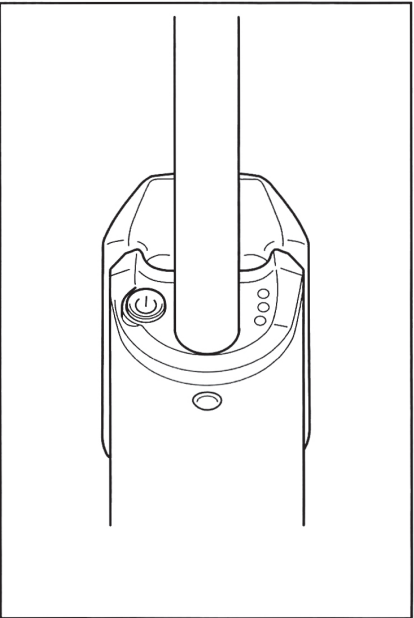


BATTERY LEVEL (In Use/While Charging)

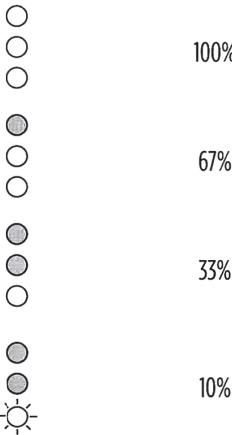


When the unit is fully charged, LEDs will turn off.
LEDs will display the remaining battery level when the unit is in the upright locked position. Unit will shut off after 2 minutes.

The images shown here are for illustrative purposes only and may be subject to change.

1

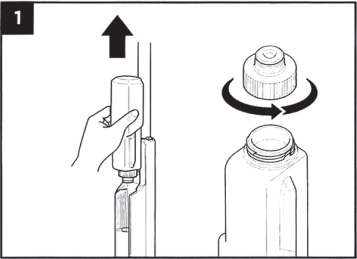


2

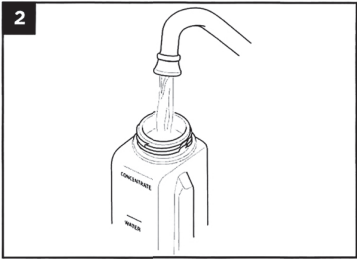

3



4

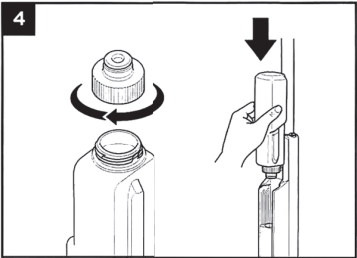

1. Pull out clean solution tank and unscrew cap.

2. Fill with water to **WATER** fill line.

3. Pour Shark Hard Floor Multi-Surface Concentrate to **CONCENTRATE** line.


4. Screw on the cap and reinsert the tank until it clicks into place.

NOTE: Be sure to not overfill the clean solution tank with more Shark Hard Floor Multi-Surface Concentrate than instructed, as this may cause streaking and foaming.

NOTE: Without sufficient water supply in the clean solution tank, Hydro Duo will not spray.

NOTE: **DO NOT** use with vinegar or other household cleaners other than Shark Hard Floor Multi-Surface Concentrate.


1

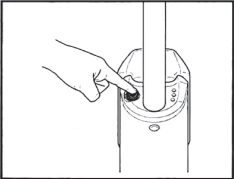

2



3

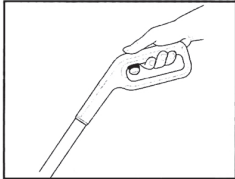

1. Press the Power button.

2. Lower the handle to activate the brushroll and debris illumination light.


3. Press the trigger to spray.

CLEANING TIPS	
Floor Types	Only use on sealed hard floors such as laminate, tile, hardwood, vinyl, stone, and marble.
Dry Debris	Run the floor nozzle over the targeted area, using the dirt reveal technology to identify fine debris. If debris is not picked up, press and hold the spray trigger for one second, then run the floor nozzle over the mess again.
Wet Debris Wet Spills	Slowly run the floor nozzle over wet messes. Do not press the spray trigger. Repeat until wet mess is picked up.
Mopping	For wet cleaning, press and hold the trigger for one full pass every 3 to 5 passes. Apply more solution if needed.
Stain Cleaning	For best practice, make sure the brushroll is fully saturated. Follow the same instructions as for Mopping above. Dry stain: For best cleaning, hold the trigger to spray the stain until fully saturated, and let soak for 10 seconds. Run the floor nozzle slowly over the stain. Spray with every pass, making sure to spray ONLY on the stain. Repeat until the stain is gone. Sticky or thick stain: For best cleaning, hold the trigger to spray the stain until fully saturated, and let soak for 10 seconds. Run the floor nozzle slowly over the stain several times. Spray with every pass, making sure to spray ONLY on the stain. Hold the nozzle in place over the stain with the brushroll spinning. Repeat until the stain is gone.


NOTE: If your floors are cloudy, streaky, or spotty after cleaning, it may be due to accumulated soap or grease residue. The floor may require several cleanings.

NOTE: When edge cleaning, use the left and right sides of the floor nozzle for maximum pickup.


1

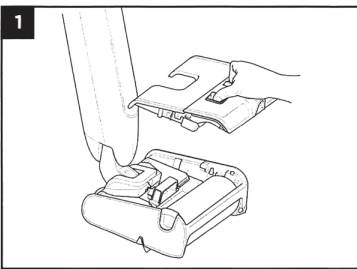


2

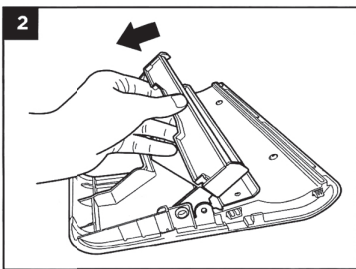

3

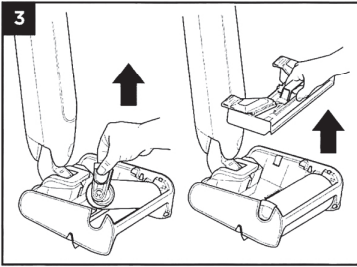

4

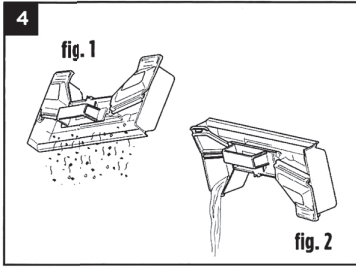


3. Remove the **Nozzle Cover**: Press both tabs and lift off the cover.

4. Hold the cover over a sink or trash bin, then carefully turn it over to dump out waste. Pull back the **Debris Plate** to clean off any remaining liquid and debris.


3. Grip the side tab and lift out the **Brushroll**, then remove the **Debris Holder** by pulling up on the handle.

4. First, dump out solid waste (**fig. 1**) then open the pull tab and pour out liquid waste (**fig. 2**).

5

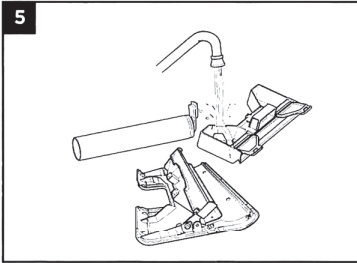

6

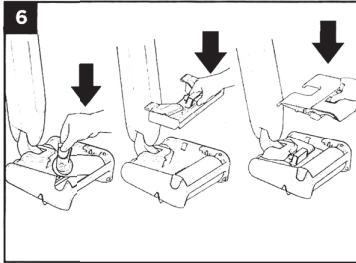

5. Rinse all parts with warm water and soap. Set out all attachments to air-dry for 24 hours. Wipe any debris off the inside of the nozzle.

6. Insert all parts securely back into unit. Make sure brushroll, debris holder, and nozzle cover all click securely into place.

NOTE: These parts are NOT dishwasher safe OR washing machine safe.

ERROR MESSAGES		
LIQUID CHAMBER IN DEBRIS HOLDER IS FULL	COVER NOT ATTACHED	BRUSHROLL JAM
Alternative blinking WHITE and RED (all lights)	Alternating blinking WHITE and RED	SOLID RED (No Blinking)

CHECKING FOR BLOCKAGES

If you run over a hard or sharp object or notice a noise change while using your unit, check for blockages or objects caught in the brushroll, nozzle chamber, or debris holder.


1. Turn off the power.

2. Remove the nozzle cover, brushroll, and debris holder.

3. Check the openings and remove all debris.

4. When finished, reinstall the brushroll, debris holder, and nozzle cover.


1

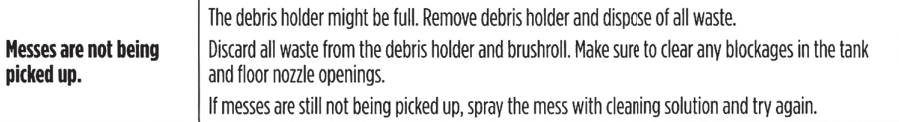

2



 
3



4



 5



6



7



REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center

9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,

Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information

(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

PRINTED IN MEXICO

Elbrd: J.E. SC: 03-06-2025 / SHDML: WW201_B

OBPN: WW200Series_IB_26_MP_Mv9_240829

814100409

