

Portable Room
AIR CONDITIONER

814100332

IMPORTANT SAFETY INFORMATION
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

IMPORTANT SAFETY INSTRUCTIONS

- ▲WARNING** To reduce the risk of fire, electrical shock, injury to persons, or damage when using the air conditioner, follow basic precautions, including the following:

 - Read all of the instructions before using this appliance.
 - Plug into a grounded 3 prong outlet.
 - Do not remove ground prong.
 - Do not use an adapter.
 - Do not use an extension cord.
 - Do not operate the air conditioner if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
 - The air conditioner should be serviced only by qualified service personnel. Contact a service center.
- Disconnect power before servicing.
 - Disconnect power before cleaning.

NOTE: Turning off power by pressing the Power button does NOT disconnect the appliance from the power supply.

 - Do not install or use the air conditioner in any area where the atmosphere contains combustible gases or where the atmosphere is contaminated. Avoid any chemicals coming in contact with your air conditioner.
 - Do not store anything directly on top of the air conditioner.
 - Use two or more people to move and install air conditioner.
 - Never operate the air conditioner without the filters in place.
 - Do not use the air conditioner near a bathtub, shower or wash basin or other wet area.

WARNING Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
 - The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
 - Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
 - Keep ventilation openings clear of obstruction.
 - When handling, installing, and operating the appliance, care should be taken to avoid damage to
- the refrigerant tubing.

 - Do not drill holes in the unit.
 - Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
 - GE Appliances does not support any servicing of the air conditioner.
 - Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.



▲WARNING How to Insert the Batteries in the Remote Control (Batteries not included)

- Remove the battery cover by sliding it according to the arrow direction.
 - Insert new batteries, making sure that the (+) and (-) of battery are installed correctly.
 - Reattach the cover by sliding it back into position.
- NOTES:**


 - Use 2 "AAA" (1.5 volt) alkaline batteries. Do not use rechargeable batteries
 - Remove the batteries from the remote control if the system is not going to be used for a long time.
 - Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.

WARNING Caution for Ingestion. The battery may cause suffocation if swallowed by children.


READ AND SAVE THESE INSTRUCTIONS

USING THE AIR CONDITIONER
Controls

Features and appearance will vary.
Lights next to the touch pads on the air conditioner control panel indicate the selected settings.

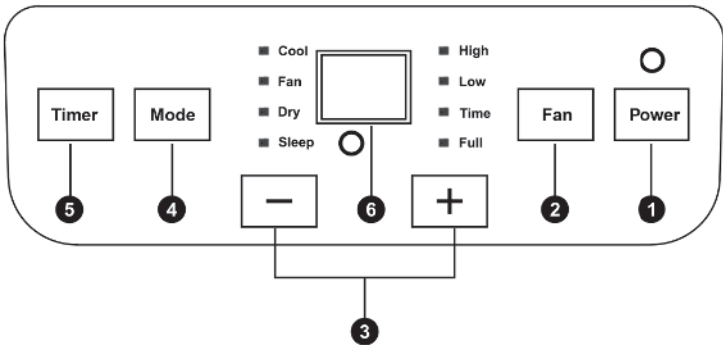

- 1. Power Button**
Press the **POWER** button to turn unit **ON/OFF**.
- 2. Fan Speed Button**
Press the **FAN** button to choose **High/Low** speed.
- 3. + / – Button for Temperature and Timer**
In **Cooling** mode, press the **+** or **–** button to increase or decrease the temperature setting.
In **Timer** mode, press the **+** or **–** button to set time to turn the unit on.
Pressing the **+** or **–** buttons together will switch between °C and °F.
- 4. Mode Button**
Press the **Mode** button to choose **Cool**, **Fan**, or **Dry**.
- 5. Timer Button**
Pressing the **Timer** button in Standby mode will set the time for the unit to turn **ON**.
Pressing the **Timer** button in **ON** mode would set the time for the unit to turn **OFF**.
- 6. Temperature and Timer Display**
The window will indicate temperature and time.
- 7. Temperature Switch Button (on remote)**
Pressing the °C/°F button will switch between °C and °F.
- 8. Sleep button (on remote)**
Pressing the **Sleep** button is to choose sleep mode.

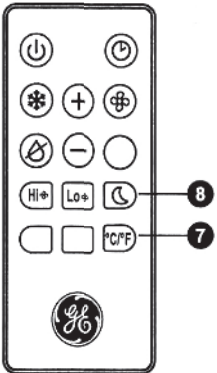

- NOTES:**
- The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.
 - The actual descriptions of control panel and their locations may vary depending on the model.

Set Temperature will be shown when unit is in operation.

Cool Mode

- Use the **COOL** mode for cooling.
- To set the **COOL** mode:
1. Press the **MODE** pad until the **COOL** indicator light is lit.
 2. Press the **FAN** pad to set **HIGH**, **MEDIUM**, or **LOW** fan speed.
 3. Press **+** or **-** to set the desired temperature between 64°F and 86°F in 1°F increments.

After settings have been made, the display will not change back to show the room temperature.

The temperature control is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the set level of comfort. Set the temperature control at a lower number and the indoor air will become cooler. Set the temperature control at a

- higher number and the indoor air will become warmer.
- NOTE:** If the air conditioner is off and is then turned on while set to **COOL**, it will take approximately 3 minutes for the compressor to start and cooling to begin.
- Cooling Descriptions**
- For Normal Cooling**—Select the **COOL** mode and **HIGH**, **MEDIUM**, or **LOW** fan speed with a middle set temperature.
- For Maximum Cooling**—Select the **COOL** mode and **HIGH** fan speed with a lower set temperature.
- For Quieter & Nighttime Cooling**—Select the **COOL** mode and **LOW** fan speed with a middle set temperature.
- NOTE:** If you switch from **COOL** or **DRY** mode setting to **OFF**, wait 3 minutes before restarting.

DRY Mode—Dehumidification

- Use the **DRY** mode to provide dehumidification only. The fan will run at a fixed speed at this setting, so a fan speed cannot be set. Keep windows and doors closed for the best dehumidifying effects.
- To set the DRY mode:**
- Press the **MODE** pad until the **DRY** indicator light is lit.
- In the **DRY** mode, a set temperature will not be displayed. After **DRY** mode has been set, the display will change back to show the room temperature.
- NOTE:** If you switch from a **DRY** setting to **OFF** or to a

- fan setting, wait at least 3 minutes before switching back to a **DRY** setting.
- If using the unit in the **DRY** mode as a dehumidifier for an extended time.
- 1 .Unplug the power cord.
 2. Connect a drain hose to the upper drain port (upper drain #11) and lead hose to floor drain.
 3. Reconnect the power cord and press the **MODE** pad until the **DRY** indicator light is lit.

FAN Mode

- Use the **FAN** mode to provide air circulation and filtering without cooling.
- To set the FAN mode:**
- Press the **FAN** pad until the desired indicator light for **HIGH**, **MEDIUM**, or **LOW** fan speed is lit.

Since fan only settings do not provide cooling, a set temperature will not be displayed. After **FAN** speed has been set, the display will change back to show the room temperature. The exhaust hose and window kit do not need to be installed when operating in fan mode.

Power Outage Recovery Feature

- In the case of a power outage or interruption, the unit will automatically re-start in the settings last used after the power is restored.
- NOTE:** If the **TIMER** was set before the power outage, it will need to be reset after power is restored.

CARE AND CLEANING
CLEANING

▲WARNING

Electrical Shock Hazard

Disconnect power before cleaning.

Failure to do so can result in death or electrical shock.


1. Unplug or disconnect power.
 2. Use only a soft cloth dampened with water to clean the cabinet.
- NOTE:**
- Do not use a liquid or spray cleaner to clean the air conditioner.
 - DO NOT use chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or scouring pads. Some of these chemicals/items may damage and/or discolor your air conditioner.
3. Dry thoroughly with a soft cloth.
 4. Plug in or reconnect power.

Air Filter

The air filters should be cleaned at least every two weeks for your unit to operate at optimum efficiency.


▲CAUTION DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.

- To remove:**
1. Unplug or disconnect power.
 2. Pull to remove upper filter panel.
 3. Wash or vacuum the dust from the air filters.
- NOTE:** If washed, gently shake the filter to remove the excess water and dust particles trapped in the filter.
4. Reinstall the filters.
 5. Plug in or reconnect power.

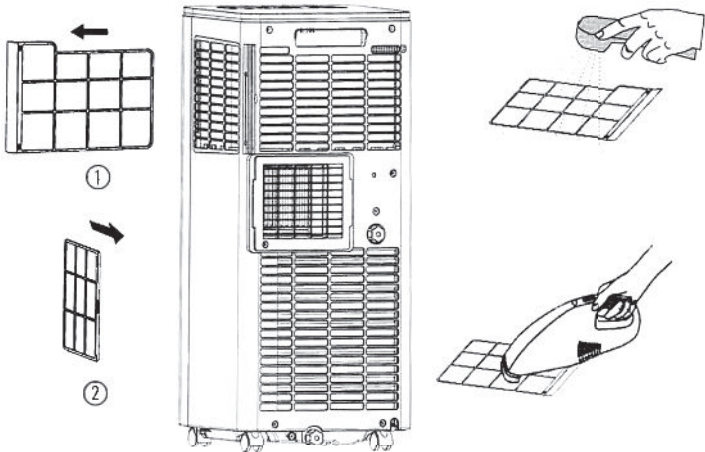

Internal Water Tank

- The Water Full indicator ("FL" on the control panel display) illuminates when the internal water tank has filled with condensed water.
- To Empty the Internal Water Tank:**
1. Unplug or disconnect power.
 2. Place a shallow 1 quart or larger pan (not included) below the lower drain located on the back (near the bottom) of the air conditioner.
 3. Remove the cap and the rubber plug and drain the water tank.
 4. Re-insert the drain plug and screw the cap snugly into place.
 5. Plug in or reconnect power.

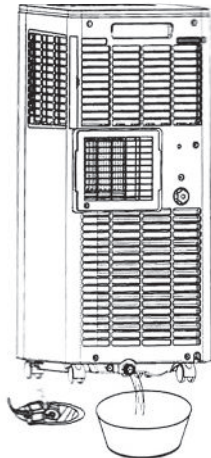

The images shown in this manual are for illustrative purposes only and may be subject to change.

Storage

- If the unit is not being used for a long period of time:**
- To Empty the Internal Water Tank:**
1. Unplug or disconnect power.
 2. Drain the water from the water tank. (See "Internal Water Tank section" above.)
 3. Use the original packaging to repack the unit to avoid a buildup of dust or dirt.
 4. Store the air conditioner in a cool, dry location.

INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- **IMPORTANT** — Save these instructions for local inspector's use.
 - **IMPORTANT** — Observe all governing codes and ordinances.
 - **Note to Installer** – Be sure to leave these instructions with the Consumer.
 - **Note to Consumer** – Keep these instructions for future reference.
 - **Skill level** – Installation of this appliance requires basic mechanical skills.
 - **Completion time** – Approximately 1 hour
 - We recommend that two people install this product.
 - Proper installation is the responsibility of the installer.
 - Product failure due to improper installation is not covered under the Warranty.
 - You **MUST** use all supplied parts and use proper installation procedures as described in these instructions when installing this air conditioner.

ELECTRICAL REQUIREMENTS

Some models require a 115/120-volt AC, 60-Hz grounded outlet protected with a 15-amp time-delay fuse or circuit breaker.

The 3-prong grounding plug minimizes the possibility of electric shock hazard. If the wall outlet you plan to use is only a 2-prong outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet.

CAUTION


Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.

Do not change the plug on the power cord of this air conditioner.

Aluminium house wiring may present special problems—consult a qualified electrician.

PARTS INCLUDED
(Appearance may vary)

- 1. Handle
- 2. Air Inlet Grille (Up)
- 3. Control Panel
- 4. Casters
- 5. Louver
- 6. Air Outlet Grille
- 7. Drainage Hole
- 8. Air Inlet Grille (Down)
- 9. Exhaust Hose Joint
- 10. Exhaust Hose
- 11. Exhaust Hose Adapter
- 12. Window Sealing Kit
- 13. Small Screw

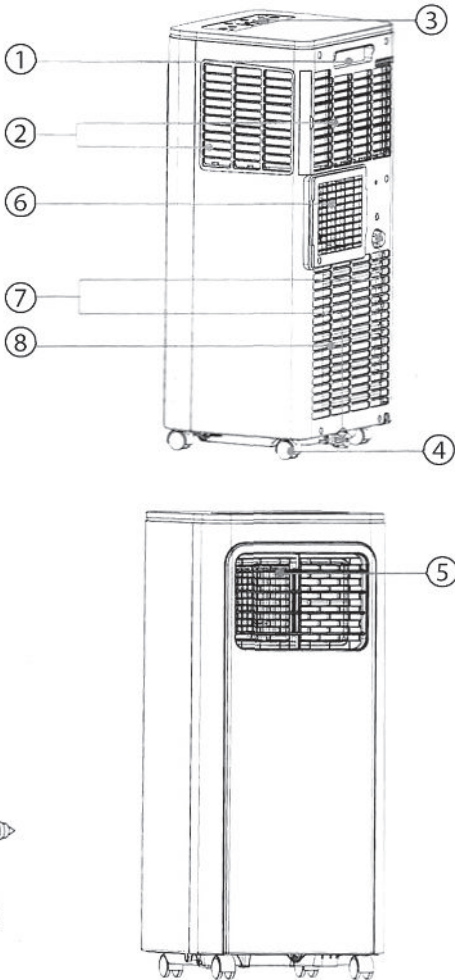

Accessory type and quantity may vary depending on the model.

1. UNPACK AIR CONDITIONER

WARNING

Excessive Weight Hazard

 
Use two or more people to move and install air conditioner.

Failure to do so can result in back or other injury.


- Remove packaging materials. Save the carton and the foam packaging for storing the air conditioner when not in use.
- **NOTE:** There are NO packing materials inside the air conditioner to remove—Do Not open the cabinet.
- Properly dispose of/recycle all packing material.
- Handle the air conditioner gently.
- Keep the air conditioner upright and level. Do not set the air conditioner on its side, front, back or upside down.

2. Install Exhaust Hose Assembly to Back of Unit

A.To assembly exhaust assembly. Extend both ends of hose approximately 4 inches. Attach the exhaust hose joint by screwing on in a counterclockwise direction. Then repeat with exhaust hose adapter.




B.To attach assembly to unit, position the rectangular exhaust connection above the square exhaust port on the back of unit. Slide the connector down to connect to unit.

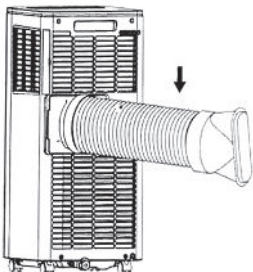


3. INSTALL WINDOW PANELS

 A. Measure the window opening. For a 20" opening, use just the middle panel of the Window Kit with the opening for the Exhaust Hose Adapter. For openings from 20" to 33", insert one side panel to the middle panel, for openings from 33" to 46", insert both side panels.




B. Place the Window Kit into the window opening (the Cam Locks should be towards you) and slide the side panels (if being used) outward to fill the opening. Lock the panels in place with the Cam Locks. Slide the window shut against the Window Kit.

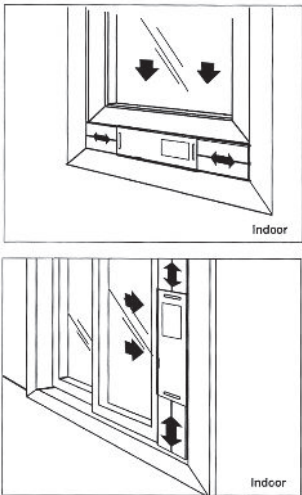

4. Connect Exhaust Hose to the Window Panel

Place the Air Conditioner close to the window ensuring there is at least 20" of clearance from the wall and any other obstructions. Extend the hose so that it reaches the Window Kit. Insert the Exhaust Hose Adapter into the opening in the Window Kit and slide it into the locking position. Ensure that the hose runs straight to the window with no excess extension. Use the small screw to attach the exhaust hose assembly to the window sealing plate assembly.

Important: The Air Conditioner must be vented to the outside. Do not use a longer hose or extend the hose included with the Air Conditioner or the unit will not cool properly and will overheat.

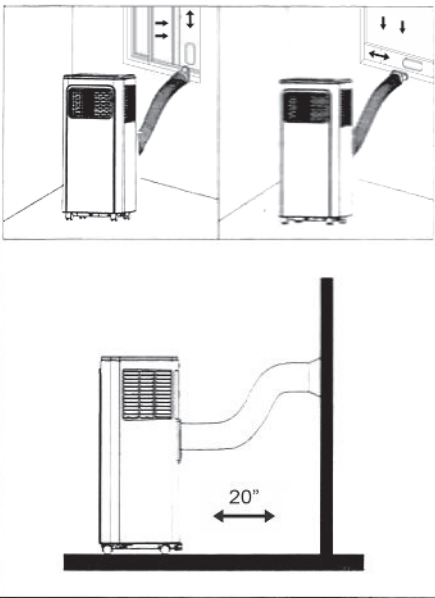

5. COMPLETE INSTALLATION

WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove the ground prong from the power cord plug.

Do not use an adapter.

Do not use an extension cord.

Failure to do so can result in death, fire or electrical shock.

1. Plug the power cord into a grounded 3 prong outlet.
2. Press the Reset button on the plug to ensure the safety plug is providing power to the Air Conditioner.
3. Allow 20" of clearance around the Air Conditioner for proper air circulation
4. When removing the Air Conditioner, be sure to remove the Window Kit.



TROUBLESHOOTING TIPS

Problem	Possible Causes	Solution
Unit does not start or operate	Power supply cord is not plugged into an outlet.	Plug the power cord into a grounded 3 prong outlet.
	Power supply cord has tripped.	Press and release the RESET button on the power supply cord.
	The Power button has not been pressed.	Press the Power button on the Control Panel or Remote Control to turn ON the air conditioner.
	There is no power to the electrical outlet.	Plug a working lamp into the outlet to check for power.
	A household fuse has blown or a circuit breaker has tripped.	Replace the fuse or reset the circuit breaker.
	The control was programmed for a Time Delay.	Cancel the Time Delay. See "Control Panel."
	The batteries in the remote control are dead.	Replace the batteries.
	The internal water tank is full. NOTE: The air conditioner automatically turns off, and the Water Full indicator illuminates to alert you of this condition.	Empty the water tank. See "Air Conditioner Care."
Remote control is not working	Batteries are dead.	Replace the batteries.
	Batteries are installed incorrectly.	Make sure the batteries are inserted in the correct position.
Air conditioner is working but the room is not cooling.	The room temperature is hot. NOTE: On extremely hot and humid days, the air conditioner will take longer to cool the room.	Allow time for the room to cool when you first turn on the unit. Make sure the air conditioner has an adequate BTU rating for the size of the room being cooled.
	The control is set incorrectly to Fan or Dehum mode.	Set the Mode to Cool and the Fan Speed to High.
	Airflow is restricted.	Remove any obstacles to the airflow and redirect airflow for uniform cooling.
	Temperature set too high.	Lower the set temperature.
	Air filters are dirty or restricted.	Clean the air filter. See "Air Conditioner Care."
	Air conditioner installed incorrectly	Check the exhaust hose and window panel for proper installation.
	Doors and windows are open.	Close the doors and windows to the room being cooled to prevent cooled air from escaping.

Error Codes

Code	Meaning
E1	The hose temperature sensor is abnormal
E2	The room temperature sensor is abnormal
E4	Anti-freeze protection
FL	Full-water

PRINTED IN MEXICO
Elbrd: J.M. / SC: 11-06-2024
OBPN: 49-5000625 Rev.0 10-21 GEA
SHDML: APFA08YBMW_B ADD:APFA10YBMW

8 1 4 1 0 0 3 3 2

