

Shark™

FLEXBREEZE™

PRO MIST FAN



814100537

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- This appliance comes with a remote control which contains a coin battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
- To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
- The fan should be used on a stable and level surface.
- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- Do not operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
- If the charger cord is damaged, it should be replaced.
- This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they DO NOT play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- Only use Shark branded accessories.
- Do not use if appliance is not working as it should, has been damaged, or dropped into water.
- Turn off all controls before plugging in or unplugging the appliance.
- Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- Hand wash exterior/hard plastic/non-electronic parts with damp cloth and water only.
- Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type is CR2025.
- The nominal battery voltage is 3V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140°F (60°C), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- The misting feature is suitable for **OUTDOOR USE ONLY**. DO NOT attempt to mist indoors as this could cause slippery conditions or water damage.
- Never attempt to mist substances other than filtered or clean tap water. DO NOT use warm or hot water. Only use cold or room temperature water.
- DO NOT handle live electrical products while in range of the misting stream.
- Keep non-waterproof electronic equipment and appliances out of the misting stream.
- WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
- Do not apply any fragrance or scented products onto any part of the fan during use or maintenance.

⚠ WARNING: Not suitable for use with solid-state speed controls.

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

- DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - Open
 - Drop
 - Short-circuit
 - Puncture
 - Incinerate
 - Expose to temperatures

- Keep battery pack dry.
- Charge battery pack only according to its charger's instructions.
- Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable), and the remote control uses a lithium coin battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. DO NOT incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

- Read and follow all instructions that are on the product or provided with the product.
- Do not use an extension cord.
- Do not use within 10 feet of pool and do not use in a bathroom.
- WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

 
 
 


READ AND SAVE THESE INSTRUCTIONS


ASSEMBLING YOUR FAN

INCLUDES: • Allen Wrench • Bolt • Fan Head • Water Tank • Remote
Multi-Tool • Base • 2-Piece Pole • Hose • Charging Cable

NOTE: Accessories may vary depending on the model.

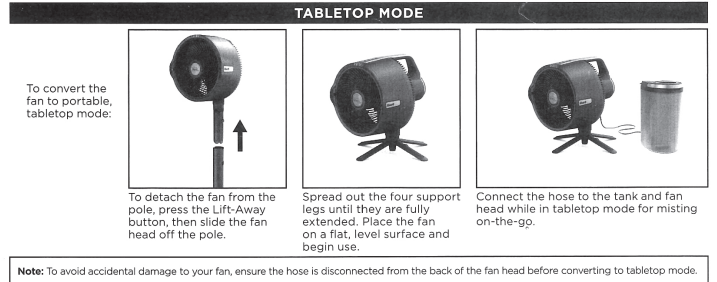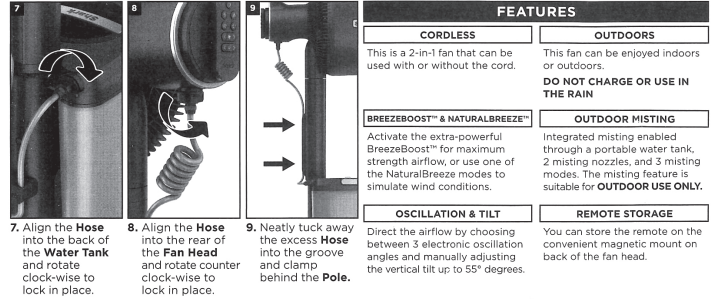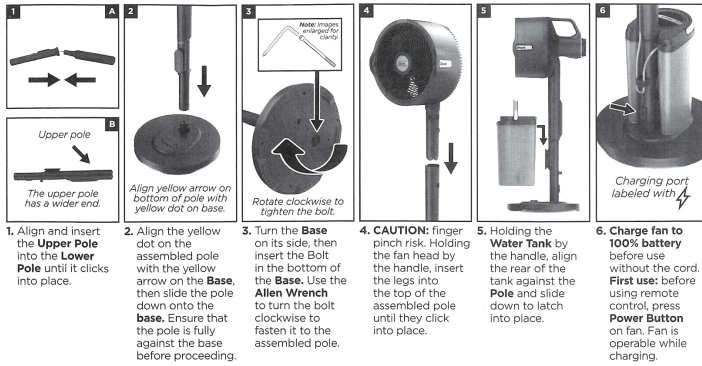


The images shown here are for illustrative purposes only and may be subject to change.

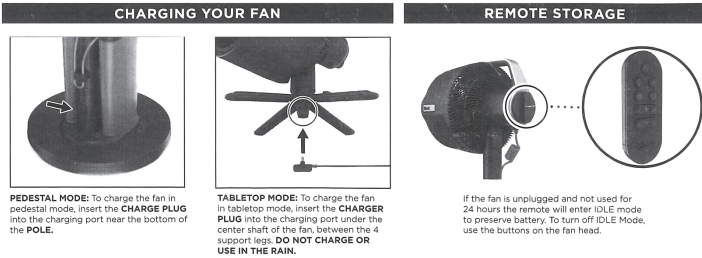 

HOW TO USE YOUR FAN	
Fan Speeds	Press on the fan head or arrows on the remote to switch between fan speeds. LED lights will indicate selected fan speed.
	BreezeBoost™ Mode For maximum-strength airflow, press on the remote or on the fan head again. During cordless use, fan speed will automatically decrease after 20 minutes to save battery power.
	NaturalBreeze Modes To activate STRONG breeze mode, press once on the REMOTE, or press on the fan head an additional time. To activate GENTLE breeze mode, press a 2nd time on the REMOTE, or press on the fan head an additional time.
Oscillation Settings	Press on the fan head or arrows on the remote to toggle between oscillation settings. LED lights will indicate which setting is selected.
Horizontal Angle Adjust	Press the < > arrows on the remote to change the horizontal angle of the fan in 18° increments.
Outdoor Misting Settings	Press once to turn on high-pressure consistent mist. Press a 2nd time to switch to the low-pressure consistent mist mode. Press a 3rd time to switch to the low-pressure interval mist mode.
Runtime	Fan ONLY MAXIMUM CORDLESS RUNTIME: 24 hours on fan speed 1. AVERAGE CORDLESS RUNTIME: 6 hours on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 2 hours on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.
	Fan + Outdoor Misting MAXIMUM MISTING RUNTIME: 16-hour high-pressure consistent misting on fan speed 1 (refilling the water tank every hour). AVERAGE MISTING RUNTIME: 4-hour high-pressure consistent misting on fan speed 3 (refilling the water tank every hour). MAXIMUM MISTING PERFORMANCE: 1-hour high-pressure consistent misting on fan speed 5.
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5-6 hours
Battery Indicator	70%-100%: green light 30%-69%: amber light 6%-29%: red light steady 5% and below: red light blinking

STORAGE	
STORAGE TYPE	INSTRUCTIONS
Short-term storage (less than 24 hours)	Remove, empty, and dry the misting hose and water tank. With the misting hose and tank disconnected from the fan, run the misting system for 20 seconds to clear out any stagnant water remaining in the internal hose. Carefully place the fan in the desired storage location. Ensure it is out of reach of children and pets. Bring the fan indoors if inclement weather is predicted.
Long-term storage (more than 24 hours)	Remove, empty, and dry the misting hose and water tank. With the misting hose and tank disconnected from the fan, run the misting system for 20 seconds to clear out any stagnant water remaining in the internal hose. Carefully place the fan in the desired storage location. Store the fan indoors when not in use for long periods. Always make sure to keep the fan out of reach of children and pets.

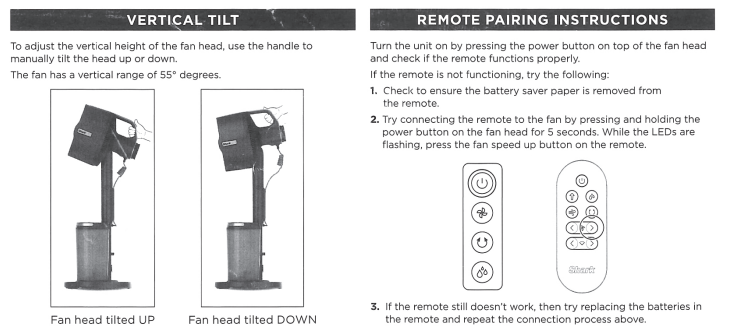 

The remote control vary depend of model:
The buttons on the remote control may have a different name or location than the remote control shows in this manual.
The remote control can use Lithium Batteries or AAA Batteries, as appropriate.



8 1 4 1 0 0 5 3 7

PRINTED IN MEXICO / Elbrd: A.M. SC: 07-31-2025_2P
SHNMDL: FA302_B / OBPN: FA302_QSG_MP_Mv12_241108