

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- This appliance comes with a remote control which contains (2) AAA battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
- To reduce the risk of an electric shock,connect only to an outlet provided with a Residual Current Device (RCD).
- The fan should be used on a stable and level surface.
- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- Do not operate any unit with a damaged cord.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Keep cord away from high-traffic areas. Place in an area where the cord will not be tripped over.
- If the cord is damaged, it should be replaced.
- This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they DO NOT play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- Only use Shark branded accessories.
- Do not use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- Turn off all controls before plugging in or unplugging the appliance.
- Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- Handwash exterior/hard plastic/non-electronic parts with water only. Do not immerse. Cleaning with chemicals could damagethe unit.
- Do not attempt to repairor adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type is AAA.
- The nominal battery voltage is 3V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according topolarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service

- facility for examination and/or repair.
- To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
 - If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

User Servicing Instructions

Unplug or disconnect the appliance from the power supply before servicing.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully. Turn fuseholder over to remove fuse.
- Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse (provided with product).
- Slide closed the fuse access cover on top of attachment plug.

Do not be modified by users, such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

WARNING: Not suitable for use with solid-state speed controls.

BATTERY REMOVAL AND DISPOSAL

This remote control uses a AAA battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled.

DO NOT incinerate or compost the product with its integral battery or the remotedbattery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or inamunicipal solid waste stream.

Return spent battery to an authorized recycling center or toretailer for recycling. Contact your local recycling center for informationon where to dropoff the spent battery.

POWER SUPPLY SAFETY

- Read and follow all instructions that are on the product or provided with the product.
- Do not use an extension cord.
- Do not use within 10 feet of pool and do not use in a bathroom.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consut the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

- This devicemay notcause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

IC statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference,including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS



SETTING UP YOUR FAN

“The blades are not designed to be removed once installed. Please take this into consideration during installation.”

Includes:



A Base Plate



B Base



C Pole and Blade



D Blade



Remote
(Batteries Not Included)

Accessory type and quantity may vary depending on the model.

The images shown in this manual are for illustrative purposes only and may be subject to change.

1. Use assembly stickers to align the **Base** onto the **Base Plate**. Rotate the base clockwise until it clicks into place.

2. Use assembly stickers to align the red arrow printed on the **Pole** with the red arrow printed on the **Base**. Twist the **Pole** clockwise to lock it into the **Base**. Remove tape after assembly has been completed.

3. Remove assembly tape and cardboard from **Pole**. Line up the printed red circle on the **Blade** with the red circle on the inner **Pole**. Press the **Blade** firmly into the **Pole** until it clicks into place.

FEATURES



PIVOT left or right to increase horizontal coverage (manual)



TILT the nozzles to direct airflow (manual)



TELESCOPE the fan to adjust the height (manual)



Magnetically store **REMOTE** on back of the fan.



DUST DEFENSE panel collects dust to make cleaning easier.

CUSTOMIZABILITY		
	Power On <i>Press button on base or remote</i>	Press  to turn the unit on or off.
	Fan Speeds <i>Press and hold button on base or press on remote</i>	Press the  fan icon on the remote or hold down the power button on the unit to switch between fan speeds 1-10. LED lights will indicate selected fan speed.
	Specialty Modes <i>BreezeBoost™ / Sleep Mode</i>	Press the  specialty mode icon on the remote to toggle through specialty modes: BreezeBoost™: Select for a burst of powerful airflow. When BreezeBoost mode is activated, the LED lights will cycle from left to right. Sleep Mode: Select Sleep mode to mute chimes, dim lights, and switch to a fan speed optimized for sleep. When Sleep mode is activated, the LED lights will cycle from right to left.
	Oscillation <i>Remote only</i>	 Setting 1: 45 degrees  Setting 2: 90 degrees  Setting 3: 180 degrees Press the  oscillation icon on the remote to toggle between oscillation angles. LED lights will indicate which angle is selected.  If you'd like to oscillate the unit when it is horizontal, make sure to place it somewhere where it will not hit any walls or objects.
	Timer <i>Remote only</i>	 Setting 1: 1 Hour  Setting 2: 2 Hours  Setting 3: 4 Hours  Setting 4: 8 Hours  Setting 5: 12 Hours Press the  timer icon on the remote to switch between timer settings of 1-12 hours. LED lights will indicate how many hours the timer is set for. LEDs will switch off after 20 seconds. To check how long is left on your timer, press the  timer icon and LED lights will appear.
	Horizontal Angle Adjust <i>Remote only</i>	Press the  angle adjust arrows on the remote to change the horizontal angle of the fan From a distance.

TO DISABLE CHIME: Hold down the timer  and oscillation  buttons on the remote at the same time for 3 seconds to disable chiming. Repeat to re-enable.

Note: If you purchase a replacement remote control, you must pair it with the fan before use. To pair the remote with the fan, hold down the power button on the fan base for 20 seconds, or until the first and last lights on the display illuminate, then press the Fan Speed Up arrow on the remote or press power on the remote and the unit at the same time for 20 seconds. UI lights will blink when successfully paired.

CARRYING POSITION: Carry the unit by the handle on the base while supporting the air duct.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154
Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____ CITY: _____

STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____