

## Ninja Extended Life™ Ceramic Cookware

"RECIPE BOOK NOT INCLUDED"

8 1 4 1 0 0 5 9 4



"CLEAN BEFORE USE"

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING YOUR UNIT  
AND RETAIN FOR FUTURE REFERENCE.

## Before First Use

Read all instructions carefully.

Wash cookware in hot, soapy water, then rinse and dry thoroughly.

Preheat your pan. To test if your pan is ready, drop a bit of water onto the hot surface and it will pill when the right temperature is reached.

### Heat Settings



#### HIGH\*

Use **high** heat for boiling liquids and searing.

\*Never leave an empty pan on high for more than 2 or 3 minutes.



#### MEDIUM

Use **medium** heat for reducing liquids and making pancakes and sandwiches.



#### MEDIUM-HIGH

Use **medium-high** heat for sautéing, frying, stir-frying, and making omelets.



#### LOW

Use **low** heat for warming foods, simmering, or preparing delicate sauces.

## Preserve and prolong the ceramic coating


Follow these tips and tricks to extend the life of your cookware.

### USE APPROPRIATE HEAT



Use the recommended heat settings on the left to avoid overheating.

### ADD FATS

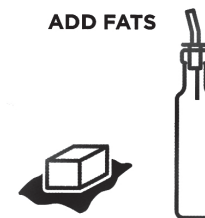

Use butter or oil as needed to enhance flavors when cooking. Never use aerosol cooking sprays--they can burn and leave residue behind.

### CHOOSE YOUR TOOLS



Metal utensils are safe to use, but softer utensils made of wood, silicone, or plastic will help protect the ceramic coating.

### CLEANING



These pans are easy to hand-wash in warm, soapy water, and melamine sponges can be used to help remove stubborn spots. The pans and utensils are also dishwasher safe.

### Storage

When nesting pans for storage, we recommend using a pan protector or paper towel to protect the ceramic coating.

Accessory type and quantity may vary depending on the model.

NOTE: The image shown in this manual are for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

## Use & Care Guide

Thank you for your purchase of Ninja Extended Life™ Ceramic Cookware. We hope you love your cookware and will be inspired to create something new in your kitchen.

This guide includes suggestions for how to maintain your cookware.

### Features:

- Compatible with all cooktops, including induction
- Cookware and lids are dishwasher safe
- Safe for use with all utensil materials, including metal
- Oven and broiler safe up to 350°F

### ▲ WARNING

**BURN/SCALD HAZARD.** Shorter handles, high cooking temperatures, and longer cooking times may cause handles to get hot. Use caution when cooking on the stovetop, and always use a potholder or oven mitt to prevent burns when removing from the oven.

### ▲ WARNING

**FIRE HAZARD.** Do not leave pots and pans unattended while cooking. Never let a pot or pan boil dry.

### BEFORE FIRST USE

Read all instructions carefully. Wash cookware in hot, soapy water, then rinse and dry thoroughly.

### STOVETOP USE

Safe for use on gas, electric, electric coil, halogen, induction, and ceramic cooktops. Be sure to use an appropriately sized burner for the pan you are cooking with, and never allow the handle to extend over the burner. If cooking on a gas range, do not allow the flame to rise along the outside of the pan as this may cause the handle to get hot. Avoid sliding cookware on glass cooktops as this can scratch the cooktop surface.

### PREHEAT

Check to see if the pan is preheated by dropping a small amount of water onto the surface. It will pill when the right temperature is reached. Add oil or butter once the pan is ready. Oil and butter are not necessary but will help the food release and add flavor to your food.

### OVEN & BROILER USE

Ninja Extended Life™ Ceramic Cookware and lids are oven safe to 350°F, but always stay within the recommended heat settings to prevent overheating and to prolong your ceramic coating. Allow lids to cool before immersing in water.

### HANDLES

Our exclusively designed heat-resistant handles are comfortable to hold and securely attached with double rivets so they won't become loose over time. Please note, short handles, high cooking temperatures, and long cook times can cause handles to get hot on the stovetop, and all handles will be hot when used in the oven. Always use a dry oven mitt or cloth when handling hot pans during and after cooking.

### UTENSILS

Metal utensils including spatulas, spoons, whisks, and tongs are safe for use with your Ninja Extended Life™ Ceramic Cookware, but softer utensils made of wood, silicone, or plastic will help protect the ceramic coating.

### CLEANING & CARE

Allow cookware to cool completely before washing. Never immerse a hot pan in cold water as this may lead to permanent warping. Always clean cookware thoroughly after use as grease buildup can lead to food sticking. If you notice grease buildup or discoloring on your cookware, clean thoroughly with baking soda and white vinegar, then wipe with a sponge or soft cloth. Melamine sponges can also be used to remove burnt-on oils and stubborn spots.

### DISHWASHER

Use automatic dishwashing detergent without bleach or citrus additives. Frequent, regular dishwashing may eventually wear away your ceramic coating, so hand-washing is recommended as much as possible. If pots and pans are regularly washed in the dishwasher, some darkening of the exterior of the base may occur—this is normal and will not affect cooking performance.

### HAND-WASHING

**DO NOT** use oven cleaners, steel wool, steel scouring pads, harsh detergents, or detergents containing bleach or peroxide, which can damage the pan. Nylon scrubbing pads can be used on stainless steel surfaces only. Never place a hot pan under cold water as this could lead to permanent warping.

### STORAGE

For extra protection, place a pan protector or paper towel between pans when stacking to minimize chips and dents.

### EXTENDING THE LIFE OF YOUR COOKWARE

Our cookware is designed to withstand the toughest use, but to keep it looking and performing like new, follow these guidelines:

- Never use sharp instruments such as knives, forks, or appliances such as electric mixers.
- While our product is dishwasher safe, hand-washing with a mild liquid dish soap will help extend the life of your coating.
- Pans and lids can withstand temps up to 350°F on the stove or oven.
- Never use aerosol cooking sprays. These burn at low temperatures and will leave a residue that causes sticking.
- Never allow cookware to boil dry.
- Never immerse a hot pan in cold water as this may lead to permanent warping.

PRINTED IN MEXICO / SC: 9-29-2025 / Elbrd: J.L.  
SHMDL: CK89010BF\_B  
OBPN: CK89010BF\_PKG\_INSRT\_QSG\_MP\_Mv2\_240730

8 1 4 1 0 0 5 9 4

