



“Recipe book is not included”



PROFESSIONAL FOOD PROCESSOR
WITH AUTO-IQ®
Owner’s Guide

IMPORTANT SAFETY INSTRUCTIONS
PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠WARNING: To reduce the risk of injury, fire, electrical shock, or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- Read all instructions prior to using the appliance and its accessories.
- Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- Blades are sharp and loose. Handle carefully.
- This product is provided with a Chopping Blade Assembly. **ALWAYS** exercise care when handling blade assembly. The blade assembly is sharp and is **NOT** locked in place in the container. The blade assembly is designed to be removable to facilitate cleaning and replacement if needed. **ONLY** grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assembly will result in a risk of laceration.
- Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact a service center.
- DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact a service center.
- Extension cords should **NOT** be used with this appliance.
- To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- ALWAYS** use the appliance on a dry and level surface.
- DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- NEVER** place a blade assembly on the motor base without it first being attached to its corresponding container (bowl) and lid.
- Keep hands, hair, and clothing out of the container when loading and operating.
- During operation and handling of the appliance, avoid contact with moving parts.
- DO NOT** fill container past the 9-Cup line.
- DO NOT** operate the appliance with an empty container.
- DO NOT** microwave any containers or accessories provided with the appliance.
- NEVER** leave the appliance unattended while in use.
- DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- DO NOT** process dry ingredients with the Chopping Blade Assembly.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- DO NOT** perform grinding operations with the Chopping Blade Assembly.
- NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- Keep hands and utensils out of containers while chopping to reduce the risk of severe personal injury or damage to the blender/food chopper. A scraper may be used **ONLY** when the processor is not running. When using the processor, always use food pusher to add food. **NEVER** add food by hand.
- DO NOT** attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
- If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- Upon completion of processing, ensure that the blade assembly is removed **BEFORE** emptying container’s contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- The maximum wattage rating for this appliance is based on the configuration of the Food Processor Bowl.
- DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- DO NOT** attempt to sharpen blades.
- Turn off the appliance and unplug the motor base before cleaning.
- Never feed food by hand. Always use food pusher.
- To reduce the risk of injury from damage to the food processing bowl or separation of the lid, **DO NOT** load the bowl with ice cubes for crushing.
- Unit is intended to create a dough ball. It is **NOT** intended to continuously knead. After dough ball forms, additional kneading should be done by hand on a work surface. If the unit moves excessively on the work surface, remove the dough ball and knead by hand.

SAVE THESE INSTRUCTIONS

PARTS


NOTE: The top flap of your box shows the select accessories that are included with your model.

- A** Pusher for Feed Chute Lid
- B** Feed Chute Lid
- C** 9-Cup Precision Processor® Bowl
- D** Motor Base (attached power cord not shown)
- E** Reversible Slicing/Shredding Disc
- F** Grating Disc
- G** Disc Spindle
- H** Chopping Blade Assembly
- I** Dough Blade Assembly

There are a variety of accessories that are compatible with this food processor series.

- Accessory type and quantity may vary depending on the model.
- The image shown here is for illustrative purposes only and may be subject to change.

NOTE: CLEAN BEFORE USE

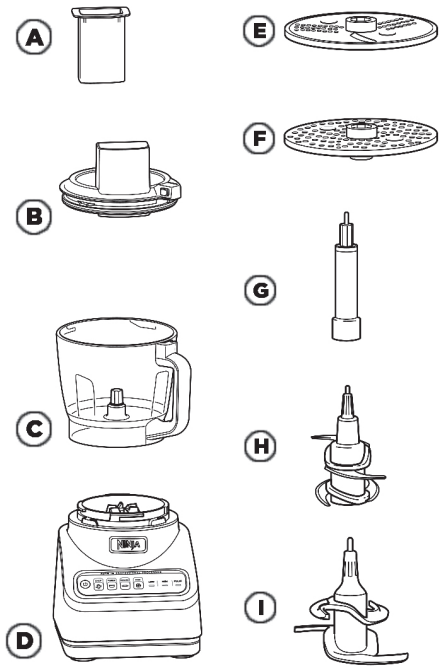

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

NOTE: All attachments are BPA free and dishwasher safe. It is recommended that the bowl, lid, discs, and blade assemblies be placed on the top rack of the dishwasher. Exercise care when handling blade assemblies.


- Remove all packaging materials from the appliance. Exercise care when unpacking blade assemblies. All blade assemblies are sharp.
- The Chopping Blade Assembly is **NOT** locked in place in the bowl. Handle the Chopping Blade Assembly by grasping the top of the shaft.
- Wash bowl, lid, discs, and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are sharp.
- Thoroughly rinse and air-dry all parts.

USING THE CONTROL PANEL

Use the Power button to turn the unit on and off.

AUTO-IQ®
Intelligent preset programs combine unique processing and pausing patterns that do the work for you. Once an Auto-iQ program is selected, it will start immediately and automatically stop when processing is complete. To stop processing before the end of a program, press the currently active button again.

NOTE: Program run times vary from a few seconds up to a minute.

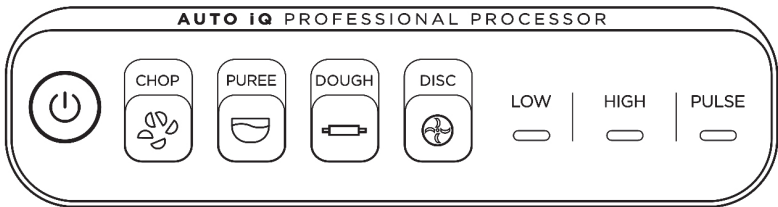

AUTO-IQ PROGRAMS

CHOP
Timed pulses and pauses give you consistent chopping results. Run program once for a large chop, twice for a small chop and three times if you prefer to mince.

PUREE (Not available on all models)
Create anything from silky-smooth sauces to the perfect hummus.

MANUAL PROGRAMS
LOW and HIGH
When selected, each of these speeds runs continuously for 60 seconds. They do not work in conjunction with any preset Auto-iQ programs.

DOUGH
Ideal for creating delicious dough, from pie to pizza to cookie doughs.
NOTE: Use PULSE to add mix-ins, such as chocolate chips or raisins, after dough program has completed.

DISC
Slice or shred a variety of ingredients, from fresh vegetables to cheeses.

PULSE
Offers greater control of pulsing and processing. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

IMPORTANT:
• **DO NOT** run the unit on HIGH if using the dough blade.
• The unit is **NOT** intended to crush ice. Review all warnings before proceeding.

- The actual number of ports may have a different name or location.

