

IMPORTANT SAFETY INSTRUCTIONS
PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY


	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

- ⚠ WARNING**
To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.
- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
 - This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge if they have been given supervision and instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Keep the appliance and its cord out of reach of children. **DO NOT** allow children to play with or use the appliance. Close supervision is necessary when used near children.
 - Spilled food can cause serious burns. Keep appliance and cord away from children. **NEVER** drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
 - A short-power supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord
 - Spilled food can cause serious burns. **DO NOT** let cord hang over edges of tables or counters or place appliance on or near hot surfaces, on or near a gas or electric burner, or in a heated oven.
 - DO NOT** operate multicooker in water or under running water.
 - To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
 - DO NOT** use the appliance without the Cooking Pot.
 - To protect against risk of electrical shock, do not immerse the multicooker housing in water or any other liquid. If housing falls into liquid, unplug the cord from outlet immediately. **DO NOT** reach into the liquid.
 - DO NOT** use the appliance without the Cooking Pot installed.
 - Before placing removable Cooking Pot in the cooker base, ensure pot and cooker base are clean and by wiping with a soft cloth.
 - When removable Cooking Pot is empty, **DO NOT** heat it for more than 10 minutes. Doing so may damage the cooking surface.
 - DO NOT** use this appliance for deep-frying.
 - CAUTION:** Sear/Sauté reaches high temperatures. If unmonitored, food may burn on this setting. Use care when touching hot surfaces and when removing food to avoid burns. Do not use the lid and do not leave your cooker unattended while using Sear/Sauté.
 - Avoid sudden temperature changes, such as adding refrigerated foods to a heated pot.
 - CAUTION:** The Cooking Pot and Lid get very hot while using Braise. Use care when touching hot surfaces and when removing food to avoid burns
 - Caution should be used when searing meats and sautéing. Keep hands and face away from the removable Cooking Pot, especially when adding new ingredients, as hot oil may splatter.
 - This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicle or boats. **DO NOT** use outdoors. Misuse may cause injury.
 - CAUTION:** To reduce the risk of electric shock, cook only in the pot provided or in containers placed on the cooking rack in the provided pot.
 - Intended for countertop use only. Ensure the surface is level, clean, and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
 - DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect

- the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Service Center.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to modify the plug in any way.
 - ALWAYS** ensure the appliance is properly assembled before use.
 - DO NOT** use accessory attachments not recommended or sold by SharkNinja. **DO NOT** place accessories in a microwave, toaster oven, convection oven, or conventional oven, or on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill. The use of accessory attachments not recommended by SharkNinja may cause fire, electric shock, or injuries
 - CAUTION:** A heated pot may damage countertops or tables. When removing the hot pot from the multicooker, **DO NOT** place it directly on any unprotected surface. **ALWAYS** set the hot pot on a trivet or a rack.
 - When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for adequate air circulation.
 - DO NOT** operate your appliance in a garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
 - ALWAYS** follow the maximum and minimum quantities of liquid as stated in instructions and recipes.
 - To avoid possible steam damage, place the unit away from walls and cabinets during use.
 - NEVER** use SLOW COOK setting without food and liquids in the removable Cooking Pot.
 - CAUTION:** The Cooking Pot and Lid get very hot while using Braise. Use care when touching hot surfaces and when removing food to avoid burns
 - The Cooking Pot and Lid get very hot while using Slow Cook. Use care when touching hot surfaces and when removing food to avoid burns.
 - DO NOT** move the appliance when in use.
 - Prevent food contact with heating elements. **DO NOT** overfill Cooking Pot. Overfilling may cause personal injury or property damage or affect safe use of the appliance
 - DO NOT** use this unit to cook instant rice.
 - Electrical outlet voltages can vary, affecting the performance and heat output of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
 - Should the unit emit black smoke, unplug immediately and wait for smoking to stop before removing the Cooking Pot.
 - DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
 - Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Improper use, including moving the cooker, may result in personal injury such as serious burns.
 - When unit is in operation, hot steam may be released into the air via the steam hole in the top of the lid. Place unit so steam hole is not directed toward, electrical outlets, cabinets or other appliances. Keep your hands and face at a safe distance from steam hole.
 - When using SLOW COOK setting, **ALWAYS** keep the lid closed.
 - The base unit, inner cooking pot and glass lid become extremely hot during the cooking process. Avoid hot steam and air while removing the inner cooking pot and glass lid from the base unit. **ALWAYS** place them on a heat-resistance surface after removing. **DO NOT** touch accessories during or immediately after cooking.
 - ONLY** lift the lid from the handle on the front of the unit. **DO NOT** lift lid from side area as scalding steam will release.
 - Removable Inner Cooking Pot can be extremely heavy when full of ingredients. Care should be taken when lifting pot from cooker base.
 - DO NOT** touch accessories, including the thermometer (not available on all models), during or immediately after cooking, as they become extremely hot during the cooking process. To prevent burns or personal injury, **ALWAYS** use care when handling the product. Use long-handed utensils and protective hot pads or insulated oven mitts.
 - Cleaning and user maintenance shall not be done by children.
 - Allow unit to cool before cleaning, disassembly, putting in or taking off parts and storage.
 - When not in use and before cleaning, turn the unit off and unplug from socket to disconnect.
 - DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
 - Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.

PARTS

- A Spoon-Ladle
- B Top Pot Handle/ Spoon-Ladle Rest
- C Cooking Lid
- D Side Pot Handles
- E 8.5-Quart Cooking Pot
- F Side Pot Handles
- G Main Unit
- H Control Panel

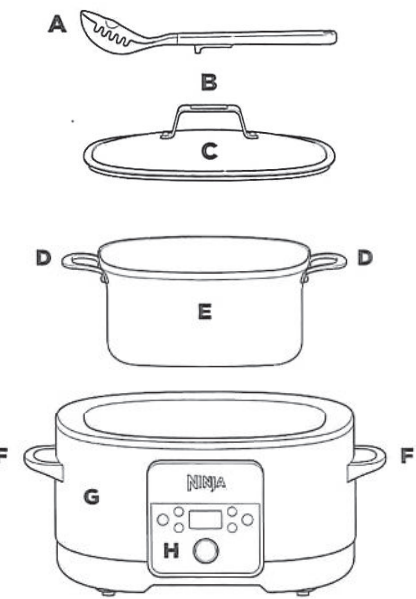

NOTE: Accessory type and quantity may vary depending on the model.

The images shown here are for illustrative purposes only and may be subject to change.

"Recipe book not included"

SAVE THESE INSTRUCTIONS

TECHNICAL SPECIFICATIONS
Voltage: 120V~, 60Hz

