


Shark® StainStriker™

814100577

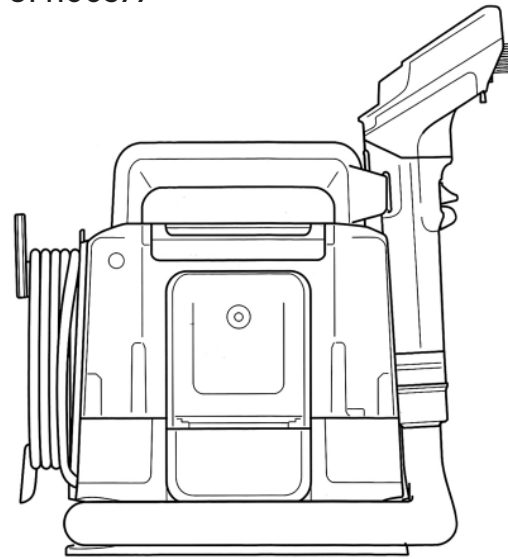


IMPORTANT SAFETY INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of fire, electric shock, injury, or property damage:

1. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
2. **DO NOT** modify the plug provided with the appliance. If the grounded plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified electrician.
3. **DO NOT** force into outlet or try to modify it.
4. **DO NOT** pull, close door, or wrap around sharp edges or corners on the cord. To unplug, grasp the plug, not the cord. Keep cord away from heated surfaces.
5. To reduce the risk of fire or electric shock due to internal component damage, use **ONLY** Shark CarpetXpert/StainStriker formula in the correct tanks, as intended for use with this appliance. See Instructions below.
6. The areas around where you are cleaning may become wet, use care to avoid slipping and falling.
7. Use care when removing and reattaching the hand tool to the Spot Cleaner to avoid accidental activation of the cleaning solution.
8. **DO NOT** spray solution on your skin or in your eyes.
9. **DO NOT** fill solution tanks while installed on the appliance. Remove before filling.
10. **DO NOT** operate if there is any wetting of the exterior surfaces of the appliance. If the appliance is wet, dry with a cloth before use.
11. To reduce the risk of shock and unintended operation, turn off and unplug Spot Cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
12. Before each use, carefully inspect each part for damage or wear. If a part is damaged or worn out, immediately discontinue use. **DO NOT** use if any part is damaged or if Spot Cleaner is not working as it should, has been dropped, left outdoors, or dropped into water.
13. **DO NOT** immerse or spray water on the body of the Spot Cleaner. To clean the surface, wipe with a dry cloth.
14. **DO NOT** allow to be used by children or as a toy. Close supervision is necessary when used near children.
15. **DO NOT** handle plug or Spot Cleaner with wet hands.
16. **DO NOT** use without the dirty water tank, clean solution tank, or filter in place.
17. Use only identical replacement parts. Only use Shark® branded filters and accessories.
18. If plugging unit into extension cord, ensure cord is no more than 50' to prevent damage to the motor.
19. **DO NOT** place Spot Cleaner on uneven surfaces.
20. **DO NOT** use to pick up:
 - a) Large objects
 - b) Hard or sharp objects (glass, nails, screws, or coins)
 - c) Large quantities of dust (e.g., drywall dust).
 - d) Smoking or burning objects (hot coals, cigarette butts, or matches)
 - e) Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
 - f) Toxic materials (chlorine bleach, ammonia, or drain cleaner)
21. **DO NOT** use the following areas:
 - a) Poorly lit areas
 - b) Outdoor areas
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
22. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
23. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. **GROUNDING INSTRUCTIONS:** This appliance must be grounded.

If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding attachment plug. This appliance is for use on a nominal 120V circuit. Make sure that the appliance is connected to an outlet with the same configuration as the plug that is properly installed and grounded in accordance with all local codes and ordinances. No adapter should be used with this appliance.

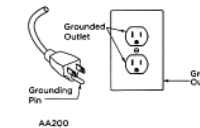


SAVE THESE INSTRUCTIONS.

READ ALL INSTRUCTIONS BEFORE USING THIS SPOT CLEANER.

26. Do not store unit where temperatures reach freezing levels to avoid damaging internal parts.
27. First aid: Keep out of reach of children. Causes skin and serious eye irritation. If in eyes, rinse continuously with water for several minutes. Remove contact lenses if present and easy to do so. Continue rinsing. If on skin, wash with soap and water. If skin and eye irritation persists, seek medical attention.
28. Please recycle container. Dispose of contents/container with licensed waste disposal site in accordance with the requirements of the local waste disposal authority. Do not dispose in drains or watercourses in concentrate form.

PARTS

- | | | |
|----------------------------|---------------------------------|------------------------|
| A CarpetXpert Tank | F Hose-Cleaning Tool | J Spray Trigger |
| B Dirty Water Tank | G Reversible Bristles | K Power Button |
| C StainStriker Tank | H Deep Clean Pro Formula | L Detach Button |
| D Crevice Tool | I OXY Multiplier | |
| E Hand Tool | | |

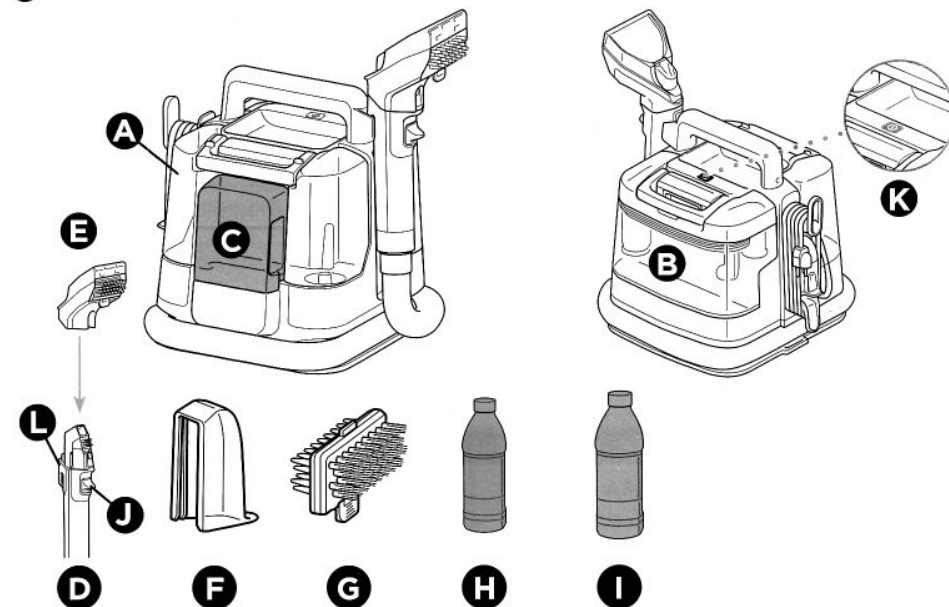

Crevice Tool - Best for removing stains in tight spaces and spraying directly on the stain.
Hand Tool - Excellent for cleaning small stain areas on carpet and upholstery.

NOTE: Not all accessories come with all units. Tools may vary by model.


Accessory type and quantity may vary depending on the model.

GETTING STARTED WITH YOUR SPOT CLEANER


IMPORTANT: Vacuum with traditional vacuum cleaner first before using Spot Cleaner.

1. Lift CarpetXpert Tank by the handle to detach it, then remove the cap.
2. Add water to the CarpetXpert Tank up to the Water fill line. Then add Shark Deep Clean Pro Formula to the Concentrate fill line. Do not use water hotter than 140°F (60°C).
3. Reattach the cap, then reinstall the tank until it clicks into place.
4. Lift StainStriker Tank by its sides to remove it, and fill with Shark OXY Multiplier. Replace the cap and tighten it.

The images shown in this manual are for illustrative purposes only and may be subject to change.

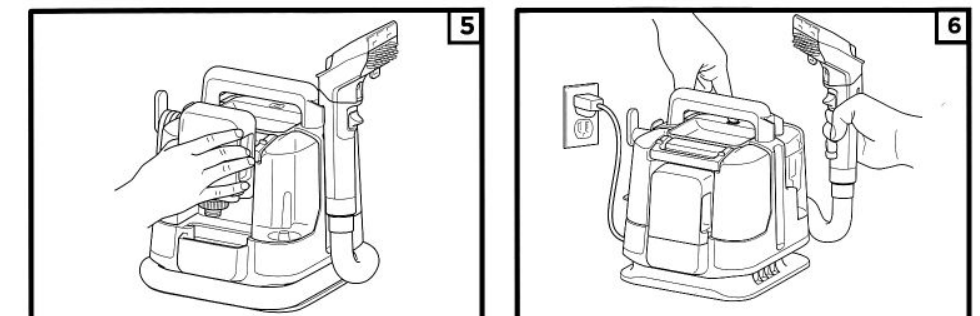

5. Reinstall the StainStriker tank until it clicks into place.
6. Attach hand tool of your choice to the crevice tool. Plug the power cord into an electrical outlet and unwrap the hose. Turn ON unit to begin cleaning. Combining both formulas will give you the best stain cleaning results.



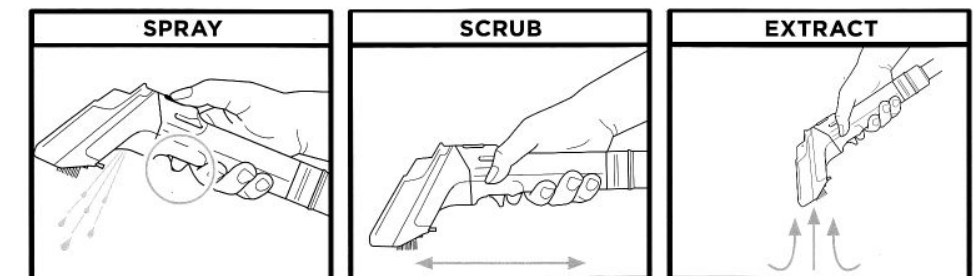


IMPORTANT: Follow the Stain Guide located on the hand tool. To avoid longer dry times, do not over-spray.
For wet stains, turn on the power and vacuum up the liquid mess, then spray the stain area. Scrub the stain with the bristles, then tilt the hand tool forward and drag it across the stain area to extract liquid. Repeat if needed.
For dry stains, turn on the power and scrub the stain with the bristles to extract liquid, then spray the stain area. Scrub the stain again, then tilt the hand tool forward and drag it across stain area to extract. Repeat if needed.

Tips



1. Use the rubber side of the reversible bristles to clean softer fabrics.
2. To rinse carpet or upholstery after cleaning, remove or empty the StainStriker tank and fill the CarpetXpert tank with water **ONLY** before spraying.

MAINTENANCE

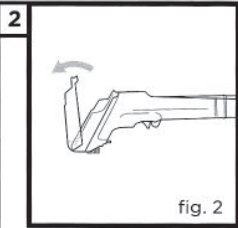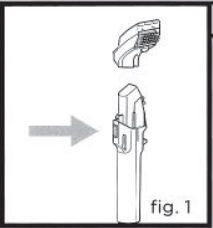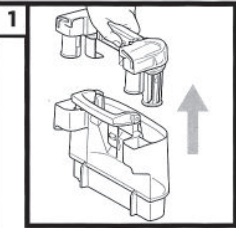


1. When the Dirty Water Tank is full, there will be a change in sound as the float valve closes. Switch off the unit and detach the tank, making sure to keep it upright to prevent spills. Pull the handle back, then lift off the lid. Pour out the contents into a sink or toilet.

2. Remove the hand tool from the hose by pressing the Detach Button (fig. 1). To clean the airpath in the tool, open the cover (fig. 2). Aim the hand tool into a sink or toilet and press the spray trigger to release remaining pressure.

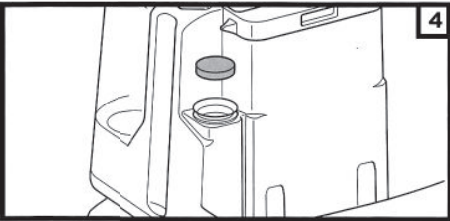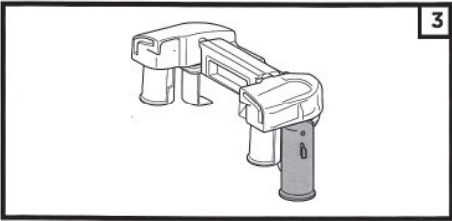

3. Clean the float valve by rinsing with water under a tap. Make sure it can move freely.



4. Remove the Dirty Water Tank. Clear off any debris from the foam filter by rinsing it under a faucet. Allow the filter to air-dry completely, then reinstall it.

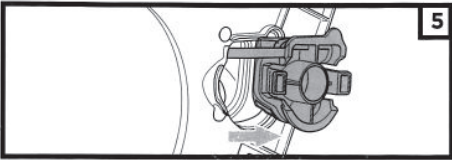

5. To clear any clogged debris at the end of the hose, open the hose clog door on the bottom of the unit. Clear all debris, then close the door.

NOTE: Clean unit after every use to avoid odors, bacteria, and mold.



CLEANING THE HOSE

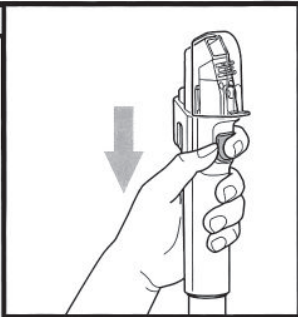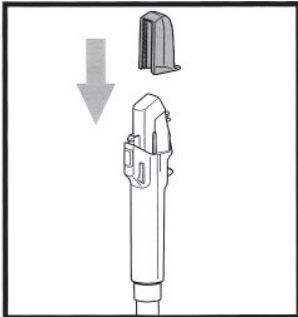

1. Make the sure the unit is turned off and remove the CarpetXpert Tank. Fill tank with water up to the Water fill line. Tip: Add Deep Clean Pro to eliminate odor.

2. Securely attach the Hose-Cleaning Tool to the Crevice Tool and turn ON power. Pull the trigger and cleaning solution will be sucked into the hose to clean the interior.

STORAGE

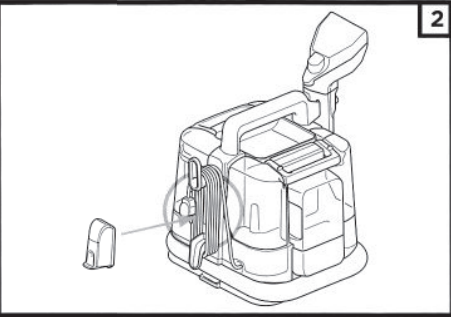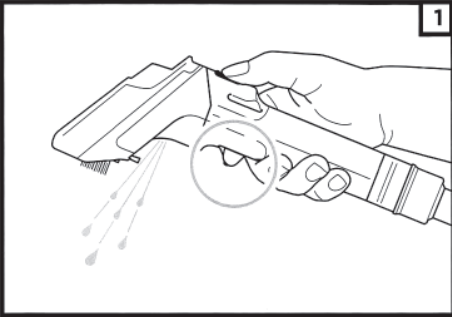

1. Before storing, follow Maintenance and Cleaning Instructions above. Be sure to release all pressure from the hand tool by placing it over a sink or toilet and pressing the spray trigger until all liquid has been released. Lay out all attachments to dry.

2. Once dry, reattach all tools. Wrap up the power cord, then store the hose-cleaning tool on the unit. Wrap the hose around the base of the unit and store the hand tool in its holder.

TROUBLESHOOTING

Problem	Solution
Inconsistent spray or no spray	Ensure there is cleaning formula in the CarpetXpert tank. Make sure the CarpetXpert tank is installed correctly. Make sure the unit is plugged in and the power is on.
Low suction or no suction	Make sure the dirty water tank is not overfilled. Check the clog access door and clear any debris trapped inside at the end of the hose. If a cleaning tool is attached, make sure it is connected correctly. Remove any debris from the cleaning attachments. Make sure the dirty water tank is installed correctly.
Unit not turning on	Make sure the unit is plugged in completely. Try a different outlet. Make sure the On/Off switch is turned on.
Liquid leaking from unit	The dirty water tank may be overfilled. Make sure the dirty water tank and the formula tank are both installed correctly. Make sure the float valve in the dirty water tank is not stuck. Make sure the unit is on a stable, flat surface. Make sure the hose clog door is closed completely underneath the unit.
Solution tank leaking	Make sure the cap on the CarpetXpert tank is tightened fully. Make sure the CarpetXpert tank is installed correctly and that the valve is in the tank.
Leaking from hand tool	Ensure inside of Hand Tool or Pet Mess Tool is thoroughly clean.
Tanks not dispensing liquid	Ensure CarpetXpert tank and StainStriker tank are both installed correctly. Note: Tanks dispense at different rates. CarpetXpert tank will run out of solution before the StainStriker Tank.

CLEANING FORMULAS



Deep Clean Pro Formula

The best deep carpet cleaning formula for removing dirt & grime.



OXY Multiplier

The best tough stain-eliminating formula for those stubborn stains and odors.

TECHNICAL SPECIFICATIONS

PX200C Series: 120V, 60Hz, 3.3A

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO Elbrd: J.M SHNMDL: PX200C_B SC: 09-04-2025 OBPB: PX200C Series_IB_E_F_MP_Mv6_230623

8 1 4 1 0 0 5 7 7

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____ ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____


MODEL: _____ SERIAL NO.: _____

Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

QUICK START GUIDE

The images shown in this guide are for illustrative purposes only and may be subject to change.


1 WHAT'S INSIDE

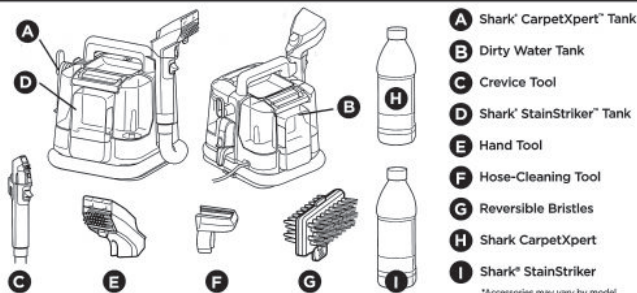

Accessory type and quantity may vary depending on the model.


3 USING THE STAINSTRIKER

1. Turn ON unit, aim nozzle at the stain, and press the spray button on top of the hand tool.
2. Use bristles on the hand tool to work StainStriker into carpet/upholstery.
3. Run front of nozzle across surface to extract liquid.

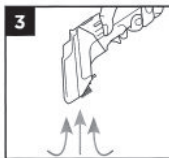



2 FILLING THE TANKS

1. Add water to CarpetXpert tank (A) up to the Water fill line. Then add Shark CarpetXpert formula up to the Concentrate fill line.
2. Fill StainStriker tank (D) with 1 bottle of Shark StainStriker formula.
3. Reinstall both tanks until they click into the unit.

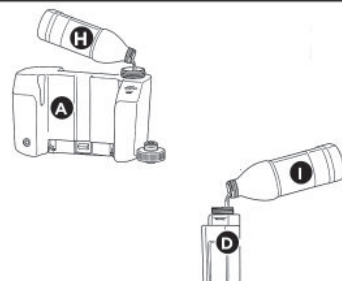

4 CLEANING THE DIRTY WATER TANK

1. Detach the Dirty Water Tank. KEEP TANK UPRIGHT TO PREVENT SPILLS!
2. Push handle back until it clicks, then lift off lid.
3. Pour out contents, clean the tank, and dry it thoroughly.
4. Insert the lid back on and flip the handle back to lock lid.

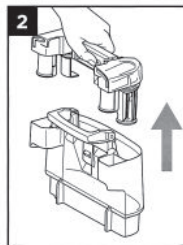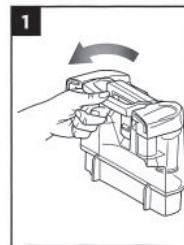

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

