

Please be sure to read and save the warnings on other side prior to using your unit.

QUICK START GUIDE

WHAT'S INCLUDED

Includes:

- Fan
- Charger



Charger
(Reference image only)



Fan
(Already assembled)

• Accessory type and quantity may vary depending on the model. •

FEATURES

CORDLESS	OUTDOORS	VERTICAL TILT	BREEZEBOOST™ MODE	MISTING
This is a 2-in-1 fan that can be used with or without the cord.	This fan can be enjoyed indoors or outdoors. DO NOT CHARGE OR USE IN THE RAIN.	Direct the airflow by manually adjusting the vertical tilt up to 45° degrees.	Activate the extra-powerful BreezeBoost Mode for maximum-strength air flow.	Integrated misting suitable for both indoor and outdoor usage.

HOW TO USE YOUR FAN		
Fan Speed	Power	Misting Modes
Press on the fan head to cycle between fan settings: Fan speeds 1-5 BreezeBoost™ LED lights will indicate selected fan setting.	Press on the fan head to turn the fan on. The battery LED will indicate how much power your fan has. See below for details. 70%-100%: green light 30%-69%: amber light 6%-29%: red light steady 5% and below: red light blinking	Press on the fan head to cycle between mist settings: consistent interval OFF LED lights will indicate selected mist setting. <i>Tip: Try adjusting the fan speed while misting to customize your cooling experience.</i>
Fan ONLY Runtime	MAXIMUM CORDLESS RUNTIME: 12 hours on fan speed 1. AVERAGE CORDLESS RUNTIME: 4 hours on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 1.5 hours on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.	Mist Runtime MAXIMUM MISTING RUNTIME: Up to 60 minutes of interval misting per tank at any fan speed. MAXIMUM MISTING PERFORMANCE: Up to 30 minutes of consistent misting per tank at any fan speed.

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

HOW TO DRY YOUR FAN	VERTICAL TILT	HOW TO CHARGE YOUR FAN
1. Empty the water tank by misting until the tank is empty and the misting icon flashes red. 2. Dry by placing in a well-ventilated, warm and dry space, with the water fill port open NOTE: Leave the water fill port open for 24 hours before closing and storing the unit.	Fan head tilted UP Fan head tilted DOWN	To charge the fan, insert the charger into the charging port on the back of the fan head. DO NOT CHARGE OR USE IN THE RAIN.

After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

IMPORTANT SAFETY INSTRUCTIONS
SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

NOTE: After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- 1. This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO or model ZD036T120300US, or with model AJJ3-1. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- 2. Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- 3. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
- 4. The fan should be used on a stable and level surface.
- 5. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- 6. Do not operate any unit with a damaged power supply wire or battery charger. Contact a service center.
- 7. Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
- 8. If the charger cord is damaged, it should be replaced.
- 9. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 10. Children should be supervised to ensure that they DO NOT play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
- 12. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- 13. Only use Shark branded accessories.
- 14. Do not use if appliance is not working as it should, has been damaged, or dropped into water.
- 15. Turn off all controls before plugging in or unplugging the appliance.
- 16. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- 17. Hand wash exterior/hard plastic/non-electronic parts with damp cloth and water only.
- 18. Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- 19. Do not force discharge, recharge, disassemble, heat above 140°F (60°C), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- 20. The misting feature is suitable for indoor and outdoor use. This product is NOT a humidifier.
- 21. Never attempt to mist substances other than filtered or clean tap water. DO NOT use distilled, warm, or hot water. Only use cold or room temperature water.
- 22. DO NOT handle live electrical products while in range of the misting stream.
- 23. Keep non-waterproof electronic equipment and appliances out of the misting stream.
- 24. To avoid accidental damage or injury DO NOT touch the metal misting plate while the unit is on.
- 25. DO NOT attempt to operate the misting feature with an empty water tank. The metal misting plate may reach high temperatures if operated without water.
- 26. WARNING: CHOKING HAZARD. Always keep nozzles and any other small parts out of the reach of children.

- 27. DO NOT use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.

WARNING: Not suitable for use with solid-state speed controls.

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

- 1. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - a. Open
 - b. Drop
 - c. Short-circuit
 - d. Puncture
 - e. Incinerate
 - f. Expose to temperatures
- 2. Keep battery pack dry.
- 3. Charge battery pack only according to its charger's instructions.
- 4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable). DO NOT incinerate or compost the product with its integral battery. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

- 1. Read and follow all instructions that are on the product or provided with the product.
- 2. Do not use an extension cord.
- 3. Do not use within 10 feet of pool and do not use in a bathroom.
- 4. WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS

Car Charger

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

- 1. SAVE THESE INSTRUCTIONS. This manual contains important safety and operating instructions for battery charger model FAX5XCAR.
- 2. Before using this battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using battery.
- 3. CAUTION: To reduce risk of injury, charge only the provided rechargeable battery. Other types of batteries may burst, causing injury to persons and damage.
- 4. DO NOT expose charger to rain, moisture, or snow.
- 5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.



- 6. To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting charger.
- 7. To reduce risk of electric shock, unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
- 8. DO NOT operate charger with damaged cord or cigarette lighter connector. Replace it immediately.
- 9. The car charger may be wiped clean with water once removed from the power socket. Allow car charger to fully dry prior to use.
- 10. The car charger contains a 5-amp replaceable fuse. Only replace the fuse with a 5-amp fuse, no higher. To do so, unscrew the chrome knob at the top end of the car charging port to access the fuse.

READ AND SAVE THESE INSTRUCTIONS

INSTRUCTIONS FOR USE:

- 1. Firmly insert the larger end of the car charger into a 12-volt outlet in your vehicle.
- 2. Connect the small end of the car charger to the charging port on the fan.

Note: Charging port locations may differ across fan products

