

Please be sure to read and save the warnings on other side prior to using your unit.

QUICK START GUIDE

WHAT'S INCLUDED

Includes:

- Fan
- Charger

814100536



Charger
(Reference image only)



Fan
(Already assembled)

Accessory type and quantity may vary depending on the model.

NOTE: The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

FEATURES

CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

OUTDOORS

This fan can be enjoyed indoors or outdoors.
DO NOT CHARGE OR USE IN THE RAIN.

VERTICAL TILT

Direct the airflow by manually adjusting the vertical tilt up to 45° degrees.

BREEZEBOOST™ MODE

Activate the extra-powerful BreezeBoost Mode for maximum-strength air flow.

MISTING

Integrated misting suitable for both indoor and outdoor usage.

HOW TO USE YOUR FAN

Fan Speed



Press  on the fan head to cycle between fan settings:
Fan speeds 1-5 | BreezeBoost™
LED lights will indicate selected fan setting. See the Owner's Guide for more details.

Power



Press  on the fan head to turn the fan on.
The battery LED will indicate how much power your fan has:

-  70%-100%: green light
-  30%-69%: amber light
-  6%-29%: red light steady
-  5% and below: red light blinking

Misting Modes



Press  on the fan head to cycle between mist settings:
Consistent | Interval | OFF
LED lights will indicate selected mist setting. See the Owner's Guide for more details.

Tip: Try adjusting the fan speed while misting to customize your cooling experience.

Fan ONLY Runtime

MAXIMUM CORDLESS RUNTIME: 12 hours on fan speed 1.
AVERAGE CORDLESS RUNTIME: 4 hours on fan speed 3.
MAXIMUM CORDLESS PERFORMANCE: 1.5 hours on fan speed 5.
PLUGGED IN: Indefinite runtime; fan will charge while operating.

Mist Runtime

MAXIMUM MISTING RUNTIME: Up to 60 minutes of Interval misting per tank at any fan speed.
MAXIMUM MISTING PERFORMANCE: Up to 30 minutes of Consistent misting per tank at any fan speed.

Note: The mister will automatically turn off after 1 hour in Consistent mode or 2 hours in Interval mode. This prevents dry running and system damage. See Owner's Guide for more information.

Charge Time

FROM 0% TO FULLY CHARGED BATTERY: 3 hours

HOW TO DRY YOUR FAN


1. First, empty all the water out of the tank: Hold the fan over a drain, open the water tank cap, then turn the fan upside down and allow all water to drain out.
2. Place the fan upright on a level, stable surface. Open the misting cap on the front grill of the fan, then turn on the misting function for 5 seconds to clear any remaining water from the system.
3. Place the fan in a well-ventilated space and allow it to air-dry completely.

NOTE: Leave the water tank cap open for 24 hours before closing and storing the unit.



VERTICAL TILT


Fan head tilted UP

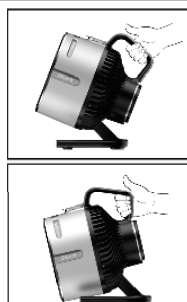

Fan head tilted DOWN

HOW TO CHARGE YOUR FAN

To charge the fan, insert the charger into the charging port on the back of the fan head. **DO NOT CHARGE OR USE IN THE RAIN.**

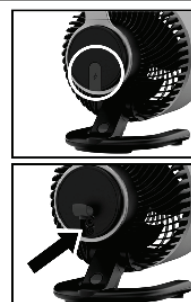

After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

NOTE: After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

1. This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model ZD036T120300US from E-TEK, or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
4. The fan should be used on a stable and level surface.
5. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
6. Do not operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
7. Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
8. If the charger cord is damaged, it should be replaced.
9. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they DO NOT play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
13. Only use Shark branded accessories.
14. Do not use if appliance is not working as it should, has been damaged, or dropped into water.
15. Turn off all controls before plugging in or unplugging the appliance.
16. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
17. Hand wash exterior/hard plastic/non-electronic parts with damp cloth and water only.
18. Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
19. Do not force discharge, recharge, disassemble, heat above 140°F (60°C), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
20. The misting feature is suitable for indoor and outdoor use. This product is **NOT** a humidifier.
21. Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use distilled, warm, or hot water. Only use cold or room temperature water.
22. **DO NOT** handle live electrical products while in range of the misting stream.
23. Keep non-waterproof electronic equipment and appliances out of the misting stream.
24. To avoid accidental damage or injury **DO NOT** touch the metal misting plate while the unit is on.
25. **DO NOT** attempt to operate the misting feature with an empty water tank. The metal misting plate may reach high temperatures if operated without water.
26. **WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.

27. **DO NOT** use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.

⚠ WARNING: Not suitable for use with solid-state speed controls.

LITHIUM BATTERY SAFETY WARNINGS ⚠ ⚠

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - a. Open
 - b. Drop
 - c. Short-circuit
 - d. Puncture
 - e. Incinerate
 - f. Expose to temperatures

2. Keep battery pack dry.

3. Charge battery pack only according to its charger's instructions.

4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable). DO NOT incinerate or compost the product with its integral battery. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. Do not use an extension cord.
3. Do not use within 10 feet of pool and do not use in a bathroom.
4. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS

PRINTED IN MEXICO / SC: 07/30/2025 / ELbrad: J.L
OBPN: FA052_QSG_MP_Mv5_241220
SHDML: FA052

8 1 4 1 0 0 5 3 6

