

KEURIG®

Brew the love.

804106736

"Recipe book not included"

K-Mini Plus™

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. READ ALL INSTRUCTIONS

- For household use only.
- Do not use distilled water.
- Scalding may occur if the handle is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children 12 years or younger.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. The appliance should be returned to the nearest authorized service facility for examination, repair, or adjustment if applicable or contact service center.

- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord to the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
- Do not immerse brewer in water.

SAVE THESE INSTRUCTIONS

- WARNING:** Keep all plastic bags away from children.
- CAUTION:** Keurig® recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® approved K-Cup® pods in this appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
- CAUTION:** There are two sharp needles that puncture the K-Cup® pod, one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- CAUTION:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
- POWER CORD INSTRUCTIONS:**
 - A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the power cord should be a Grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.



Before You Brew



1 Plug & Power

Remove packing tape from brewer. Pull plug and extend cord from cord storage located at the back of the brewer. Plug into a grounded outlet. Press the power button. The power button will illuminate.

2 Fill & Place

Add 1 cup (8oz) of water into a mug. Lift the water reservoir lid and pour the water into the reservoir. Do not fill past the MAX or below the MIN fill lines. Lower the lid and place your mug on the drip tray.

NOTE: Do not use distilled water.



3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brew indicator light will flash to indicate that the brewer is ready.

4 Cleansing Brew

Press the brew button. The brew indicator light will illuminate solid, then begin to pulse while the brewer is heating. After about 2 minutes, the brew indicator light will illuminate solid again and the water will begin to dispense. Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

Brew Your First Cup



5 Fill & Place Mug

Add desired amount of water into a mug (6oz minimum, 12oz maximum). Lift the water reservoir lid and pour the water into the reservoir. Do not fill past the MAX or below the MIN fill lines. Lower the lid and place your mug on the drip tray.

6 Lift & Place Pod

Lift the handle. Place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid. The brew indicator light will flash to indicate that the brewer is ready. **Do not remove the foil lid on the K-Cup® pod.** **High Altitude Brewing:** While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.



7 Brew & Enjoy!

Press the brew button - For bolder coffee, press the **STRONG** button before pressing the brew button. The brew indicator light will illuminate solid, then begin to pulse while the brewer is heating. After about 2 minutes, the brew indicator light will illuminate solid again and the beverage will begin to dispense. Brewing is complete when the brew indicator light is no longer illuminated. When complete, lift the handle and dispose of the used K-Cup® pod.

 
CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.

Brewer Features

- Strong Brew:** Increases your coffee strength and intensity. For bolder coffee press the **STRONG** button.
- Pod Storage:** Holds 9 K-Cup® pods and fits in your brewer to save counter space.
- Removable Water Reservoir:** For easy cleaning and filling.
- Auto Off:** Automatically turns your brewer off 90 seconds after the last brew for energy savings.
- Cord Storage:** Makes transporting your brewer convenient and keeps countertops tidy.
- Travel Mug Friendly:** Remove the drip tray to accommodate a travel mug.
- Caring for your Brewer:** Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. For detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide visit support.Keurig.com. Beyond these recommended cleaning instructions, this brewer is not user-serviceable. For service, please refer to the Warranty included with your brewer.
- Water Reservoir:** The removable water reservoir should be

cleaned periodically with a damp, soapy, non-abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area as they may contaminate the water supply. Do not dry the inside of the water reservoir with a cloth as lint may remain.



Entrance Needle: Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean both holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Descaling your Brewer

You should descale your brewer every 3-6 months. Properly follow the descaling procedure.

Depending on the mineral content of your water, calcium deposits or scale may build up in your brewer. Scale is non-toxic but if left untreated can hinder brewer performance. Regularly descaling your brewer every 3-6 months helps maintain the heating element, and other internal parts that come in contact with water. Calcium deposits may build up faster, making it necessary to descale more often.

Descaling Procedure

Before you begin, you will need a large ceramic mug, fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® podholder. Please allow approximately 45 minutes for the descaling procedure.

STEP 1: Cleansing Rinse

Turn on your brewer. Pour one third (4.6oz) of the Keurig® Descaling Solution into the water reservoir then add fresh water to the 10oz fill level. Place a large ceramic mug on the drip tray plate. Lift and lower the handle but do not add a K-Cup® pod. Press the brew button. Once solution is dispensed, pour the contents into the sink.

Coffeehouse taste in your own home.



NOTE: The descaling action of Keurig® Descaling Solution may result in a "flavor" dispersed from the brewer. This is normal and the dispersion is temporary. The water "taste" for a brewer that has been descaled, the brewer may be the result of the descaling action of the descaling solution. The water "taste" may be a result of the descaling action of the descaling solution.

• Turn off and unplug the brewer.

• If there is a Keurig® Descaling Solution in the water reservoir, discard the contents, rinse the water reservoir thoroughly and refill with water.

• Plug the brewer back in, power on, and repeat the Step 3: Fresh Water Rinse step. The brewer should begin to function normally as the solution is rinsed out and the scale is removed. If persistent problems still occur, please refer to the troubleshooting section of the manual.

Troubleshooting

Grounds in Your Coffee

- Grounds may have gathered in the exit or entrance needles and can be cleaned using a straightened paper clip or similar tool.
- Clean the exit needle of the K-Cup® pod holder. Refer to the Exit Needle care instructions.
- Clean the brewer entrance needle. Refer to the Entrance Needle care instructions.

Brewer Will Not Brew

- A minimum of 6oz of water is required to brew. Add an additional 2oz of water to the reservoir to ensure the minimum fill level has been met, then press the brew button. Repeat until the brewer begins to dispense.

Brewing a Partial Cup

- Press the power button. Press and hold the brew button for 5 seconds until all of the water has been dispensed. Discard the contents into the sink. Press the power button to restart.
- The exit needle may be clogged. Refer to the Exit Needle care instructions.
- Clean the K-Cup® Pod Holder, see K-Cup® Pod Holder care instructions.
- The brewer may need to be descaled. If you have repeated the descale procedure on your brewer two times and it is still only brewing a partial cup, contact service center.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

804106736



PRINTED IN MEXICO / Elbrd: A.M. SC: 11-14-2023
SHNMDL: K21BBK_K21BSGY_K21BGR_K21BWS
K21BDRS_K21BOS_K21BPRD / OBP: DC000001253_REV C

IMPORTANT NOTE:

To prevent unit malfunction due to coffee grounds that may gather in the exit or entrance needles, please refer to the Care for your Brewer instructions on the back of this note.

- MAY TAKE UP TO 2 MINUTES TO BREW -

For serving, press the brew button. The brew indicator light will illuminate solid and begin flashing while the coffee maker warms up.

After approximately 2 minutes, the brew indicator light illuminate solid again and the beverage will begin to brew.

- DO NOT OVERFILL OR BREW ON EMPTY-

Do not fill the water tank above the MAX line or below the MIN line. After filling with an appropriate amount of water, lower the lid and place the correct-sized cup on the drip tray to prevent overflow.

Caring for your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. For detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide visit support.keurig.com. Beyond these recommended cleaning instructions, this brewer is not user-serviceable. For service, please refer to the Warranty included with your brewer.

Water Reservoir

The removable water reservoir should be cleaned periodically with a damp, soapy, non- abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area as they may contaminate the water supply. Do not dry the inside of the water reservoir with a cloth as lint may remain.

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder.

Insert a straightened paper clip into the exit needle to loosen any coffee grounds.



Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean both holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

