

KEURIG®

Let's get brewing.

K-Brew+Chill™

SINGLE SERVE COFFEE MAKER

814100494



Please read this manual carefully before operating your unit and retain for future reference.

Recipe Book not included

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic safety precautions should always be followed, including the following:



1. READ ALL INSTRUCTIONS.
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. Close supervision is necessary when any appliance is used by or near children.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
10. Avoid contact with moving parts.
11. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
12. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
13. Do not use outdoors.
14. Do not let cord hang over edge of table or counter or touch hot surfaces.
15. Do not place on or near a hot gas or electric burner or in a heated oven.
16. Never add to container while appliance is operating.
17. Container must be properly in place before operating appliance.
18. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
19. Do not use appliance for other than intended use.
20. Use brewer in upright position only.
21. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
22. Avoid spilling any liquid substances on powered connectors.

1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
3. **WARNING:** Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
4. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
5. **CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
6. **WARNING:** The appliance has a polarized plug (one blade is wider than the other); to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**
 - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c. If a long detachable power-supply cord or extension cord is used:
 - i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
8. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.


SAVE THESE INSTRUCTIONS

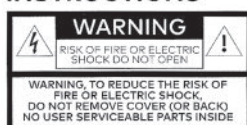

K-Brew+Chill™


SINGLE SERVE COFFEE MAKER

 - A. Chill Tank & Lid**
QuickChill Technology™ flash-chills your beverage.
- B. Drip Tray**
Catches any residual liquid from the brew cycle and Cold Auto Rinse Cycle.
- C. Water Reservoir & Lid**
70oz water reservoir for multiple brews.
- D. Venting System**
Two fan speeds optimized for performance and your kitchen environment.
- E. Control Panel**
Control your K-Brew+Chill™ experience.
- F. Brewer Handle**
Insert your K-Cup® pod and customize your brew.
- G. Pod Holder**

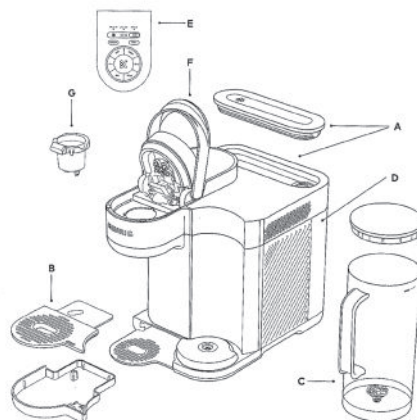

Note: Accessory type and quantity may vary depending on the model.

The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

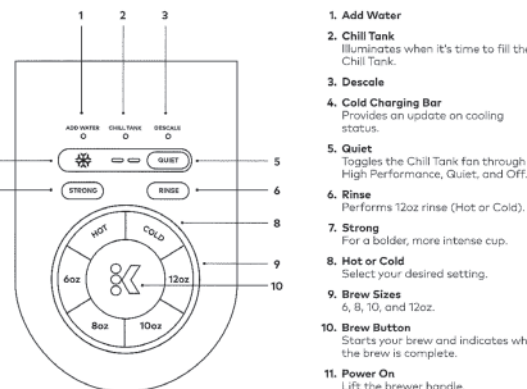 

FILL THE CHILL TANK

The Chill Tank is the cooling engine of the K-Brew+Chill™. Any K-Cup® pod is brewed hot and then cooled using QuickChill Technology™, resulting in a freshly brewed beverage as cold as one from a coffee shop. Before you get started, make sure to fill the Chill Tank.



1. Remove and discard any packaging materials and stickers. Place your K-Brew+Chill™ where you intend to use it before filling it with water.
2. Plug the brewer in. Remove the Chill Tank lid and locate the opening with the Max Fill tab.
3. Fill the Chill Tank with cool tap water. NOTE: The cooler the water, the faster the Chill Tank will charge. The Chill Tank requires 11.5 cups of water. Pour slowly until you reach the Max Fill tab and the CHILL TANK light is no longer illuminated. NOTE: The Chill Tank fan will turn on once you have filled with enough water. Reinstall the lid and press down firmly.

CHILL TANK TIPS:

- The colder the water put into the Chill Tank, the quicker the unit can reach its coldest temperature.
- Fill the water reservoir 1.5 times or use a pitcher. Using a pitcher with a spout can make the filling experience easier.
- Position the K-Brew+Chill™ at least 6 inches away from obstructions for best cooling performance.
- Move the K-Brew+Chill™ away from other heating sources like stovetops.
- Do not place in direct sunlight.

BEFORE YOU BREW

1. Fill the water reservoir to the max fill line. If you have a Keurig® Water Filter, install it now. Place a 12oz mug on the drip tray. NOTE: Do not use distilled water.
2. Lift and lower the handle. Do not insert a K-Cup® pod. Press the RINSE button, select HOT, and press the blinking K button to begin the cycle. The cycle is complete when the K button is no longer illuminated. Empty the mug and place it back on the drip tray.
3. Repeat these steps, but select COLD to perform a rinse cycle for the COLD system.

BREW YOUR FIRST CUP: HOT COFFEE

1. Place a mug on the drip tray. Lift the handle and insert a K-Cup® pod, then close the handle.
 2. The K-Brew+Chill™ defaults to HOT. Choose your brew size and press the K button to start the brew. The brew is complete when the K button is no longer illuminated.
- TIP:** Select **STRONG** before starting the brew for a stronger cup of coffee.
- TIP:** To brew hot water, simply follow the above instructions and omit the K-Cup® pod.

BREW YOUR FIRST CUP: COLD COFFEE

1. Place a cup on the drip tray. Lift the handle, insert a K-Cup® pod, and close the handle.
 2. Select the COLD button. Choose your brew size and press the K button. The brew is complete when the K button is no longer illuminated.
- TIP:** Select **STRONG** before starting the brew for a stronger cup of coffee.
- TIP:** Add ice after the brew is complete to make sure you have enough room for milk and sweeteners.
- NOTE:** If you brew without the drip tray to accommodate a larger cup, insert the drip tray once the brew is complete.

COLD AUTO RINSE CYCLE

Keeps your QuickChill Technology™ running at top performance.

- Remove your beverage from the drip tray once it is complete and the K is no longer illuminated.
- Rinse automatically starts when your Cold brew cycle is complete, indicated by the blinking RINSE button.
- Do not open the brewer handle until the cycle is complete, as indicated by the RINSE button no longer blinking. Auto Rinse will take 1 minute.
- You will hear sounds during the cycle and see water in the drip tray.
- If you remove the drip tray to brew, make sure to reinsert the drip tray once the brew is complete.
- The drip tray can hold at least two Auto Rinse cycles. You will see a red indicator appear on the drip tray to inform you it's time to empty.

COLD CHARGING BAR

The two LED lights will show the Chill Tank charging status. When fully charged, you can brew four consecutive beverages before needing to recharge. When fully charged, you will get the coldest beverages; each consecutive brew will be slightly warmer.

	Low Charge
	Medium Charge
	High Charge
	Fully Charged

TIP: To check your charging status while the brewer is idle, press COLD.

TIP: You can use the COLD function if the Chill Tank is not fully charged, but the beverage won't be as cold as when fully charged.

TIP: The Cold Charging Bar LEDs will blink fast to indicate High Performance mode and slowly to communicate Quiet mode.

TIP: Depending on the number of consecutive Cold brews, it will take up to 6 hours to reach full cold charge.

CHILLING MODES

- K-Brew+Chill™ has three modes: High Performance, Quiet, and Off.
- The brewer defaults to High Performance mode. In this mode, the Chill Tank is fully charged in 6 hours or less.
 - Press the QUIET button to run the system quietly. The Chill Tank will take 7+ hours to fully charge and will take longer to charge between brews.
 - Press the QUIET button a second time to turn the Chill Tank Off. This mode allows you to turn off the Chill Tank but keeps the hot system functioning normally.
- NOTE:** You will still get the same cold temperature as you would in High Performance mode.
- NOTE:** If your chilling system is set to Off and you attempt a Cold brew, the chilling system will turn back on. It will take 6 hours for the Chill Tank to fully charge for an ideal cooled beverage.

RINSE EXPERIENCE

 
WHEN TO USE RINSE FEATURE

- The Rinse feature is a manual cleaning cycle designed to ensure your beverages taste great, even after brewing different pod varieties and flavors.
- Conduct a Rinse **after each brew** if your household brews any of the following beverage types.
 - Flavored Coffee
 - Tea
 - Cocoa
 - Refreshers
 - One-Step Latte K-Cup® Pods

RINSE CYCLE



1 Place a 12oz mug on the drip tray. **Open and close** the brewer handle. **Do not insert a K-Cup® Pod.**



2 Press the **RINSE** button, then select **HOT** or **COLD**. The 12oz size will illuminate.



3 Press the **K** button to begin the Rinse cycle. The cycle is complete when the **K** button is no longer illuminated.

• The image shown here is for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

CARING FOR YOUR BREWER

Descaling Your Brewer: Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. In order for the **DESCALE** light to turn off, you must enter **DESCALE MODE** by pressing the **12oz** and **8oz** buttons. For more information on the descaling procedure, go to [Keurig.com/descale](https://www.Keurig.com/descale).

Storage: Empty the Chill Tank prior to storage. If the brewer has been in storage or hasn't been used in two days, run a Rinse before brewing your beverage.

Drip Tray: Empty and hand-wash the drip tray weekly or when full.

Chill Tank: There will be some evaporation of the Chill Tank water. You will need to add water to the Chill Tank once per year and will be alerted by the **CHILL TANK** LED flashing.

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule.

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker



PRINTED IN MEXICO / Elbrd: A.M. / SC: 06-17-2025_2P
MODEL: KBCK87BK / OBPN: AW0000000999 REV A