

Profile

OWNER'S MANUAL

AIR CONDITIONER

Portable

 
814100570

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING YOUR UNIT AND RETAIN FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

- **WARNING**

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the air conditioner, follow basic precautions, including the following:
- Read all of the instructions before using this appliance.
 - Plug into a grounded 3 prong outlet.
 - Do not remove ground prong.
 - Do not use an adapter.
 - Do not use an extension cord.
 - Do not operate the air conditioner if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
 - The air conditioner should be serviced only by qualified service personnel. Call an authorized service company for examination, repair, or adjustment.
 - Disconnect power before servicing.
 - Disconnect power before cleaning.
- NOTE:**

Turning off power by pressing the Power button does NOT disconnect the appliance from the power supply.
- **WARNING**

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the air conditioner, follow basic precautions, including the following:
- Do not install or use the air conditioner in any area where the atmosphere contains combustible gases or where the atmosphere is contaminated. Avoid any chemicals coming in contact with your air conditioner.
 - Do not store anything directly on top of the air conditioner.
 - Use two or more people to move and install air conditioner.
 - Never operate the air conditioner without the filters in place.
 - Do not use the air conditioner near a bathtub, shower or wash basin or other wet area.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.

- **WARNING**

Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
 - The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.
 - Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
 - Keep ventilation openings clear of obstruction.
 - When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- **WARNING**

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the air conditioner, follow basic precautions, including the following:
- Do not drill holes in the unit.
 - Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
 - GE Appliances does not support any servicing of the air conditioner.
 - Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

- **WARNING**


How to Insert the Batteries in the Remote Control
- Remove the battery cover by sliding it according to the arrow direction.
 - Insert new batteries, making sure that the (+) and (-) of battery are installed correctly.
 - Reattach the cover by sliding it back into position.
- **NOTES:**
- Use 2 "AAA" (1.5 volt) alkaline batteries. Do not use rechargeable batteries
 - Remove the batteries from the remote control if the system is not going to be used for a long time.
 - Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.

- **WARNING**

Caution for Ingestion. The battery may cause suffocation if swallowed by children.

Controls

Features and appearance will vary. Lights next to the buttons on the air conditioner control panel indicate the selected settings.

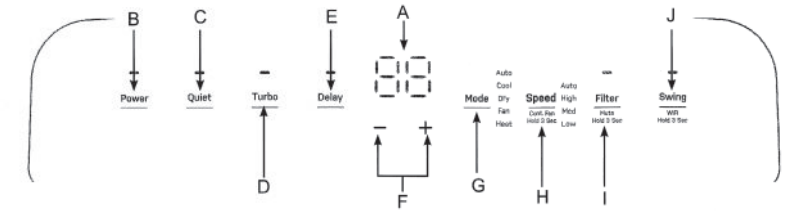

NOTE: The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

- A. Control Panel Display**

Displays the Set Temperature in degrees Fahrenheit, degrees Celsius, or the hours remaining in a Time Delay.
- B. Power Button**

Turns the air conditioner on or off.
NOTE: Turning off power by pressing the **Power** button does NOT disconnect the appliance from the power supply.
Press the **Power** Button. The power indicator and Temperature display will illuminate. Select desired settings. After one minute, the display lights will turn off. Press any button on the unit or the remote, the display will illuminate. Then press corresponding buttons to change unit function.
Note: If changing functions from the remote, it may require multiple presses to synchronize remote to the unit.
- C. Quiet Mode**

The **QUIET** function is used for lowering the fan speed to the lowest speed in Heat and Cool mode. Quiet mode will ensure the most quiet mode of operation to satisfy the set temperature and provide room comfort in the space to be cooled or heated. It is normal for the unit to operate for a longer period at lower energy consumption levels to achieve desired temperature. Pressing **QUIET/MODE/FAN** button again will exit the **QUIET** function and default to auto speed and cool mode.
- D. Turbo Mode (on some models)**

The **Turbo** function is used for speeding up the air flow to the highest speed in heating and cooling mode. Pressing the **Turbo** button again, **Fan** button, or **Mode** button will exit the Turbo function.
NOTE: Turbo is available in heating or cool mode.
- E. Delay Pad**

Delay ON – When the air conditioner is off, it can be set to automatically **turn on** in 1 to 24 hours at its previous mode and fan settings.
Delay OFF - When the air conditioner is on, it can be set to automatically turn off in 1 to 24 hours.
How to set: Press the Delay pad. Each touch of the increase + / Decrease – pads will set the timer in 1-hour intervals.
To review the remaining time on the Delay timer, press the Delay pad. Use the Increase + / Decrease – pads to set a new time if desired.
To cancel the timer, press **Decrease –** pad until the set time is “—”or Press the **Delay** button twice.
- F. Temperature Set Controls**

Adjusts the Temperature or Hours in Time Delay.
To Set the Temperature:
Press the **Mode** button until the Cool mode is selected.
Press the **Increase + or Decrease -** buttons to select the desired temperature.
- G. Mode Button**

Press the Mode button to toggle among the operating options. The corresponding indicator will illuminate: Auto (on some models) – The unit will automatically choose the mode of operation (Cool, Dry, Fan, or Heat).
Cool – Cools the room to the set temperature
Fan – Circulates the air in the room without cooling
Dry – Reduces the humidity in the room
Heat (on some models) – Heats the room to the set temperature
- H. Fan Speed**

The fan speed can be adjusted from Low, Medium, to High speed when the air conditioner is in operation. Auto adjusts the fan speed automatically to provide ideal cooling based on the room temperature. Press and hold the **Speed** button for 3 seconds to change into Fan Only (Continuously running) mode.
NOTE: The Speed button cannot be adjusted when the unit is in Sleep mode.
Press the **Speed** button to toggle among the three speeds. The corresponding fan speed indicator will illuminate.
- I. Filter Reset Button**

This feature automatically notifies you that the air filter must be cleaned. The indicator light will come on after 250 hours of operation. Clean the air filter (refer to Care and Cleaning section), place it back in the front panel, and press the Filter Reset button. The light will turn off.
Mute UI sounds: Press and hold the **Filter Reset** Button for 3 seconds to mute and unmute the unit
- J. Swing**

The louver on your portable air conditioner will open automatically when you turn it on (do not pry it open or push it shut).
 1. When your AC is turned on, the louver will be at position 1 (when in cool mode) or 3 (when in heat mode).
 2. Pressing the Swing button will cycle the louver between 3 fixed positions.
 - **To turn on Wi-Fi:** Press and hold the Swing button for 3 seconds to turn on the Wi-Fi function.
 - Refer to the “Wi-Fi Set up” section for more information on how to connect your Portable AC to your router and installing the HQ App.

Power Outage Recovery Feature

In the case of a power outage or interruption, the unit will automatically re-start in the settings last used after the power is restored.

NOTE: If the Delay was set before the power outage, it will need to be reset after power is restored.

Dry Mode—Dehumidification

Use the Dry mode to provide dehumidification only. Choose dry mode to remove excess moisture from the air. Water will condense inside the appliance and drain out the back. The humidity level will be automatically set and can not be modified in dry mode. Continuous drain hose (included) should be installed on the upper drain outlet.

- To set the Dry mode:**
- Press the **MODE** button until the dry indicator light is lit.

NOTE:

1. When the set temperature is more than 2 degrees below the room temperature, the fan speed can be selected.
2. The display will show the the set temperature this mode.

FAN Mode

Use the FAN mode to provide air circulation and filtering without cooling.

To set the FAN mode:
Press the **SPEED** button until the desired indicator light for high, medium, or low fan speed is lit.

Since fan only setting do not provide cooling, a set temperature will not be displayed. After FAN speed has been set, the display will change back to show the room temperature.

The exhaust hose and window kit do not need to be installed when operating in fan mode.

HEAT Mode (for Heat/Cool models only)

Use the Heat mode at Auto, Low, Medium, or High Speed for heating. Use the Temperature Increase (+) /Decrease (-) buttons to set the desired temperature.

Turbo Mode


The **Turbo** function is used for speeding up the air flow to the highest speed in heating and cooling mode. Pressing **Turbo** again or **Speed** will exit the Turbo function and default to auto speed and cool mode.

for 1 hour. The turbo mode cools or heats the room quickly.

In the Turbo Mode, it sets the unit to run in cool mode at the lowest temperature setting with maximum fan speed

NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

Controls (on some models)

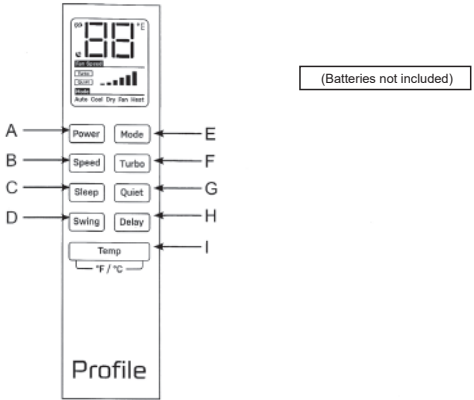

Remote Control

- Insert the two batteries (provided).
- Aim the remote control at the signal receiver on the control to operate the air conditioner.

A. Power

Turns the air conditioner on or off.
NOTE: Turning off power by pressing **Power** button does NOT disconnect the appliance from the power supply. Press the **Power** button. The Power indicator will illuminate.

B. Speed

The **Speed** can be adjusted from Auto, Low, Medium, to High speed when the air conditioner is in operation. Press the **Speed** button to toggle among the four speeds. The corresponding fan speed indicator will illuminate.

C. Sleep

Press the **Sleep** button to activate sleep mode, the air conditioner will increase the temperature in cool mode (or decrease the temperature in heat mode) gradually for one hour, then return to the original temperature after a total of eight hours.

After maintaining the set temperature for 30 minutes, the air conditioner gradually increases the temperature for one hour, then returns to the original setting after a total of eight hours.

D. Swing

The louver on your portable air conditioner will open automatically (do not try it open or push it shut). When your AC is turned on, the louver will swing up and down.
Press the **Swing** button to fix the louver in your desired position.

E. Mode

Press the **Mode** button to toggle among the operating options. The corresponding indicator will illuminate:
Auto (on some models) – When you set the air conditioner to AUTO mode, it will automatically select cooling, heating (cooling only models excluded), operation depending on what temperature you have selected and the current room temperature.
Cool – Cools the room to the set temperature
Dry – Reduces the humidity in the room
Fan – Circulates the air in the room without cooling
Heat (on some models) – Heats the room to the set temperature

F. Turbo

Pressing the **Turbo** button again, **Fan** button, or **Mode** button will exit the Turbo function.
NOTE: A set temperature must be lower than room temperature in cooling, or higher than room temperature in heating, otherwise the unit won't start.

G. Quiet

The **Quiet** Function is used for lowering the fan speed to the lowest in Cool and Heat mode. Pressing **QUIET/ MODE/FAN** button again will exit the **QUIET** function.

H. Delay

Delay ON - When the air conditioner is off, it can be set to automatically **turn on** in 1 to 24 hours at its previous mode and fan settings.
Delay OFF—When the air conditioner is on, it can be set to automatically turn off in 1 to 24 hours.

How to set: Press the **Delay** button. Each press of the **Increase + / Decrease –** will set the timer in 1-hour intervals.

I. Temperature

Adjusts the Temperature or Hours in Time Delay.

To Set the Temperature:

- Press the **MODE** button until the Cool mode is selected.
 - Press the + or – buttons to select the Temperature.
- NOTE:** The temperature cannot be set when the air conditioner is in Fan mode.
- NOTE:** The Air Conditioner LED display will turn off 1 minute after the last button is pushed. To Turn on the LED display, press any button on the unit or the remote, then press corresponding function to change settings. The remote may require multiple pushes to synchronize remote the unit.
- NOTE: Low Battery Sign** - The batteries are discharged or weak. Please replace the batteries.

Care and Cleaning

Cleaning

**WARNING**

**Electrical Shock Hazard**

- Disconnect power before cleaning.
- Failure to do so can result in death or electrical shock.

1. Unplug or disconnect power.
 2. Use only a soft cloth dampened with water to clean the cabinet.
- NOTE:**
- Do not use a liquid or spray cleaner to clean the air conditioner.
 - DO NOT use chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or scouring pads. Some of these chemicals/items may damage and/ or discolor your air conditioner.
3. Dry thoroughly with a soft cloth.
 4. Plug in or reconnect power.

Air Filter


The air filters should be cleaned at least every two weeks for your unit to operate at optimum efficiency.

CAUTION DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.

To remove:

1. Unplug or disconnect power.
 2. Pull to remove the filter panels.
 3. Wash or vacuum the dust from the air filters.
- NOTE:** If washed, gently shake the filter to remove the excess water and dust particles trapped in the filter.
4. Replace both filter panels
 5. Plug in or reconnect power

Filter Panel

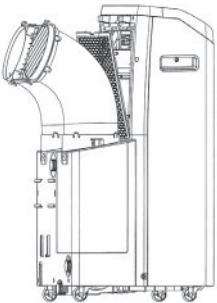

When the air conditioner is turned on, it will automatically start in the last mode and **Fan Speed** setting selected.

Cool Mode

Use the Cool mode for cooling.

To set the Cool mode:

1. Press the **MODE** button until the Cool indicator light is lit.
 2. Press the **SPEED** button to set **AUTO, HIGH, MEDIUM,** or **LOW** fan speed.
 3. Press + or – to set the desired temperature.
- After settings have been made, the display will be turned off automatically after a brief period, press any button to wake up the display.

The temperature control is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the set level of comfort. Set the temperature control at a lower number and the indoor air will become cooler. Set the temperature control at a high number and the indoor air will become warmer.

NOTE: If the air conditioner is off and is then turned on while set to Cool, it will take approximately 3 minutes for

the compressor to start and cooling to begin.

Cooling Descriptions


- **For Normal Cooling** – Select the **Cool** mode and **AUTO, HIGH, MEDIUM,** or **LOW** fan speed with a middle set temperature.
- **For Maximum Cooling** – Select the **Cool** mode and **HIGH** fan speed with a lower set temperature.
- **For Quieter & Nighttime Cooling** – Select the **Quiet** mode on the UI interface, device will automatically go into **LOW** fan speed with a middle set temperature.

Internal Water Tank

The Water Full indicator ("FL" on the control panel display) illuminates when the internal water tank has filled with condensed water. The unit will not cool until the tank has been emptied to prevent overflow and possible damage to the floor under the AC.

To Empty the Internal Water Tank:

1. Unplug or disconnect power.
2. Place a shallow 1 1/2 quart or larger pan (not included) below the bottom cap located on the back (near the bottom) of the air conditioner.
3. Remove the bottom cap and drain the water tank.
4. Screw the bottom cap snugly into place.
5. Plug in or reconnect power.

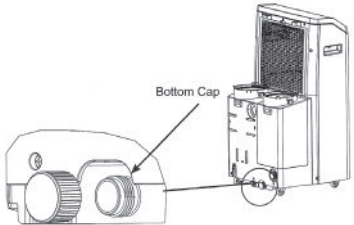


Continuous Draining

(optional and recommended for Dry mode)

1. Remove the top drain cap.
2. Connect the included drain hose to the upper drain outlet.
3. Route the drain hose to a suitably sized container* or a floor drain.

* Be sure to use a large container (3 gallons or larger is recommended) and monitor the water level in the container continuously. The unit will not shut off when the container is full. An overflowing container can cause flooding and damage to the floor.*

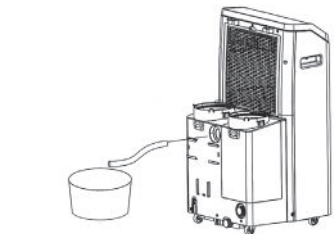

Storage


If the unit is not being used for a long period of time, please store it following the below steps.

Step 1: Empty the Internal Water Tank:


1. Unplug or disconnect power.
2. Drain the water from the water tank. (See "Internal Water Tank section" above.)

Step 2: Storage the Window slides:

1. Make sure the 3 buckles are installed already.
2. Insert the window slides in the right place.

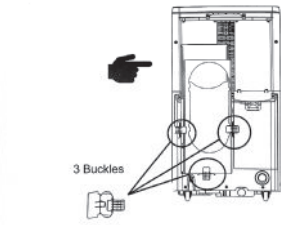

Step 3: Circle the power cord on the buckles.

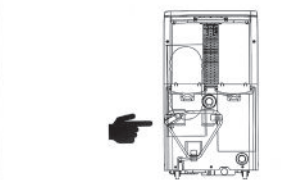

Step 4: Packaging the unit:

1. Use the original packaging to repack the unit to avoid a buildup of dust or dirt.
2. Store the air conditioner in a cool, dry location.

Installation Instructions

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** — Save these instructions for local inspector's use.
- **IMPORTANT** — Observe all governing codes and ordinances.
- **Note to Installer** — Be sure to leave these instructions with the Consumer.
- **Note to Consumer** — Keep these instructions for future reference.
- **Skill level** — Installation of this appliance requires basic mechanical skills.
- **Completion time** — Approximately 1 hour
- We recommend that two people install this product.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation
- You **MUST** use all supplied parts and use proper installation procedures as described in these instructions when installing this air conditioner.

ELECTRICAL REQUIREMENTS

These models require a 115/120-volt AC, 60-Hz grounded outlet protected with a 15-amp time-delay fuse or circuit breaker.


The 3-prong grounding plug minimizes the possibility of electric shock hazard. If the wall outlet you plan to use is only a 2-prong outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet.

CAUTION


Do not, under any circumstances cut or remove the third (ground) prong from the power cord. Do not change the plug on the power cord of this air conditioner. Aluminum house wiring may present special problems—consult a qualified electrician. Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the **TEST** button and then the **RESET** button while plugged into the outlet. If the **TEST** button does not trip or if the **RESET** button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.

Location Requirements

- The air conditioner must be installed near a grounded receptacle, and the overflow drain outlet on the rear must be accessible.
- Place the air conditioner on a smooth, level floor which is strong enough to support the unit. Make sure the unit is level to minimize noise and vibration. Do not place the air conditioner on an unstable or raised surface because it could fall and cause damage or injury.
- In order to get optimal performance, there are optimal distance requirements: 8" between the unit and the exterior wall and 8" between the other sides of the unit.
- Keep the air conditioner, especially the exhaust hose, free of any obstructions such as drapes, curtains, blinds, etc. Do not cover air inlets or outlets or the remote control receiver on the control panel.
- Do not place the air conditioner in direct sunlight or near a heat source such as baseboard heaters, stoves, etc.
- The window panel can be installed in a window with a minimum 20" to a maximum 63" opening.
- The air conditioner requires 8" of space on the sides and back for proper air circulation. The louver blade should be 20" away from obstacles.
- The appliance is intended only for indoor use (excluding laundry rooms).

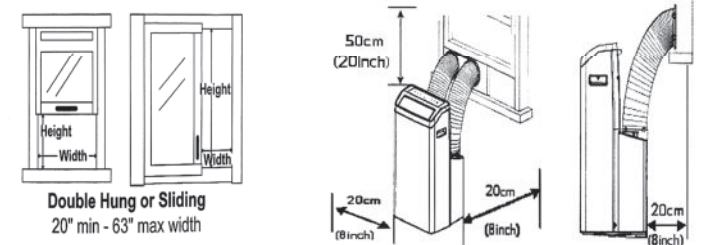

ACCESSORIES INCLUDED

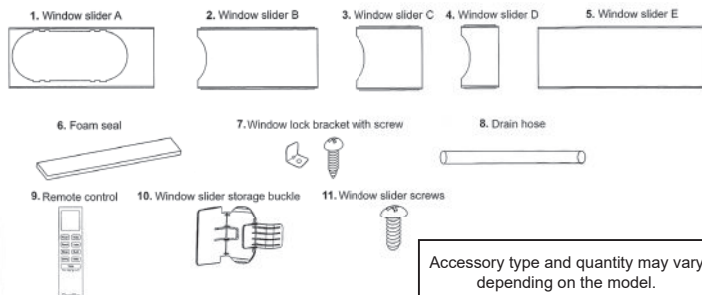


Accessory type and quantity may vary depending on the model.

CAUTION

1. No.1~No.5, you could find them in the box alongside A/C unit.
2. No.6 and No.8~No.12 are collected in a bag and the bag is put in the hose.
3. No.7 is Pad, it is put in the back of the unit.


Please take all of the accessories OUT of the unit before you install the unit. Otherwise, it could cause damage or worsen performance.

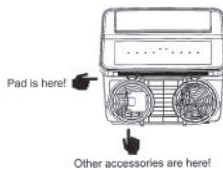

Required Tools

1. Medium sized Phillips screwdriver
2. Tape measure or ruler
3. Knife or scissors
4. Saw (if the window sliders need to be cut to size)

(Tools not included)

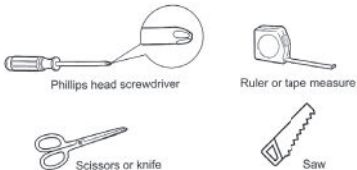

WARNING

Do not leave this appliance unattended in a space where people or animals who cannot react to a malfunction are located. A malfunction, such as the exhaust hose becoming dislocated, can cause extreme overheating or death in an enclosed, unattended space.

WINDOW KIT ASSEMBLY

 
Step one: prepare the window sliders

1. Measure the window opening where the window kit will be installed.

NOTE: Window kit length range 51cm ~ 160cm (20" ~ 63")

2. Assemble as many sliders as necessary to fit the window. If the window opening is less than the minimum length of a single slider, use the slider that has the hole in it and cut it to the correct length. Make sure not to cut the end that has the hole as this is necessary to attach the exhaust hose adapter.


3. Use the window slider bolts to secure the window sliders at the correct length.




INSTALLING THE WINDOW KIT

The instructions below can be used for a hung window application (shown on the left) or an optional sliding window application (shown on the right).


1. Cut foam seals to the correct lengths and attach them to position A and B on the window frame as shown below.

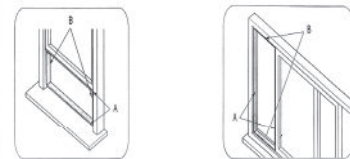


3. If desired, install the security bracket with a screw as shown.

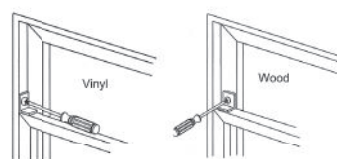

2. Insert the window slider kit into the window opening and close the window the secure it in place.

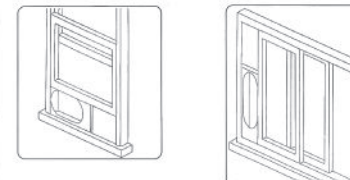

4. Attach the air outlet adapter onto the window slider kit.

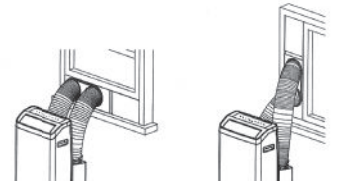

Troubleshooting Tips

Problem	Possible Causes	Solution
Unit does not start or operate	Power supply cord is not plugged into an outlet.	Plug the power cord into a grounded 3 prong outlet.
	Power supply cord has tripped.	Press and release the RESET button on the power supply cord.
	The Power button has not been pressed.	Press the POWER button on the Control Panel or Remote Control to turn ON the air conditioner.
	There is no power to the electrical outlet.	Plug a working Electronic Device into the outlet to check for power.
	A household fuse has blown or a circuit breaker has tripped.	Replace the fuse or reset the circuit breaker.
	The control was programmed for a Time Delay.	Cancel the Time Delay. See "Controls"
Remote control is not working	The batteries in the remote control are dead.	Replace the batteries.
	Batteries are installed incorrectly.	Make sure the batteries are inserted in the correct position.
Air conditioner is working but the room is not cooling.	The internal water tank is full.	Empty the water tank. See "Care and Cleaning"
	NOTE: The air conditioner automatically turns off, and the Water Full indicator ("FL" on the control panel display) illuminates to alert you of this condition.	
	The room temperature is hot.	Allow time for the room to cool when you first turn on the unit.
	NOTE: On extremely hot and humid days, the air conditioner will take longer to cool the room.	Make sure the air conditioner has an adequate BTU rating for the size of the room being cooled.
	The control is set incorrectly to Fan or Dry mode.	Set the Mode to Cool and the Fan Speed to High.
	Airflow is restricted.	Remove any obstacles to the airflow and redirect airflow for uniform cooling.
Doors and windows are open.	Temperature set too high.	Lower the set temperature.
	Air filters are dirty or restricted.	Clean the air filter. See "Care and Cleaning"
	Air conditioner installed incorrectly	Check the exhaust hose and window panel for proper installation. See "Installation Instructions"
		Close the doors and windows to the room being cooled to prevent cooled air from escaping.


Error Codes

Error Codes	Meaning
E1	Abnormal room temperature sensor
E2	Abnormal refrigeration system sensor
FL	The internal water tank is full, refer to draining instruction

WiFi Setup (On Some Models)

GE Appliances SmartHQ (for customers in the United States)

 GE Appliances SmartHQ Enabled*. If your Air Conditioner (AC) has a Connected Appliance Information label located on the outside as shown below, your AC is GE Appliances SmartHQ Enabled. A WiFi communication card is built into the product allowing it to communicate with your smart phone for remote monitoring, control and notifications. Please contact a service center to learn more about connected appliance features, and to learn what connected appliance apps will work with your smart phone.



How it Works

Download the SmartHQ app Use the app to connect your room air conditioner to WiFi Once connected, use the app to turn down your air conditioner as you leave work.



Getting Started

To connect your room air conditioner, you'll need the SmartHQ App. The app will walk you through the connection process. Download the app from iTunes or Google Play.



All connected appliance data is held in strict accordance with the Appliances Connected Data Privacy Policy. Contact a service center to view this policy.

Questions about SmartHQ

Get answers you need about setting up WiFi appliances and connecting to your home network in our support articles.

Contact a service center to view wifi connect room air conditioner support articles.

REGULATORY INFORMATION

FCC/IC Compliance Statement:

This device complies with of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Labelling: Changes or modifications to this unit not expressly approved by the manufacturer could void the user's authority to operate the equipment.

*Select Models Only This product has WiFi capability and requires Internet connectivity and a wireless router to enable interconnection with an Energy Management System, and/or with other external devices, systems or applications.

NOTE: The image shown here is for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO / SC: 9-15-2025

Elbrd: J.L.

SHMDL: PPHV10WWF

OBPN: 49-5000913Rev.0

8 1 4 1 0 0 5 7 0

