



RECIPE BOOK NOT INCLUDED

NINJA SIZZLE™ GRILL AND GRIDDLE



IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

 
WARNING To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
- This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- To reduce the risk of fire, **DO NOT** place on or near a hot gas or electric burner or in a heated oven.
- Ensure the surface is level, clean and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- ALWAYS** ensure the appliance is properly assembled before use. **DO NOT** place appliance on or near a gas oven or electric stovetop, or in a heated oven.
- When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for air circulation.
- DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.
- DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and **contact a service center**.
- NEVER** use outlet below countertop surface.
- DO NOT** place appliance and let cord hang over edges of tables, counters or touch hot surfaces.
- Only use recommended accessories included with this appliance or authorized by SharkNinja. The use of accessories or attachments not recommended by SharkNinja may cause a risk of fire or injury.
- Before placing any accessory into the cooker, ensure they are clean and dry.
- DO NOT** move the appliance when in use.
- DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
- DO NOT** touch accessories during or immediately after cooking. The grill grate becomes extremely hot during the cooking process. Avoid physical contact while removing the accessory from the appliance. To prevent burns or personal injury **ALWAYS** use care when interfacing with product. Recommend use of long-handled utensil and protective hot pads or insulated oven mitts.

- DO NOT** use this appliance for deep-frying.
- To prevent possible illness, **ALWAYS** use an external food thermometer to check that your food is cooked to the recommended temperatures.
- Should a grease fire occur or the unit emits black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
- Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- To disconnect, turn unit to "OFF," then unplug from socket when not in use and before cleaning.
- Allow to cool before cleaning, disassembling, putting in or taking off parts, or storing.
- DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Cleaning and user maintenance shall not be done by children.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

SAVE THESE INSTRUCTIONS.

GETTING TO KNOW THE NINJA SIZZLE™ GRILL AND GRIDDLE

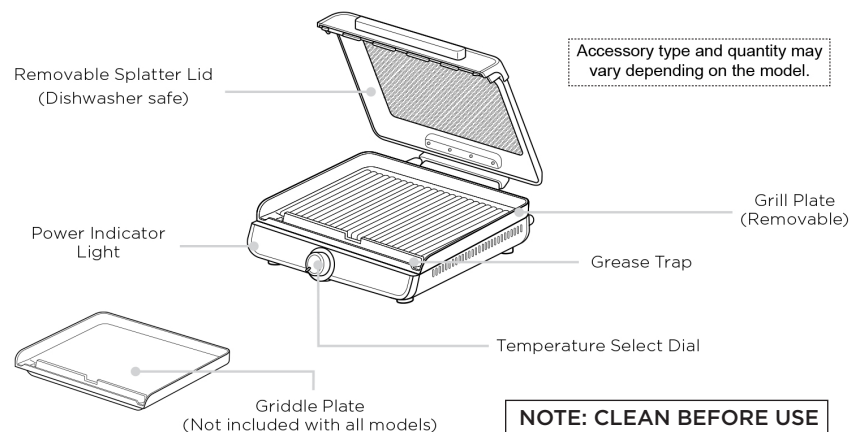

BEFORE FIRST USE

- Remove and discard any packaging material from the unit.
- Remove all accessories from the package and carefully read the manual before use. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- Wash the grill and griddle plates with a damp, soapy cloth, then wipe with a clean, damp cloth and dry thoroughly. **NEVER** submerge the main unit in water.
- We recommend turning the unit on and running it on 400°F for 10 minutes without adding food. Make sure the area is well ventilated. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the grill.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so, you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

HOW TO HAVE A VIRTUALLY SMOKE-FREE EXPERIENCE

Always use the recommended grill settings. Our chef-designed temperature settings maximize grill flavors and textures while minimizing smoke.

325°F	375°F	400°F	500°F
When using thicker barbecue sauces Burgers	Frozen meats Marinated proteins or proteins with sauce Bacon Steaks Chicken Salmon	Hotdogs Pancakes Fried eggs Grilled cheese	Veggies Fruit Fresh/Frozen seafood

If using oil or fat during the cooking process, we recommend using oils with high smoke points. For best results, Canola, Refined Coconut, Avocado, Vegetable, or Grapeseed oils are recommended. Olive Oil, Butter, Margarine, or aerosol cooking sprays are NOT recommended.

COOKING WITH THE NINJA SIZZLE™ GRILL AND GRIDDLE

- To install the grill or griddle grate, position it over the base with the grease trap toward the front. Place the cooking grate down ensuring the sides align with the exterior of the base.
- Make sure the unit is plugged in, then turn the dial to the desired temperature. The power indicator light will illuminate.
- Allow the grill to preheat with the lid closed for 7 minutes before cooking.
- When preheat is complete, open the lid and place ingredients on the grill grate.
- Once ingredients are cooked to the desired doneness, remove from the grill and turn the dial until it clicks into the "OFF" position. The power indicator light will turn off.
- To remove the grill or griddle grate for cleaning, ensure the dial is in the "OFF" position, and the unit is unplugged and has had sufficient time to cool. Open the lid and lift the cooking grate straight up by grabbing the vertical walls along the edge of the cooking surface.

NOTE: Ninja Sizzle Grill and Griddle can be used with the lid open or closed.

NOTE: The griddle plate is not included on all models.

INSTALLING AND REMOVING THE SPLATTER LID

- After allowing the unit to cool, remove the lid by opening it until it is approximately vertical (Figure 1). Then lift the lid straight up out of the hinge base.
- To install the lid, hold it vertically with the handle facing up and the hinge pivots over the hinge base (Figure 2). Ensure that the flat sections of the hinge pivots are oriented vertically (Figure 3). Lower the lid hinge pivots into the hinge base, then close the lid.



Figure 1

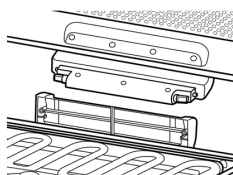 


Figure 2

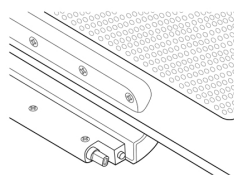 


Figure 3

The images shown in this manual are for illustrative purposes only and may be subject to change.

CLEANING YOUR GRILL AND GRIDDLE

The unit should be cleaned thoroughly after each use. Always let the appliance cool before cleaning.

- Unplug the unit from the wall outlet before cleaning. Keep the lid open after removing your food to allow the unit to cool quicker.
- To prolong the nonstick coating of the grill and griddle plates, we recommend hand-washing in warm, soapy water then air or towel-drying all parts. The splatter lid is dishwasher safe.

- If food residue or grease is stuck on the grill grate, splatter lid, or any other removable part, soak in warm, soapy water before cleaning.

- To clean the base heating unit of the grill, use a damp, soapy cloth, then wipe with a clean, damp cloth and dry thoroughly.

NOTE: NEVER use abrasive tools or cleaners. **NEVER** immerse the main unit in water or any other liquid. Do not place in dishwasher.

TROUBLESHOOTING GUIDE

- Why is the unit emitting smoke?**
When using the Grill function, always select the recommended temperature setting. Recommended settings can be found in the Quick Start Guide and in the Inspiration Guide. Make sure the splatter shield is installed.
- Why did a circuit breaker trip while using the unit?**
The unit uses 1450 watts of power, so it must be plugged into an outlet on a 15-amp circuit breaker. Using an outlet on a 10-amp breaker will cause the breaker to trip. It is also important that the unit be the only appliance plugged into an outlet when in use. To avoid tripping a breaker, make sure the unit is the only appliance plugged into an outlet on a 15-amp breaker.

TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and/or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.Consumer-ServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Attn: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____
STATE: _____
ZIP CODE: _____
PHONE: _____
E-MAIL: _____
MODEL: _____
SERIAL NO.: _____

PRINTED IN MEXICO / Elbrd: J.E / SC:01-15-2024 /
OBPN: GR101Series_IB_MP_Mv1_LR
SHNMDL:GR101_B / Add:GR101A
Rev.01_2P / Elbrd:J.M_28-08-2024

814100161A

