


KEURIG®

Let's get brewing.

K•Crema™

SINGLE SERVE COFFEE MAKER

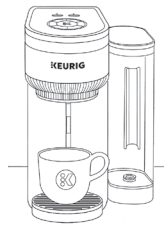

“Recipe Book not included”

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. READ ALL INSTRUCTIONS.
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. Close supervision is necessary when any appliance is used by or near children.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment or contact a service center.
11. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter or touch hot surfaces.
14. Do not place on or near a hot gas or electric burner or in a heated oven.
15. Never add to container while appliance is operating.
16. Container must be properly in place before operating appliance.
17. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
18. Do not use appliance for other than intended use.
19. Use brewer in upright position only.
20. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
21. Avoid spilling any liquid substances on powered connectors.
22. Do not remove the water reservoir or lift the handle once the **BREW** button has been pressed until the brew has completed.
23. **PRESSURE LOCK:** Lower the handle completely to close the lid. Once **PRESSURE** mode is selected, the brew chamber lock will automatically engage. The **BREW** button will no longer illuminate and the lock will disengage once the brew has completed.

1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
3. **WARNING:** Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
4. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
5. **CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
6. **WARNING:** The appliance has a polarized plug (one blade is wider than the other); to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**
 - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power-supply cords or extension cords are available and may be used if

- care is exercised in their use.
- c. If a long detachable power-supply cord or extension cord is used:
- i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
8. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/ other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

WARNING
RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.


SAVE THESE INSTRUCTIONS

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

K•Crema™

SINGLE SERVE COFFEE MAKER


- A. Control Panel
B. Brewer Handle
C. Removable Water Reservoir & Lid
D. Removable Drip Tray
E. K-Cup® Pod Holder
F. Adjustable Drip Tray Levels

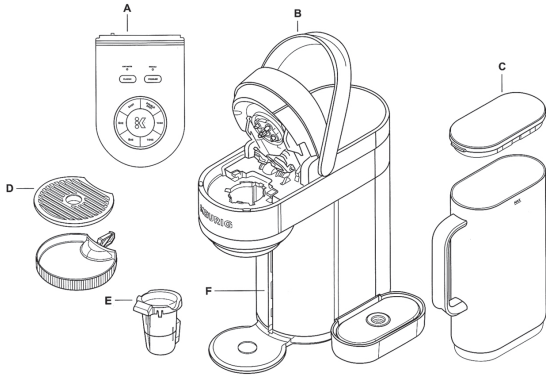

NOTE: Before first use, wash all removable parts with hot, soapy water. Rinse and dry.

NOTE: The actual number of accessories may vary depending on the model.

CONTROL PANEL OVERVIEW

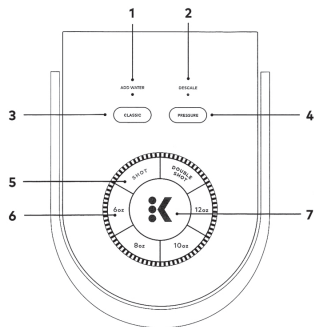

1. Add Water
2. Descale
3. Classic
4. Pressure
5. Shot & Double Shot
6. Brew Sizes
7. Brew Button

Starts your brew and remains illuminated during brew; brew is complete when button is no longer illuminated.
Power On
Lift the brewer handle or press any button.
Power Off
Press and hold either **CLASSIC** or **PRESSURE** for 3 seconds.

The actual descriptions of control panel and their locations may vary, depending on the model.

BEFORE YOU BREW

- 1 Plug & Place**
Remove packing tape from brewer and plug into an outlet.
Place a 12 oz mug on the drip tray.
- 2 Rinse & Fill**
If you have a Keurig® Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions. Rinse water reservoir before filling with fresh water to the **MAX FILL** line. Replace water reservoir, making sure it is secure on the brewer.
NOTE: Do not use distilled water.
- 3 Cleansing Brew**
Lift and lower the handle. Do not insert a K-Cup® pod. Press the **CLASSIC** button, select **8 oz**, and press the blinking **BREW** button to begin the cycle. The cycle is complete when the **BREW** button is no longer illuminated. Empty the mug and place it back on the drip tray.

BREW YOUR FIRST CUP

- 4 Place Mug & Pod**
Adjust the drip tray to best fit your mug size or remove drip tray to accommodate travel mugs. Place your mug.
Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.
Do not remove the foil lid on the K-Cup® pod.
- 5 Brew & Enjoy!**
Select your brew pressure, **CLASSIC** or **PRESSURE**. Choose your brew size and press the **BREW** button to start the brew.
Do not open the handle until the brew is complete and the **BREW** button is no longer illuminated.

HOW TO RECYCLE K-CUP® PODS IN THREE STEPS

*Not recycled in these communities. Visit Keurig.com/recycleable to learn more.

BREWER FEATURES

- PRESSUREINFUSION TECHNOLOGY™**:** Extracts coffee flavor with over 5X more pressure¹ for crema-topped coffee and espresso-style shots.
- PRESSURE LOCK:** Automatically engages during a pressure brew. When the brew is complete and the **BREW** button is no longer illuminated, the lock will disengage.
- CLASSIC BREW:** Provides the same great Keurig® experience you know and love. Use for coffee, cocoa, one-step latte, tea, and refresher K-Cup® pods.
- MULTISTREAM TECHNOLOGY™:** Saturates the grounds more evenly to extract full flavor and aroma.
- ADJUSTABLE DRIP TRAY:** 4 height options for various mug sizes. Remove tray for travel mugs.
- POWER ON:** Lift the handle or press any button to power on.
- POWER OFF:** Your brewer will automatically turn off after 5 minutes. You can also press and hold **PRESSURE** or **CLASSIC** for 3 seconds to turn off your brewer.
- DESCALE:** The descale light will illuminate to indicate descaling is required (see Caring For Your Brewer section for more instructions).

*Designed for use with coffee and espresso beverages. Not compatible with fiber and mesh pods.
†Compared to a standard Keurig® brewer.

CARING FOR YOUR BREWER

DESCALING YOUR BREWER: Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. In order for the descale light to turn off, you must enter Descal Mode by pressing the **12 oz** and **8 oz** buttons. For more information on the descaling procedure, go to [keurig.com/descale](https://www.Keurig.com/descale).

HIGH ALTITUDE MODE: To ensure your brewer works properly at higher altitudes (5,000 feet), enable the High Altitude Brewing Mode on your coffee maker by pressing and holding the **BREW** button and **8 oz** button for 3 seconds. The **12 oz** button will flash twice to confirm that the High Altitude Mode has been enabled. To disable High Altitude Brewing Mode, repeat. The **8 oz** button will flash twice to confirm that the High Altitude Mode has been disabled.

HIGH ALTITUDE BREWING: When brewing in High Altitude Mode, with the handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle. Then close the handle.

ALL REMOVABLE PARTS: Periodically hand-wash removable parts with warm, soapy water and rinse clean.


For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule.

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descal notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

(Descaling solution not included)

CARING FOR YOUR BREWER

If you experience changes in your coffee quality or crema, and if you frequently use flavored K-Cup® pods, cocoas, or one-step lattes, it might be time to clean your K-Cup® pod holder.

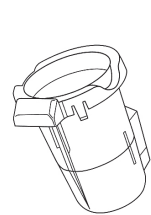

K-Cup® Pod Holder

To remove the K-Cup® pod holder, lift the handle and grasp the top of the K-Cup® pod holder with one hand while pushing up on the bottom of the K-Cup® pod holder from underneath with the other hand. To remove the bottom funnel, pinch the textured ridges together while pulling in the direction of the arrows.

Rinse

Rinse the two pieces of the pod holder under a faucet.

Reassemble Pod Holder

After cleaning, align the bottom funnel with the K-Cup® pod holder, using the snaps as a guide, and push into place.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

NOTE: Always remove and dispose of the used K-Cup® pod after brewing or as part of the daily cleaning routine.

Note: The image shown here is for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO / Elbrd: A.M / SC: 12-12-25
SHDML: KCK91SBK OBPB: AW0000001183 REV.A

8 1 4 1 0 0 6 9 6

