

KEURIG® Let's get brewing.

K-Mini Mate™
SINGLE SERVE COFFEE MAKER

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.

- For household use only.
- Do not use distilled water.
- Scalding may occur if the handle is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only.
- Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
- Avoid spilling any liquid substances on powered connectors.
- Do not remove the water reservoir or lift the handle once the **BREW** button has been pressed until the brew has completed.

- WARNING:** Keep all plastic bags away from children.
- CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
- WARNING:** Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
- WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
- CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- WARNING:** This appliance has a polarized plug (one blade is wider than the other); it is intended to fit into a polarized outlet only one way to reduce the risk of electric shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- POWER CORD INSTRUCTIONS:**
 - A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
- CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

SAVE THESE INSTRUCTIONS

**WARNING**
RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN


WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE

PRINTED IN MEXICO / Elbrd: A.M / SC: 12-11-25
SHDML: KMMK88COLORS OBPN: AW0000001137 REV.A

8 1 4 1 0 0 6 9 1



"Recipe Book not included"

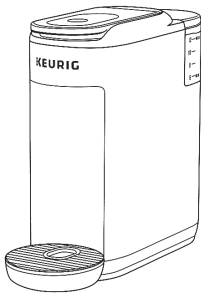


Brewer Overview



NOTE: The actual number of accessories may vary depending on the model.

 Before You Brew

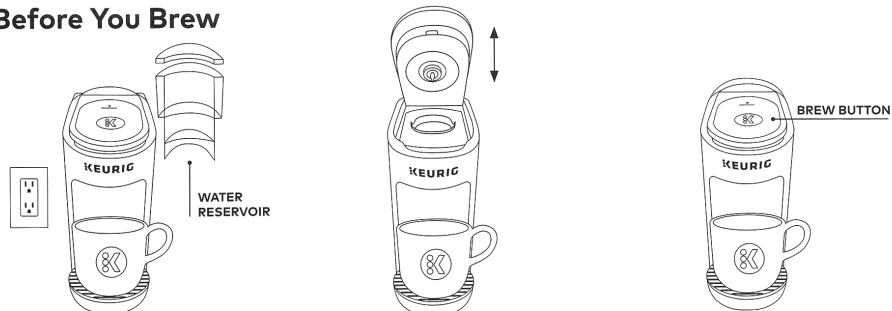

1 Rinse & Fill

Plug the brewer in. Remove the water reservoir by lifting it straight up from the brewer. Remove the lid and rinse the reservoir with fresh water. Fill the reservoir with fresh water up to the 8 oz line. Replace the lid. Replace reservoir, making sure it is seated properly in the brewer. Place a large mug (10 oz minimum) on the drip tray.

NOTE: Do not use distilled water.

2 Open & Close

Open the handle by lifting straight up as shown. **Do not insert a K-Cup® pod.** Close the handle by pushing straight down. The **BREW** button will blink, indicating the handle is closed properly.

3 Cleansing Brew


Press the blinking **BREW** button; the **BREW** button light will remain illuminated while brewing. Brewing is complete when all lights turn off. Pour the hot water into the sink.

Do not remove the water reservoir or lift the handle once the BREW button has been pressed until the brew has completed.

The one-time setup process is now complete and you are ready to brew!

The actual descriptions of control panel and their locations may vary, depending on the model.

Brew Your First Cup

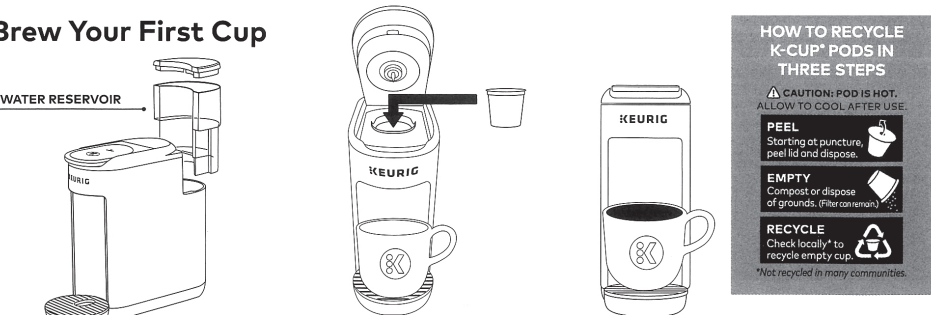

4 Fill Reservoir

Remove the water reservoir by lifting it straight up from the brewer. Remove the lid and fill reservoir with water to the desired brew size. Replace the lid. Replace reservoir, making sure it is seated properly in the brewer.

NOTE: Do not use distilled water.

5 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the counter in the drip tray location. Open the handle and place a K-Cup® pod in the K-Cup® pod holder. Close the handle by pushing straight down. The **BREW** button will blink, indicating the handle is closed properly.

Do not remove the foil lid on the K-Cup® pod.

6 Brew & Enjoy!

Press the blinking **BREW** button; the **BREW** button light will remain illuminated while brewing. Brewing is complete when all lights turn off.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

Note: The image shown here is for illustrative purposes only and may be subject to change.

Brewer Features

BREW 6, 8, 10 OR 12 oz SIZES: Fill the water reservoir to the desired brew size.

TRAVEL MUG FRIENDLY: Remove the drip tray to accommodate travel mugs up to 7.25" tall.

REMOVABLE WATER RESERVOIR: For easy filling.

COMPATIBLE WITH THE KEURIG® MY K-CUP®: Brew your own ground coffee (sold separately).

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

AUTO OFF: Automatically turns your brewer off 5 minutes after the last brew for energy savings, but will be ready to brew as soon as it is powered on again.

HIGH ALTITUDE: To ensure your coffe maker works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your coffee maker.

ENABLE HIGH ALTITUDE MODE:

- Begin with the brewer unplugged.
- While holding down **BREW** button, plug the brewer into power outlet. Continue holding the **BREW** button and wait until the **DESCALE** light illuminates; after 5 seconds, release the **BREW** button. The **DESCALE** light will turn off after a short time, indicating High Altitude Mode has been enabled.

DISABLE HIGH ALTITUDE MODE:

- Begin with the brewer unplugged.
- While holding down **BREW** button, plug the brewer into power outlet. Continue holding the **BREW** button and wait until the **DESCALE** light blinks once, then remains illuminated; after 5 seconds, release the **BREW** button. The **DESCALE** light will turn off after a short time, indicating High Altitude Mode has been disabled.

Caring For Your Brewer

Descaling Your Brewer: Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. For more information on the descaling procedure, go to keurig.com/descale.

Keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your brewer

*To turn off Descale notification, follow the full descaling procedure as outlined in this guide.


If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid and drip tray with warm, soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Removing & Cleaning K-Cup® Pod Holder

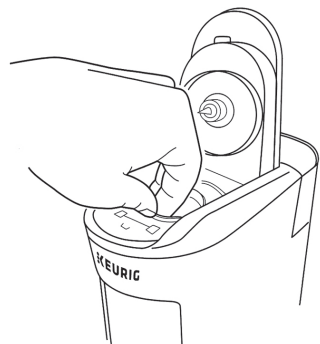

REMOVING:

To remove the K-Cup® pod holder from the coffee maker, with the handle open, grasp the lip on the K-Cup® pod holder and firmly lift upward. The K-Cup® pod holder will detach from the brewer and lift straight out.

CLEANING:

The K-Cup® pod holder can be washed in the sink using a mild dish soap or placed in the top rack of the dishwasher.

After cleaning, replace the K-Cup® pod holder in the brewer and press firmly until you hear the latches snap into place.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Descaling Procedure (Descaling solution not included)

NOTE: The full descaling procedure must be completed to turn off the **DESCALE** light.

Before you begin, you will need a large ceramic mug (14 oz minimum), fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no pod in the K-Cup® pod holder. The descaling procedure takes approximately 10-15 minutes.

STEP 1: Prepare the Brewer

To activate Descale Mode, begin with the brewer plugged in and all lights off, then press and hold the **BREW** button for 5 seconds. When the **BREW** button and **DESCALE** light are flashing, Descale Mode is activated.

STEP 2: Descale the Brewer

Pour one-half (7 oz) of the Keurig® Descaling Solution into the water reservoir, then add fresh water to the 12 oz fill level. Place a large ceramic mug on the drip tray plate. Press the **BREW** button to start the descaling process. Once the brew is complete, pour the hot liquid into the sink.

Repeat the last step by pouring the last half (7 oz) of the Keurig® Descaling Solution into the water reservoir, then add fresh water to the 12 oz fill level. Place a large ceramic mug on the drip tray plate. Press the **BREW** button to continue the descaling process. Once the brew is complete, pour the hot liquid into the sink.

STEP 3: Fresh Water Rinse

Rinse the reservoir and fill with fresh water to the 12 oz fill line. Press the **BREW** button to start the rinsing process. Once the brew is complete, pour the liquid into the sink. Continue by refilling the reservoir to the 12 oz fill line with fresh water. Press the **BREW** button to do another rinse. Once the brew is complete, pour the liquid into the sink. The brewer has now exited Descale Mode and is ready for use.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.