



Makes Real Cotton Candy • Uses Real Sugar • Fun & Easy to Make
Parental Supervision is Required. Not to be used as a Toy.

Important Notes – Read this first

- Read all the instructions.
- Base unit should be wipe-cleaned only.
- DO NOT immerse Base unit in water.
- DO NOT place hand in bowl. Use handles or knobs.
- USE ONLY dry sugar.
- DO NOT unplug until machine stops.
- NEVER place Plug, Cord in or near water or liquid.
- NEVER use the machine on a bed or other flammable surface.
- Plug is 120VAC 60Hz 100W
- For each 38 minutes of operation, there is a 5 minute cooling cycle.
- During operation if you need to interrupt making cotton candy, DO NOT shut off the machine. Leave it ON. DO NOT unplug. It will automatically stop after a 38 minute cycle.
- DO NOT open the bowl while it is hot.
- Open only after it has automatically stopped after a 38 minute cycle.
- Clean all components with warm water after each use. See instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all the instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, contact a service center.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

NOTES: - In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

- Accessory type and quantity may vary depending on the model.

- The images shown in this manual are for illustrative purposes only and may be subject to change.

OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.


b) Longer extension cords are available and may be used if care is exercised in their use.

c) If a extension cord is used,

1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance and

2) The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.


Before Beginning – Not Suitable for Children Under 14 Years of Age

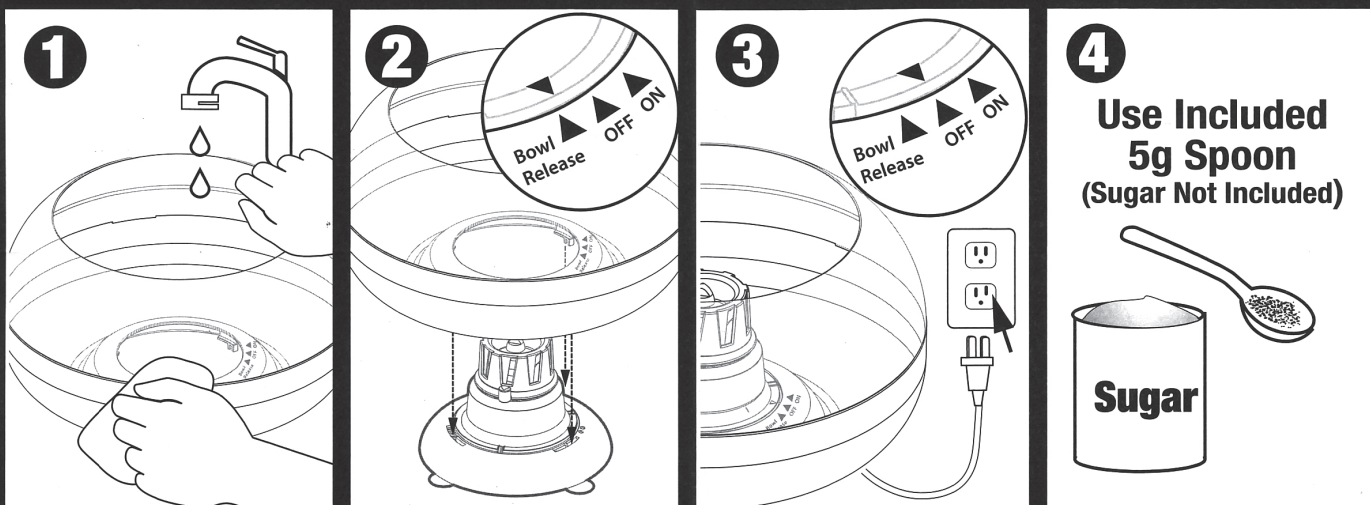

Colored Sugar Refill Kits Available
(Purchase Separately - Not Included)




Assembling The Machine - Cap Removal Tool is Connected To the Plug

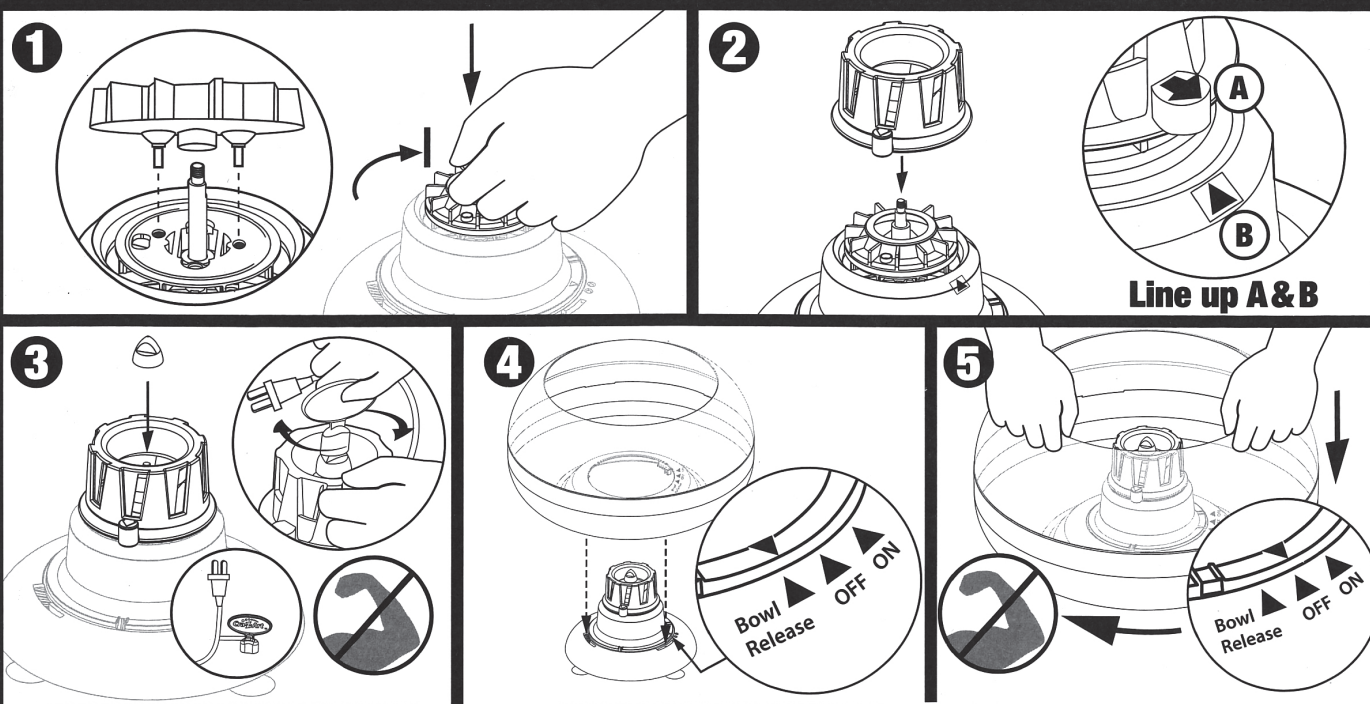

How To Make Cotton Candy – Not Suitable for Children Under 14 Years of Age

1

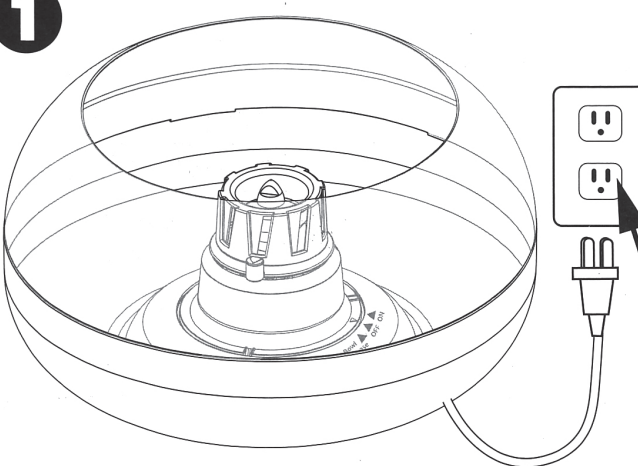


Plug In Unit

2



Turn Bowl To "ON"
Wait For Green

3

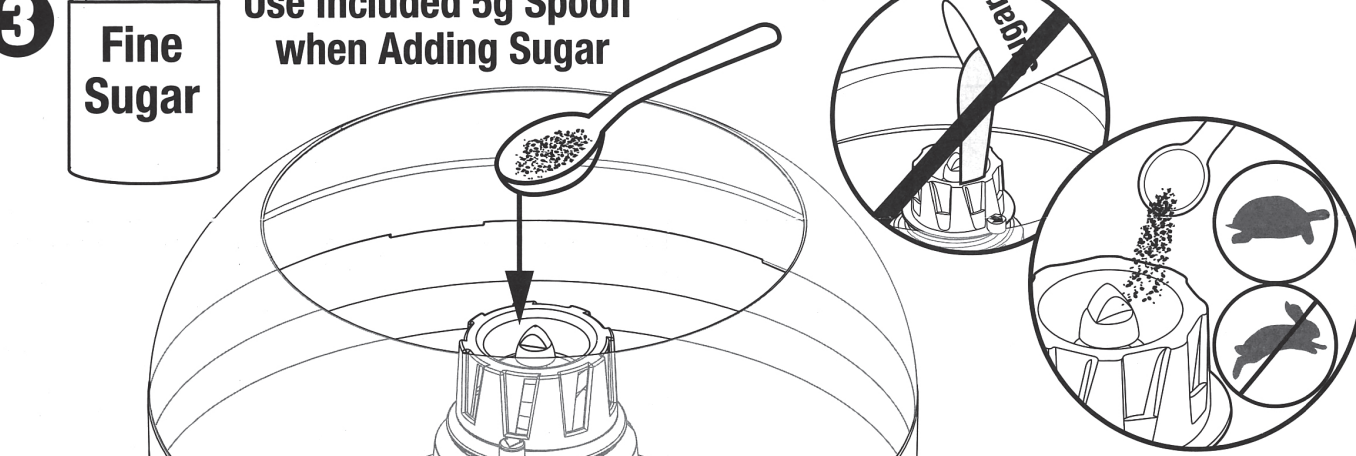

Fine Sugar

Use Included 5g Spoon when Adding Sugar


*** IMPORTANT: Pour 5g Sugar Very Slowly Into Unit Cap Or It Will Clog**

4



Use Paper Cone Tip To Spread Sugar Evenly

5

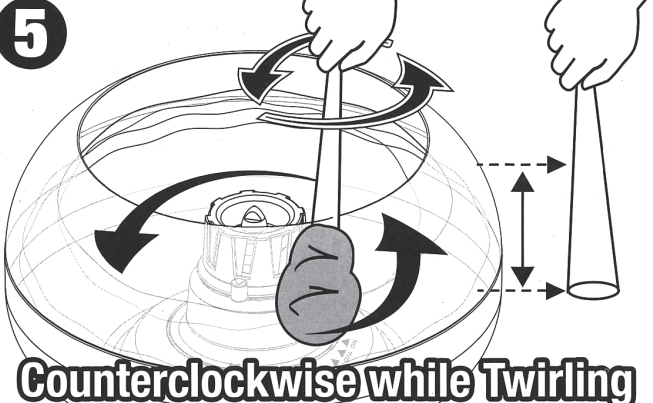

Counterclockwise while Twirling

* If Sugar Is Coming Out Slow, Or Stuck In Cap, Use The Cone End To Spread And Force It Down

* Some Sugar Granules May Not Melt And Shoot Into The Bowl. This Is Normal.

Cleaning Machine After Use and Cool Down Mode


Wait for machine to shut off after FULL 38 Minute Cycle

1




Bowl Release OFF ON

2

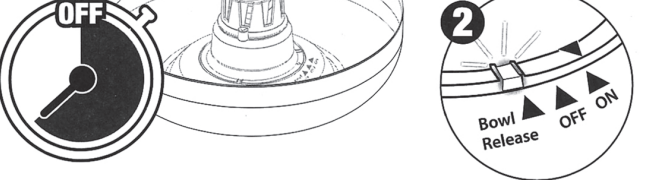


Bowl Release OFF ON

2

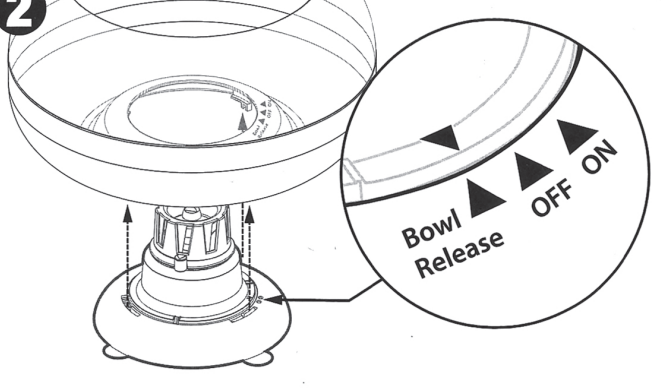


Bowl Release OFF ON

3

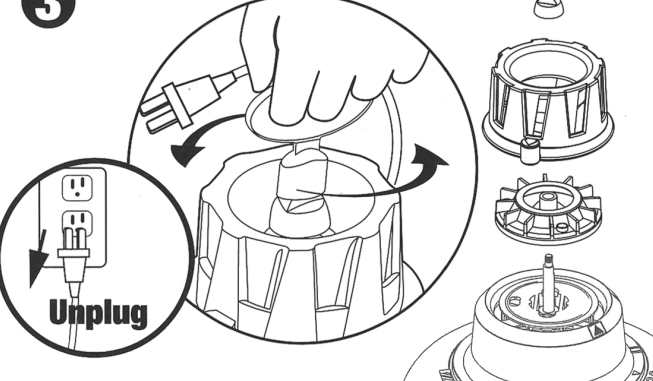


Unplug

4

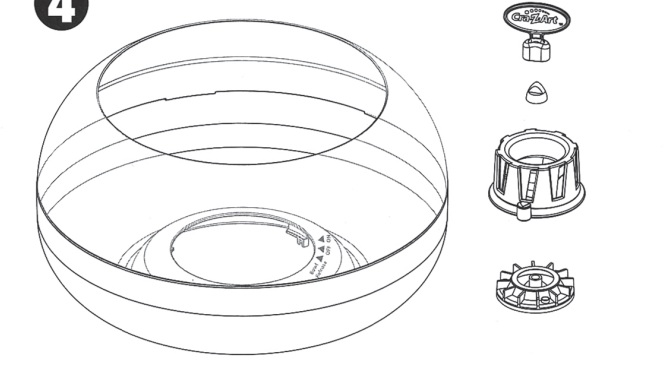


5

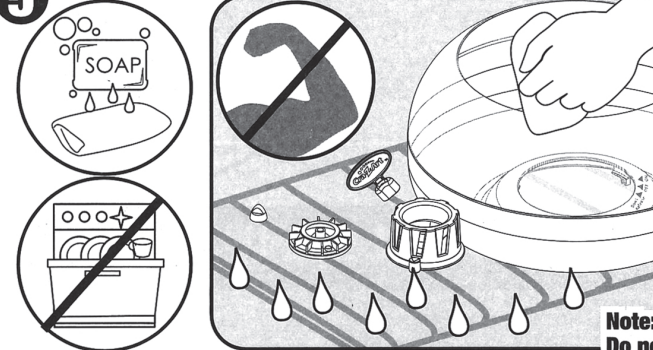

SOAP

Note: Do not immerse in water

5

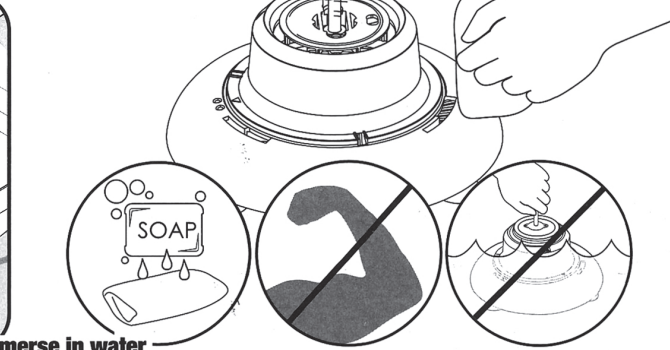

SOAP

DO NOT SUBMERGE PLUG OR UNIT UNDER WATER
Any other servicing other than shown, should be performed by an authorized service representative.
FOR HOUSEHOLD USE ONLY

