



PRECISION TEMPERATURE KETTLE

OWNER'S GUIDE

TECHNICAL SPECIFICATIONS

Voltage: 120V~ 60Hz

“RECIPE BOOK NOT INCLUDED”

804106933



IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE • HOUSEHOLD USE ONLY

Read all instructions before using your NINJA® PRECISION TEMPERATURE KETTLE

When using electrical appliances, basic safety precautions should always be followed, including the following:

⚠ WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT force into outlet or try to modify to fit.
- Keep the appliance and its cord out of reach of children. Do not allow children to play or use the appliance. Close supervision is necessary when used near children.
- To protect against fire, electric shock, and injury to persons, **DO NOT** immerse cord, plugs, or body of machine in water or other liquid.
- NEVER** carry the appliance by the power cord or pull it to disconnect from electrical socket; instead grasp the plug and pull to disconnect.
- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- DO NOT** use extension cords, external timers or separate remote-control systems with this product. Regularly inspect the power cord.
- DO NOT** operate the kettle with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Contact a Service Center.
- For household and countertop use only.
- DO NOT** let the power cord hang over the edge or touch hot surfaces such as the stove.
- NEVER** use socket below counter.
- ALWAYS** place kettle on base first, then plug cord into outlet.

- To avoid risk of fire, electrical shock, or damage to the unit, **DO NOT** use unit in an appliance garage or under a wall cabinet.
- Turn off and allow to cool before putting on or taking off parts, and before cleaning the appliance
- Unplug from outlet when not in use and before cleaning.
- DO NOT** use kettle with any other base.
- ALWAYS** use appliance on a clean, dry, level surface.
- DO NOT** place on or near a hot gas, electric or induction burner/hob or in a heated oven.
- DO NOT** use this appliance for anything other than its intended use.
- DO NOT** use outdoors.
- To avoid scalding from steam and hot surfaces use the handle. **DO NOT** touch metal surface or reach across top of spout and opened lid when operating.
- DO NOT** use the kettle to store food when not in use.
- DO NOT** place kettle in microwave.
- DO NOT** drink directly from the kettle. Liquid from the kettle may be very hot.
- DO NOT** fill kettle with anything other than water, as other liquids may damage your kettle.
- DO NOT** overfill the kettle. Fill water only to the MAX line.
- DO NOT** run the appliance without water. If activated without water, allow to cool minimum of 10 minutes before filling.
- Exceeding maximum water level capacity may cause overflow.
- Kettle **MUST** remain upright when moving or carrying to avoid skin burns and scalding.
- DO NOT** place kettle or base in dishwasher.
- DO NOT** immerse kettle or base in water.
- DO NOT** clean with abrasive cleaners, steel wool pads, or other abrasive materials.
- Allow the appliance to cool before removing any parts and before cleaning.
- If the product is not operating properly, contact a Service Center.
- Cleaning and user maintenance shall not be made by children.

	Indicates to read and review instructions to understand operation and use of product.
	Do not immerse in liquid.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

READ AND SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

- Remove and discard any packaging material.
- Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to prevent any injury or property damage.
- Press the lid release button to open the lid and fill the kettle with water to MAX 1.7 L (7 cups) line.
- Close the lid by pressing the cool-touch pad until it locks closed.
- Make sure the power base is plugged in, then place the kettle on the base ensuring that it is fully seated.
- Press the BOIL button on the control panel, then press START/STOP to begin the heating process.
- Once the water reaches 212°F, the kettle will beep to indicate that it has finished.
- Lift the kettle off the base and discard the water. Repeat this process one more time to ensure the kettle is clean and ready for use.

PARTS

- A** Pour Spout


B Removable & Washable Scale Filter

C Cool-Touch Pad

D Lid Release Button
- E** Water Level Gauge


F Power Base (power cord & storage not shown)

G Control Panel

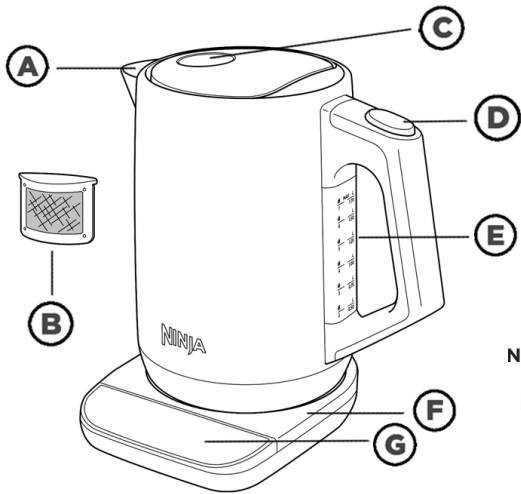

NOTE: The image shown here is for illustrative purposes only and may be subject to change.

GETTING TO KNOW YOUR KETTLE

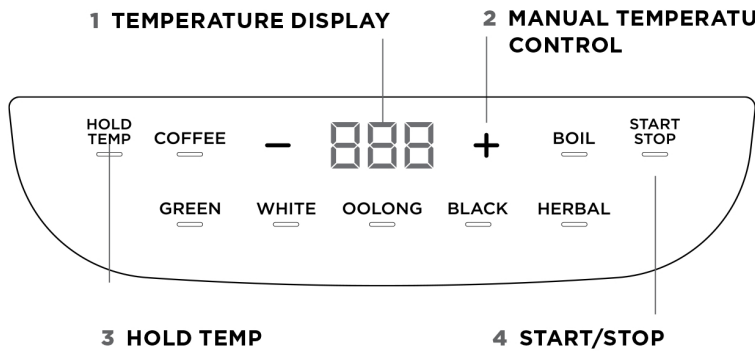

NOTE: The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

7 One-Touch Presets:

GREEN: 175°F
WHITE: 185°F
OOLONG: 195°F
COFFEE: 200°F
BLACK: 205°F
HERBAL: 210°F
BOIL: 212°F

Refer to the tea chart for more information.

NOTE: The temperature accuracy of the kettle is +/- 5°F.

1 Temperature Display:
Live Temperature Readout: When the kettle is placed on the base, the temperature display will show the current temperature of the water inside. Once a preset or +/- button is pressed, the selected temperature will be shown. When a heating cycle is started, the temperature display will show the current temperature of the water to track progress.

NOTE: To change the temperature display from Fahrenheit to Celsius, press and hold the HOLD TEMP and + buttons for 5 seconds.

2 Manual Temperature Control:

Manually customize the water temperature using the + and - buttons to increase or decrease by 5°F increments from 105°F to 212°F.

3 Hold Temp:

Press to turn on/off the Hold Temp feature, which holds water at the selected temperature for up to 30 minutes

4 START/STOP:

Press to begin a heating cycle. Press again to stop heating.

Automatic Shutoff: The kettle will automatically stop once the selected temperature has been reached.

USING YOUR KETTLE

POWERING ON

To turn on the kettle, unwind the cord from the cord wrap and plug the power cord into the socket. Unwind only the amount of cord necessary to reach the socket. The control panel will automatically turn on once plugged in.

NOTE: The temperature displayed will always return to the temperature last selected when the kettle was in use.

POWERING OFF

The kettle will automatically power off after 5 minutes of inactivity. To manually power off, press and hold the START/STOP button for 3 seconds. To turn on the kettle, press any button on the control panel or lift the kettle off the base.

HEATING WATER

IMPORTANT: Heat only water inside the kettle. Never heat or boil any other liquids. Never steep tea or coffee directly in the kettle.

- Press lid release button to open the lid and fill the kettle with fresh water.
- Check the desired amount of water by reading the water level gauge or internal markings. The energy consumption of the kettle can be optimised by heating only the minimum amount of water required.

NOTE: The MIN. 0.25 L level measure is inside the kettle. Water marks on the exterior show 0.5 L-1.7 L.

NOTE: Always fill to at least the MIN 0.25 L fill level and do not exceed the MAX 1.7 L fill level.

NOTE: For best results, fill to at least 0.5 L when heating below 160°F.

- Ensure the lid is completely closed and position the kettle securely onto the base. **DO NOT** open the lid during a heating cycle.



- Select your desired temperature on the control panel.

Presets: Beverages (Green, White, Oolong, Coffee, Black, Boil)

Manual: Press the +/- buttons to manually set the temperature in 5°F increments from 105°F to 212°F

- Press START/STOP once to start the heating cycle. The button will illuminate orange, the water window will illuminate, and the display will show the current temperature as it climbs.

NOTE: To change the temperature mid-cycle, press the desired preset or +/- buttons and the display will flash for 5 seconds with the new target temperature. To cancel the heating cycle at any time, press START/STOP.

6 When the water has reached the selected temperature, the kettle will beep and automatically switch off. If Hold Temp is selected, the kettle will continue to hold the temperature for up to 30 minutes.

NOTE: If the kettle is lifted from the base during a heating cycle, this will cancel the cycle.

NOTE: To mute the kettle, press and hold the HOLD TEMP and - buttons for 5 seconds.

HOLD TEMP
Hold Temp is the kettle’s ability to maintain the selected temperature for up to 30 minutes after a heating cycle. Select Hold Temp any time before, during,

or within 30 seconds of completion of a heating cycle to toggle it on. Press again to toggle off. While the feature is toggled on, Hold Temp will be illuminated orange on the control panel. After 30 minutes of holding the temperature, the kettle will automatically shut off.

NOTE: The HOLD TEMP will only activate after the water has reached the target temperature. If HOLD TEMP is pressed before a heating cycle, you must first start a heating cycle.

NOTE: If 212°F/BOIL is selected, the temperature will hold at 200°F for up to 30 minutes.

BOIL DRY PROTECTION
If the kettle has insufficient water when starting a heating cycle, the kettle will automatically switch off to protect from overheating and causing damage. The kettle will beep and the temperature display will read “dry” to signify that the kettle has boiled dry. Allow the kettle to cool for at least 10 minutes before refilling.

CLEANING & MAINTENANCE

WARNING: Never immerse the kettle body, base, or power cord in water or place in a dishwasher.

WARNING: Do not use chemicals or abrasive cleaners internally or externally.

- 1 Unplug the kettle and allow to cool down before cleaning.
- 2 Use a damp cloth to clean the exterior of the kettle and base. Only use non-abrasive cleaning materials.
- 3 The scale filter can be easily removed. Open the lid, then grasp the filter and slide it out by pulling upwards.
- 4 The filter can be cleaned by running under a hot water tap and rubbing with a cloth or brush.
- 5 To replace the filter, slide it back into place at the back of the spout until it snaps in.

DESCALING
Your kettle will not work properly if it is not descaled regularly. Regular descaling can increase the life of the kettle, allowing it to boil water faster and with less energy.

Scale is a naturally occurring buildup of mineral deposits caused by impurities in water, especially hard water. For best performance, descale the kettle every 4-8 weeks or whenever scale buildup is present inside.

Descaling can be completed with a descaling agent specifically designed for kettles. Follow the directions on the descaling agent package,

- OR**
- 1 Fill the kettle with equal parts water and white vinegar.
 - 2 Let sit for 30 minutes.
 - 3 Discard solution and rinse kettle thoroughly with clean water.
 - 4 Repeat this process until all deposits are removed.

TROUBLESHOOTING GUIDE

- The power base won’t turn on.**
- Make sure the power cord is securely plugged into the socket.
 - Insert the power cord into a different socket.
 - Reset the circuit breaker if necessary.
- The kettle is not heating up.**
- The overheat control may have tripped. Let the kettle cool down.
 - Ensure the kettle is fully seated on the power base.
- Hold Temp function is not working.**
- The Hold Temp function is not default and needs to be turned on or off by pressing the HOLD TEMP button. When the function is on, the button will be illuminated orange. Hold Temp will only activate when a heating cycle is active. If Hold Temp is pressed before starting a heating cycle, you must press START/STOP to start the heating cycle.
- The kettle turns off before reaching the target temperature.**
- The kettle may contain too much scale. Refer to the descaling instructions to descale the kettle.

TEMPERATURE DISPLAY MESSAGES:
dry

- There is an insufficient amount of water inside the kettle. Allow the kettle to cool for at least 10 minutes, then add fresh, room temperature water to at least the minimum 0.25 L marking and restart the heating cycle.
- If there is already water filled up to at least the minimum 0.25 L marking, please contact a Service center.

- Er**
- If the temperature display shows “Er” and then a number (ex. “Er 01”), contact a Service center.

NOTE:In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

SharkNinja Operating LLC
US: Needham, MA 02494

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents.
See sharkninja.com/patents for more information.

© 2021 SharkNinja Operating LLC

804106933





PRINTED IN MEXICO / SC: 11-14-2022_TAB

OBPN: KT200Series_IB_MP_MV5_210726

SHNMDL: KT200 / Add:KT200WMBL / ELBRD: M. C.