

CHEF iQ[®]

“RECIPE BOOK NOT INCLUDED”

Smart Cooker[™]

Download the CHEF iQ[®] app to discover recipes, control your Smart Cooker[™], and more.

DISCOVER YOUR INNER CHEF

 
At CHEF iQ[®], we’re redefining the home cooking experience by pairing intuitive hardware with unparalleled software. Your Smart Cooker[™] and the CHEF iQ[®] app seamlessly connect and synchronize data for a better culinary experience.



CONNECT YOUR SMART COOKER[™] TO THE CHEF iQ[®] APP VIA SMART PHONE OR TABLET FOR A REIMAGINED CULINARY EXPERIENCE.

Available on:



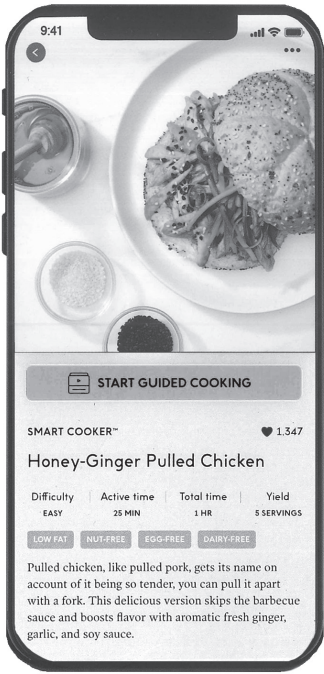

THE APP

- 

BECOME A CHEF

Cook delicious dishes right from the app with CHEF iQ[®]'s Guided Cooking, prep, and how-to videos.
- 

UPDATE OVER-THE-AIR

Your Smart Cooker[™] will get smarter over time with over-the-air firmware updates.
- 

INSTANT CALCULATIONS

Tell us what you're cooking and the CHEF iQ[®] Calculator will tell you how to get there.
- 

SAVE YOUR FAVORITES

Save presets from the app to your Smart Cooker[™] for one-touch access to your favorite foods.
- 

STAY IN THE KNOW

Keep tabs on your cooking journey with CHEF iQ[®]'s Smart Bar[™].



THE FUNCTIONS

- 

PRESSURE COOK

Pressure cooking is a method of cooking in a sealed environment to trap in steam and cook faster and more evenly.
- 

SLOW COOK

Set it and forget it – great for soups, chilis, stews, and having dinner ready when you walk in the door.
- 

STEAM

Steaming requires no added fat while preserving key nutrients and full flavors for delicious, healthy meals.
- 

SEAR/SAUTÉ

Sear foods right in the pot to boost flavor or use in place of a sauté pan to cook foods fast.
- 

FERMENT

A simple and easy way to make delicious, homemade yogurt.

THE FEATURES

- ON-UNIT PRESETS**

100+ built-in presets and functions for virtually every cooking need.
- CAPACITIVE TOUCH DISPLAY**

LCD capacitive touch display responds to just a light touch.
- WiFi ENABLED**

Pairing the Smart Cooker[™] with the CHEF iQ[®] app unlocks a world of culinary possibilities.
- 6-QUART CAPACITY**

Spacious 6-quart nonstick cooking pot fits enough to feed a crowd.
- INTEGRATED SCALE**

Use as a standalone scale or pair with the CHEF iQ[®] app for precise measurements.
- AUTO PRESSURE RELEASE**

Programmed to automatically release steam using one of three methods after pressure cooking ends.
- THE PRESSURE RELEASE METHODS**



QUICK

Quickly releases all steam (the most common method).



PULSE

 
Releases steam in small bursts (the best method for starchy foods like rice or grains).



NATURAL

Slowly releases steam (the best method for soups and stews).

SAFETY GUIDE

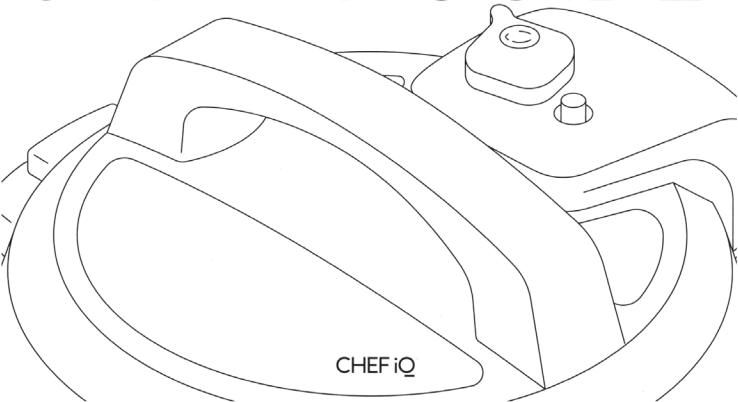

IMPORTANT SAFEGUARDS

When using electrical appliances,

Basic safety precautions should always be FOLLOWED Including the following:

1. Read all instructions.

2. Do NOT touch hot surfaces. Use handles or knobs.

3. To protect against electrical shock, do NOT immerse the power cord, plug, or housing in water and/or other liquids.

4. Close supervision is necessary when any appliance is used by or near children.

5. Unplug your Smart Cooker[™] from the outlet when not in use and before cleaning. Let it cool before putting on or taking off parts.

6. Do NOT use your Smart cooker[™] appliance with a damaged power cord or plug.

7. Do NOT use your Smart Cooker[™] if it malfunctions or has been damaged in any manner. Contact a service center.
8. The use of accessories not recommended by CHEF iQ[®] may cause injuries and/or damage to your Smart Cooker[™].

9. Do NOT use outdoors.

10. Do NOT let power cord hang over edge of table or counter. Do NOT let power cord come into contact with hot surfaces.

11. Do NOT place your Smart Cooker[™] on or near a hot gas or electric burner. Do NOT place your Smart Cooker[™] in a heated oven.

12. Use extreme caution when moving any appliance containing hot oil and/or hot liquids.
13. Always attach the power cord to your Smart Cooker[™] first, then plug the power cord into the wall outlet. To unplug your Smart Cooker[™], turn the unit off, then remove the power cord from the wall outlet.

14. Do NOT use your Smart Cooker[™] for anything other than its intended use.

Save
these
Instructions

California Proposition 65: (Applicable to California residents only).
⚠️WARNING: Cancer and Reproductive Harm – www.P65Warnings.ca.gov.

MAINTENANCE

1. Clean Smart Cooker™ cooking pot, accessories and parts after every use.

2. Unplug your Smart Cooker™ and let it cool to room temperature before cleaning.

3. The lid, condensation cup, measuring cup, rice spoon, ladle, steam rack and steam basket are all top-rack dishwasher safe.

4. Clean the condensation ring of your Smart Cooker™ with a soft cloth.

5. Remove the gasket from the underside of the lid. Wash the gasket with warm, soapy water. Dry the gasket with a soft cloth.

6. See CHEFiQ® app for video instructions on correctly placing the gasket back into the lid. Always position the gasket properly on the underside of the lid before cooking.

7. Clean the outside of the Smart Cooker™ with a damp soft cloth or sponge.

 
8. Never use harsh chemical detergents, scouring pads, or powders on any of the parts or components of your Smart Cooker™.

9. Periodically check that the valves on the underside of the lid are free of food particles. If dirty, gently wipe with a damp towel.


10. Never immerse your Smart Cooker™ and/or power cord in water or any other liquid.

11. Dry thoroughly before storing.

SHORT CORD INSTRUCTIONS

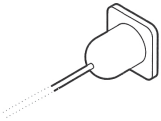

 A short power supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

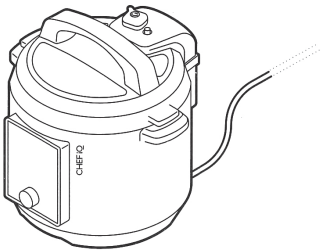

- 1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- 2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

 
POWER CORD SAFETY TIPS

- 1. Never pull or yank on cord or the appliance.
- 2. To insert plug, grasp it firmly and guide it into outlet.
- 3. To disconnect appliance, grasp plug and remove it from outlet.
- 4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced, and the power cord replaced. Please contact CHEFiQ® Support for assistance.
- 5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CHOOSE THE RIGHT SPOT!

Do NOT place the appliance on a stovetop or any other heated surface.

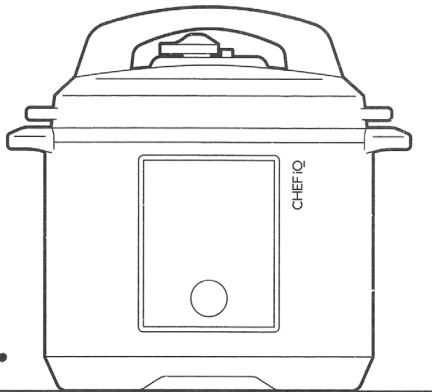

FCC STATEMENT

NOTE
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- NOTES:
- In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.
 - Accessory type and quantity may vary depending on the model.
 - The actual descriptions of control panel and their locations may vary depending on the model.
 - Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

PRINTED IN MEXICO
SHNMDL: RJ40-6-WIFI
Elbrd: J.M / SC: 01-05-2026 / OBPN: N/A

