

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY

⚠️ WARNING

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, INJURY TO PERSONS, AND HYPERTHERMIA, INCLUDING THE FOLLOWING TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, INJURY, AND HYPERTHERMIA, READ ALL THESE INSTRUCTIONS BEFORE USE.

1. Read all instructions before use.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. Unplug or disconnect the appliance from the power supply before servicing.
2. **DO NOT** operate any appliance with a damaged cord or plug. Discard appliance or return to an authorized service facility for examination and/or repair.
3. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Keep cord away from high traffic areas and place cord where it will not be tripped over.
4. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they **DO NOT** play with the appliance.
7. Cleaning and user maintenance shall not be made by children without supervision.
8. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
9. **DO NOT** handle plug or appliance with wet hands.
10. **DO NOT** use without filter in place.
11. Only use Shark™ branded filters and accessories.
12. **DO NOT** damage the power cord:
 - a) **DO NOT** pull or carry appliance by the cord or use the cord as a handle.
 - b) **DO NOT** unplug by pulling on cord. Grasp the plug, not the cord.
 - c) **DO NOT** stand the appliance on the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
13. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
14. **DO NOT** use if airflow is restricted. If the air paths become blocked, turn the appliance off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
15. **DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. **DO NOT** place appliance on unstable surfaces such as chairs or other furniture.
17. **DO NOT** use in the following areas:
 - a) Wet or damp surfaces
 - b) Outdoor areas
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
18. Turn off all controls before unplugging the appliance.
19. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
20. Hand wash with soapy water only. Washing with cleaning chemicals could damage the unit.
21. Make sure filter is in place after routine maintenance.
22. Not suitable for use with solid-state speed controls.

⚠️ BATTERY REMOVAL AND DISPOSAL

This remote control uses a AAA battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

⚠️ IMPORTANT INSTRUCTIONS

23. This heater is hot when in use. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.

24. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
25. Always unplug heater when not in use.
26. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
27. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the heater.
28. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
29. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
30. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
31. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
32. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

To avoid excessive room temperatures which can cause hyperthermia, **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

⚠️ **CAUTION** – High temperature. Keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 M) from the front of the heater and away from the side and rear.

⚠️ **WARNING** – Risk of hyperthermia.

⚠️ **CAUTION: Risk of fire** - Do not operate without base attached.

⚠️ POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. **DO NOT** use an extension cord.
3. **DO NOT** use within 10 feet of a pool and **DO NOT** use in a bathroom.

⚠️ FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on. To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

IC statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

⚠️ **WARNING: DO NOT COVER**

⚠️ **WARNING: HOT SURFACE**

READ AND SAVE THESE INSTRUCTIONS

 
PRINTED IN MEXICO / Elbrd: L.G
OBPN: TH205CO_QSG_MP_Mv13_250520
SC: 12-18-2025 / **SHNMDL:** TH205CO_B

8 0 5 0 0 1 3 9 1



QUICK START GUIDE

**HEAT MODE**

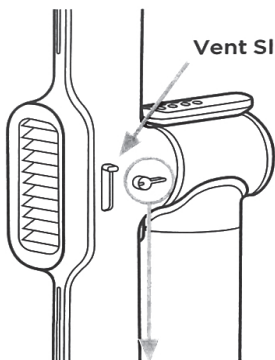
**Vent Slider**

**FAN MODE**

 Heat/Fan Dial
Rotate the dial on the pole to switch between heat or fan.

- NOTE: The images shown in this manual are for illustrative purposes only and may be subject to change.
- NOTE: The actual descriptions of control panel and their locations may vary depending on the model.
- Accessories may vary depending on the model.
- If you hold the Oscillation button for 8 seconds, while powered on, you should hear two chime/beeps and it should switch between the two units.

ON-UNIT DISPLAY

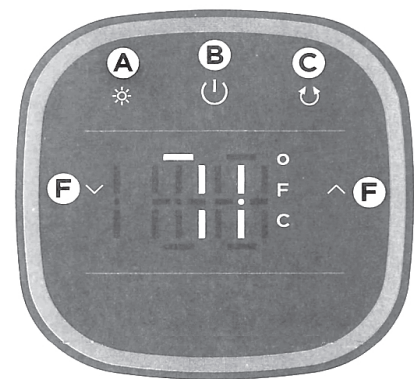


- A**  **BRIGHTNESS**
Press to adjust the brightness of the display panel. Choose between 4 levels of brightness.
- B**  **POWER**
Press to power unit on or off. It may take a moment for the unit to cool down after the heat has been turned off.
- C**  **OSCILLATION**
Press the oscillation button to cycle through oscillation range options. Setting 1 is 45 degrees, setting 2 is 90 degrees, and setting 3 is 180 degrees.
- F**  **FAN / THERMO IQ ARROWS**
When in Fan mode, the press arrows to adjust fan speed up or down. When in Heat mode, press the arrows to adjust the thermostat temperature.

REMOTE

FAN FUNCTIONS

HEAT FUNCTIONS

 SHARED FUNCTIONS

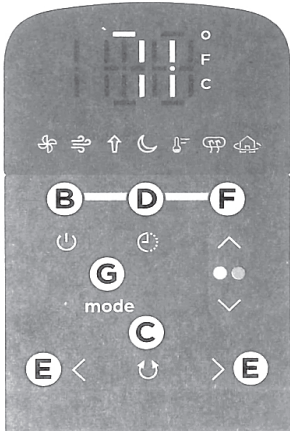

F  **SPEED ADJUST**
Press up and down arrows to scroll between fan speeds 1-10.

G  **FAN MODES**
Press to cycle between Sleep, BreezeBoost™, and Natural Breeze settings.

 Sleep mode: Mute chimes, dim lights, and switch to an ideal fan speed for sleep.

 BreezeBoost: For a powerful burst of airflow.

 Natural Breeze: Varying airflow patterns to simulate natural wind. Includes High and Low settings to better suit your needs.

F  **THERMO IQ**
Press up and down arrows to set desired temperature. The heater will automatically adjust based on your selection.

G  **HEAT MODES remote only**
Press the mode button to cycle between Defrost and Room settings.

 Comfort: Soothing warmth for sustained use. Includes High and Low settings to better suit your needs.

 Focus: Powerful, directed heating. Includes High and Low settings to better suit your needs.

C  **OSCILLATION**
Press the oscillation button to cycle through oscillation range options. Setting 1 is 45 degrees, setting 2 is 90 degrees, and setting 3 is 180 degrees.

 
D  **TIMER**
Press the timer button to cycle through timer settings. Automatically turns off power after 1, 2, 4, or 8 hours.

C  + **D**  **MUTE CHIME**
Press and hold oscillation and timer buttons for 5 seconds to mute chimes. Repeat to re-enable.


E  **ANGLE ADJUST**
Press the left and right arrows to slightly adjust the direction of fan.

PRODUCT TIPS


PIVOT AND TILT: Manually adjust the fan blade's orientation (1) and tilt (2) to personalize your airflow.
NOTE: The blade only rotates counterclockwise up to 90 degrees.

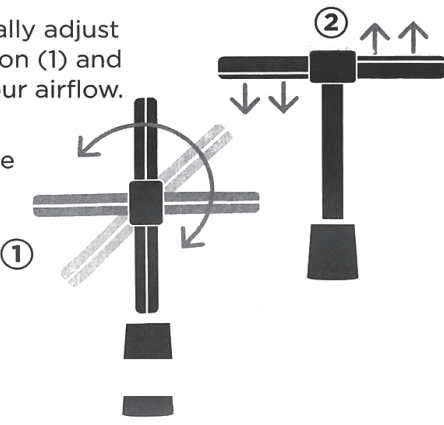

 DUST DEFENSE Panel on the rear of the unit collects the dust to make cleaning easier. Recommended to clean every 6 months or as needed.

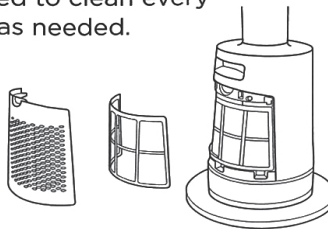

 CARRYING POSITION: Carry the unit by the handle on the base while supporting the air duct.

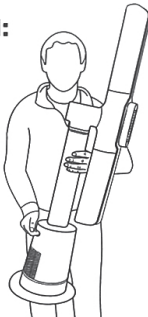

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____ ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____ PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____