


NINJA WOODFIRE™ ACCESSORIES

814100137

Adjustable Outdoor Stand XSKUNSTAND

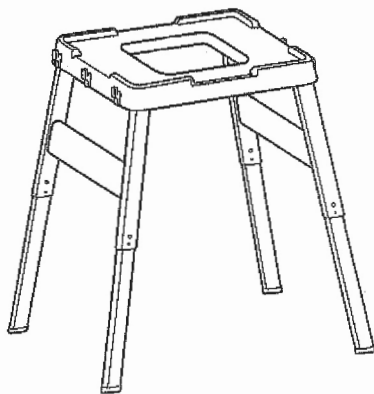

⚠ IMPORTANT SAFEGUARDS

FOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE.

Failure to follow these instructions could result in serious bodily injury or damage to property.

- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- Ensure the stand is properly assembled and secured before use.
- **DO NOT** set up or fold down stand with unit or any other objects on stand.
- Reasonable care should be followed when operating your unit attached to stand.
- **NEVER** move the stand with the unit on it.
- To avoid property damage from flames or heat, maintain a minimum distance of 3 feet from rear, sides, and top to walls, rails, or other combustible constructions.
- **ALWAYS** use on a level and stable surface. **DO NOT** use on a sloped surface as unit and cart may tip over.
- **DO NOT** attach anything other than Ninja Outdoor products to this stand
- **DO NOT** move, roll, or store stand with unit attached.
- **NEVER** use the cart as a step stool or seat.

SAVE THESE INSTRUCTIONS

Assembly Instructions

Set-Up:

Step 1: Flip the table over and place it on the ground. Align the leg brackets (L-L) (R-R) with the underside of the tabletop and install the screws as shown.

Accessory type and quantity may vary depending on the model.

Step 2: Extend the legs by pressing the button and pulling at the same time until locked into the desired height.

Step 3: Repeat steps 1 and 2 on the other side of the table.

NOTE: The images shown here are for illustrative purposes only and may be subject to change.

