



MAGNIFICA START

“RECIPE BOOK NOT INCLUDED”


COFFEE MAKER
Instructions for use. Keep these instructions

ELECTRIC CHARACTERISTICS
120 V~ 60 Hz 1250 W

814100712




A

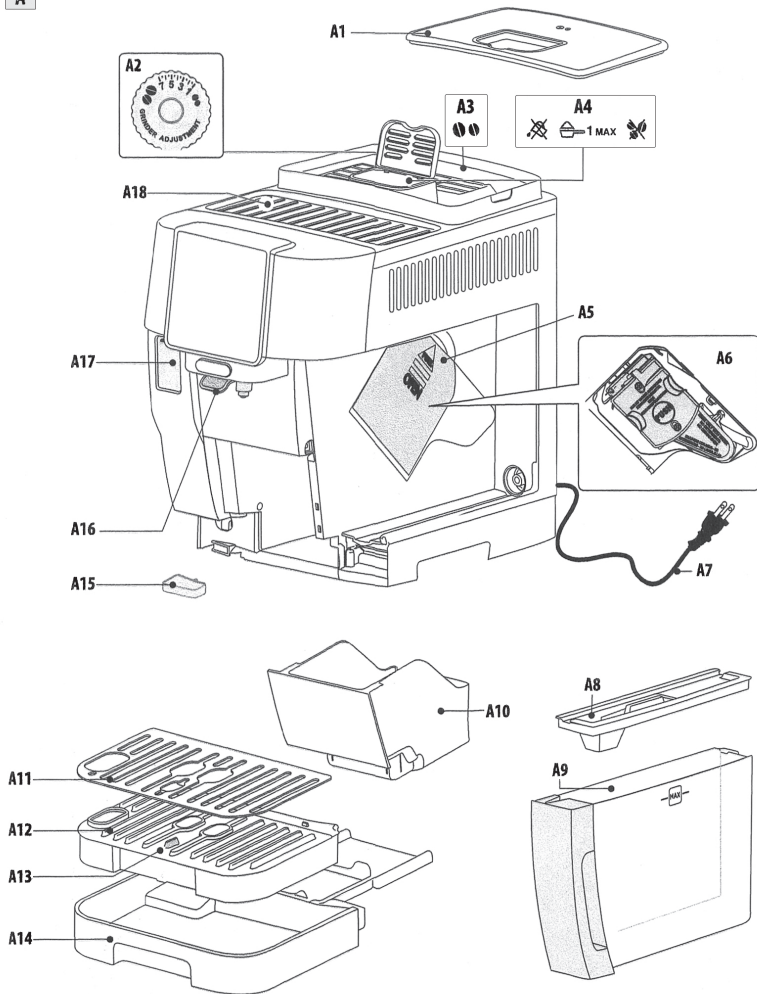


NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

B-C

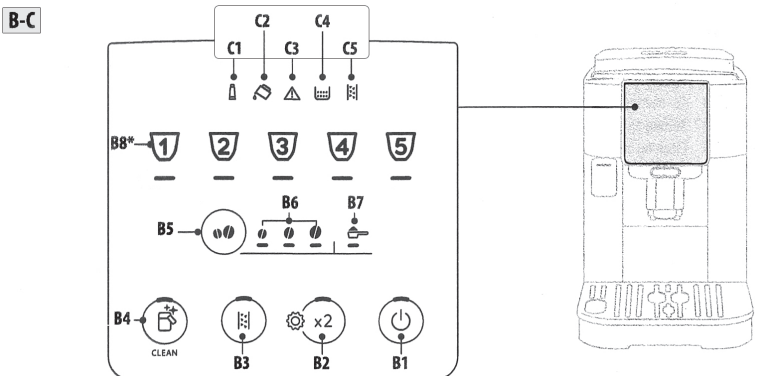

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

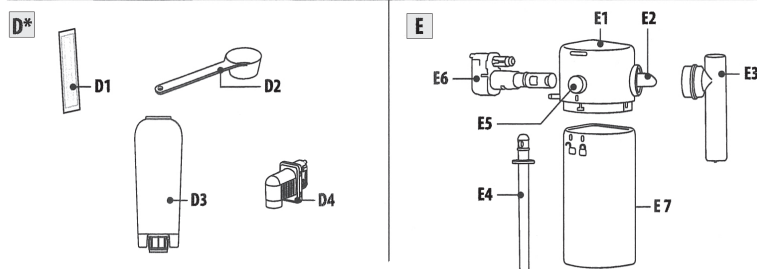

NOTE: Accessory type and quantity may vary depending on the model.

	Beans container lid	Coffee grinder adjustment dial	Beans container	Pre-ground coffee funnel	Infuser flap	Removable infuser
50°C	×	×	×	✓	✓	✓
	✓	✓	✓	✓	✓	✓

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following.

- Read all instructions carefully.
- Make sure the voltage of your electrical system corresponds to the voltage shown on the bottom of the machine.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Keep the appliance out of the reach of children and do not leave appliance unattended while in operation.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, contact a service center.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or personal injury.
- Do not use outdoors.
- Make sure the power cord does not hang over the edge of the table or counter-top to avoid getting accidentally caught or entangled.
- Do not place the appliance or its electrical parts on or near electric stoves, cooking surfaces, or gas burners.
- Plug cord into the wall outlet. To disconnect, first turn machine "off", then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance is to be utilized for domestic use only. The manufacturer declines all responsibility for any damage caused by improper, incorrect, or irresponsible use.

WARNING: To reduce the risk of fire or electric shock, do not remove the cover or the exterior of the unit. Don't attempt to repair or modify the machine, doing so will void the warranty. Repair should be done by authorized service personnel only!

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. If the appliance is provided with 3- wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

1. SAFETY WARNINGS

Danger!

This is an electrical appliance and may cause electric shock. You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact a service

- Before cleaning the appliance, turn it off, unplug from the mains socket and allow to cool.

Important!

Keep all packaging (plastic bags, polystyrene foam) away from children.

CHOKING HAZARD. The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

Danger of burns!

This appliance produces hot water and steam may form while it is in operation.

During operation (automatic rinsing, hot beverage delivery, steam delivery, cleaning), avoid contact with splashes of hot water or steam.

When the appliance is in operation, the cup shelf could become very hot.

2. GENERAL INFORMATION

2.1 Instruction for Use

Read all the Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.

Please note:

These safety warnings are valid for all De'Longhi coffee machines.

Keep this leaflet together with the instructions accompanying the appliance.

If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

3. BEFORE USE

3.1 Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact a service center.

3.2 Installing the appliance

When you install the appliance, you should respect the following safety warnings:

- The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 1.18 in / 3 cm between the surfaces of the appliance and the side and rear walls and at least 5.9 in / 15 cm above the coffee maker.
- Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks.
- The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.
- Arrange the power cord in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).

3.3 Connecting the appliance

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance.

Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 13A only.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

3.4 Setting up the appliance

The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.

3.5 Cleaning and maintenance of materials in contact with food

- When used for the first time, or after 3 or 4 days without use, clean the appliance and the removable accessories that come into contact with water, coffee and milk, as indicated in the instructions for use. Check in the instructions which accessories are dishwasher safe.
- If the appliance is not used for more than 3 or 4 days, before making the first beverage, rinse the water circuit as described in this Instruction for Use.
- Be certain to take maximum care when carrying out all cleaning and maintenance operations described in the instructions for use and/or prompted by the display or warning lights of the appliance itself.

3.6 Making cappuccinos and milk-based coffees

- The appliance has been tested for use with cow's milk and the following products of plant origin: soy, rice and almond. No other type of milk or product of plant origin may be used.
- To clean the system, following use with any type of milk, please follow the standard procedures described in the instruction manual
- The cleaning methods provided by the manufacturer and described in the instructions do not guarantee the complete removal of allergens.
- In the case of confirmed or suspected allergies and intolerances, make sure that your machine has not been previously used with any milk or product of plant origin containing the allergens you are allergic or the substances you are intolerant to.

4. INTRODUCTION

Take a few minutes to read these Instructions for Use. This will avoid all risks and damage to the appliance.

The Leds and indicator lights on the panel will help in ensuring correct interaction with the machine:

	Off	--
	Permanently alight	Function available
	Blinking	Function in progress
	Blinking rapidly	User action required

4.1 Letters in brackets

The letters in brackets refer to the description of the appliance.

4.2 Troubleshooting and repairs

In the event of problems, first try and resolve them by reading the information given in sections "20. Explanation of lights" and "21. Troubleshooting".

If this does not resolve the problem or further information is required, contact a service center.

5. DESCRIPTION

5.1 Description of the appliance - A

- A1. Beans container lid
- A2. Coffee grinder adjustment dial
- A3. Beans container
- A4. Pre-ground coffee funnel
- A5. Infuser flap
- A6. Removable infuser
- A7. Power cord
- A8. Water tank lid
- A9. Water tank
- A10. Coffee grounds container
- A11. Cup tray
- A12. Drip tray grille
- A13. Drip tray water level indicator
- A14. Drip tray
- A15. Condensate tray
- A16. Height-adjustable coffee spouts
- A17. Accessories connector access flap
- A18. Cup shelf

5.2 Description of control panel - B

- B1. ON/standby button with built-in Led
- B2. X2 button with built-in Led (If pressed and held for 5 seconds, accesses the settings menu)
- B3. Descaler cycle selection button
- B4. Clean button (milk carafe) with built-in Led (If pressed and held for 5 seconds, activates manual rinse)
- B5. Intensity or pre-ground selection button
- B6. Intensity selection Led
- B7. Pre-ground selection Led
- B8. Drink selection button (*number and type of drinks differ according to models)

5.3 Description of indicator lights - C

- C1. Filter exhausted:
Indicator permanently alight: filter must be replaced
Indicator blinking: filter installation in progress
- C2. No water:
Indicator permanently alight: insufficient water in the tank (A9)
Indicator blinking: tank not in position
- C3. General alarm indicator
- C4. Grounds container indicator:
Indicator permanently alight: grounds container (A10) needs emptying
Indicator blinking: grounds container not in position
- C5. Descaler indicator:
Indicator permanently alight: machine needs descaling
Indicator blinking: descaling in progress

5.4 Description of accessories - D*

(*number and type differ according to model)

- D1. "Total Hardness Test" strip
- D2. Pre-ground coffee scoop
- D3. Water softener filter
- D4. Hot water spout

5.5 Description of milk carafe - E


- E1. Lid with milk frother
- E2. Milk spout connector (non removable)
- E3. Frothed milk spout
- E4. Milk intake tube
- E5. Remove carafe/remove carafe connector button
- E6. Milk carafe connector
- E7. Milk container

6. SETTING UP THE APPLIANCE


Please note:

- When using the machine for the first time, all removable accessories making contact with water or milk should be rinsed with hot water. It is advisable to wash the milk carafe (E) (see section"17. Thorough cleaning of milk carafe").
- Any traces of coffee that may be found in the grinder are left by the factory tests carried out on the machine before it goes on sale — evidence of the meticulous care we have for the product.
- The first time the machine is used, the water circuit will be empty and the appliance could be very noisy. The noise becomes less as the circuit fills.
- When starting the machine for the first time, make certain that the water spout (D4) is fitted.


- Connect the appliance to the mains supply (fig. 1).

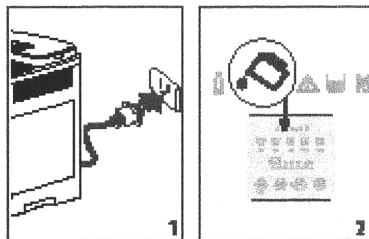

- The indicator (C2) will light up on the control panel (B) (fig. 2): remove the water tank (A9) (fig. 3), fill up to the MAX level with fresh drinking water (fig. 4), then reposition in the appliance.

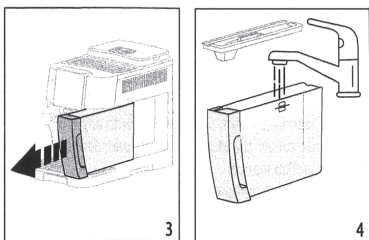

- The Led (B2) (B2) on the control panel will blink rapidly.
- Position a container under the coffee spout (A16) and water spout (D4) (fig. 5).

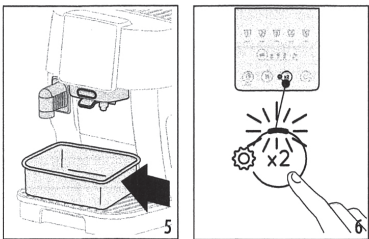

- Press the (x2) button (fig. 6): the internal water circuits start to fill and the appliance will release hot water from the water spout.
- The flow will be interrupted, then after a few seconds, the machine releases water from the coffee spout.

When the flow of water stops completely, the machine is ready for use.

Please note:

- The first time the appliance is used, it will be necessary to make 4-5 cappuccinos before the drink in the cup tastes as it should.
- It is recommended that the water filter supplied be installed immediately. After two months (see date indicator), or after 3 weeks if the appliance has not been used, the filter should be replaced or removed even if the warning indicator (C1) is not alight.
- Select the appropriate water hardness setting as soon as possible (section "8. Measuring water hardness").

7. WATER SOFTENER FILTER


To ensure the performance of the machine remains constant over time, we recommend using a De'Longhi water softener filter.

For more information, contact a service center.


 **WaterFilter** EAN: 8004399327252

To use the filter correctly, follow the instructions below.

1. Remove the filter (D3) from the pack and turn the date indicator so that it shows the next 2 months (fig. 7);

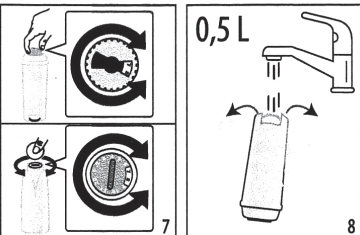

2. To activate the filter, run drinking water through the hole in the center of the filter until water comes out of the openings at the side for more than a minute (fig. 8);
3. Remove the tank (A9) from the machine (fig. 4) and fill with fresh drinking water; insert the filter in the water tank, immersing it completely for about ten seconds, while tilting it and applying light pressure so that the air bubbles are able to escape (fig. 9);

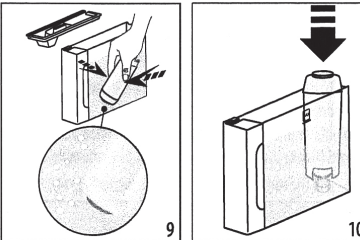

4. Insert the filter in the relative housing and press fully home (fig. 10);
5. Close the tank with the lid (A8), then reposition the tank in the machine;
6. If not already in place, fit the water spout (D4).
7. Place an empty container of at least 0.5 liters capacity under the hot water spout (fig. 5).
8. See instructions in section "15. Settings menu" for installation of the filter;
9. On the control panel, the filter indicator light (C1) blinks steadily and the Led of the clean carafe/manual rinse button (B4) blinks rapidly;
10. Press the clean carafe/manual rinse button (fig. 11);
11. The appliance delivers hot water, stopping automatically;
12. When the flow stops, the filter indicator light extinguishes: the filter is now active and the machine can be used.

Please note:

- If the Led of the  button (B4) blinks rapidly, press the button. This will cause the internal circuits of the machine to start filling up, expelling the air bubbles that have been formed and allowing the installation to proceed.
- With installation completed, the drinks Leds blink to indicate that the machine is heating up in readiness for normal use.

7.1 Replacing the filter

Replace the filter (D3) when the  indicator (C1) lights up.

1. Remove the water tank (A9) and the spent filter;
2. Follow the operations described in the previous section to activate the filter;
3. See instructions in section "15. Settings menu" to set the machine and repeat steps 9 to 12 of the preceding section.

Please note:

After two months (see date indicator), or after 3 weeks if the appliance has not been used, the filter should be replaced even if the warning message has not yet been displayed.

7.2 Removing the filter

If the intention is to use the appliance without the filter (D3), its removal must be indicated in the machine settings.


1. Remove the water tank (A9) and the spent filter;
2. See instructions in section "15. Settings menu" to set the machine accordingly.

Please note:

After two months (see date indicator), or after 3 weeks if the appliance has not been used, the filter should be replaced even if the warning message has not yet been displayed.

8. MEASURING WATER HARDNESS

Setting the water hardness as soon as possible will enable the machine to optimize the frequency of descaling. This means that the descale indicator  (C5) will light up as necessary according to the actual hardness of the local water supply. Proceed as follows:

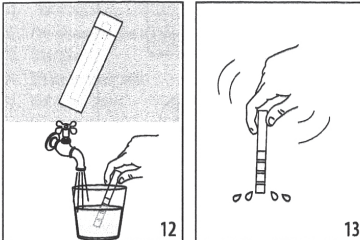

1. If a total hardness test strip (D1) is supplied with the model of machine in question, remove it from its wrapper.
2. Immerse the strip completely in a glass of water for about one second (fig. 12).
3. Remove the strip from the water and shake lightly (fig. 13). After about a minute, 1, 2, 3, or 4 red squares appear, depending on the hardness of the water. Each square corresponds to one level.

Total Hardness Test	Hardness
	1 Low
	2 Medium
	3 Medium/High
	4 High

See instructions in section "15. Settings menu" to set the machine accordingly.

9. TURNING THE MACHINE ON

Danger of scalding!

During the rinse, a little hot water flows from the coffee spouts (A16). Take care to avoid contact with splashes of water. To avoid the need for frequent emptying of the drip tray (A14), place a container under the spouts to collect the rinse water.

- To switch on the machine, press the  button (B1): the Led of the on/off button lights up and the drinks Leds blink on the control panel (B) to indicate that the machine is warming up.

During this step, the machine performs a rinse cycle. Besides heating up the boiler, this also serves to circulate hot water through the internal circuits so they too are brought up to temperature.

The appliance is ready for use when the drinks and intensity Leds remain permanently alight.

10. TURNING THE MACHINE OFF

Whenever the machine is turned off after being used to make coffee, it performs an automatic rinse cycle.

Danger of scalding!

During the rinse, a little hot water flows from the coffee spouts (A16). Take care to avoid contact with splashes of water. To avoid the need for frequent emptying of the drip tray (A14), place a container under the spouts to collect the rinse water.

- To switch the machine off, press the  button (B1);
- the drinks indicator Leds on the control panel will now blink: the appliance performs a rinse cycle, if envisaged, and then switches off (stand-by).

10.1 Switching off for extended periods:

If the machine is not going to be used for any length of time (e.g. holidays, periods of absence), proceed as follows:

- turn off the machine by pressing the  button (B1);
- empty out and clean the grounds container (A10) and the water tank (A9);
- unplug the power cord (A7) from the socket.

Please note:

When turning the machine on again, fill the water tank and, before making any kind of drink, run 3 rinse cycles as indicated in section "11.6 Rinsing".


11. MAKING COFFEE DRINKS

11.1 Making coffee using coffee beans

Important!

Do not use green, caramelized or candied coffee beans as they could stick to the coffee grinder and make it unusable.

1. Fill the container (A3) with coffee beans (fig. 14);

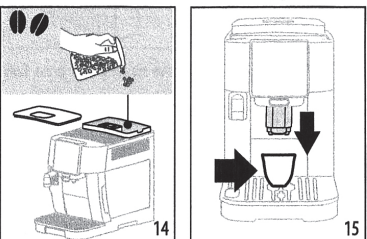

2. Place a cup under the coffee spouts (A16) (fig. 15);
3. Lower the spouts as near as possible to the cup: this makes a creamier coffee (fig. 15);
4. Select the required drink:

Drink (*)	Default quantity (ml)	Programmable quantity (ml)
 Espresso	40	from ≈ 20 to ≈ 180
 Coffee	180	from ≈ 100 to ≈ 240
 Doppio+	120	from ≈ 80 to ≈ 180

(*) Numbers and types of drinks differ according to model.

5. Preparation begins and the Led corresponding to the selection blinks on the control panel (B).

11.2 Making 2 cups of coffee

1. Place the cups under the coffee spouts (A16);
2. Lower the spouts as near as possible to the cups: this makes a creamier coffee;
3. Press the  x2 button (B2): the corresponding Led lights up;
4. Press the  button (B8);
5. Preparation begins and the Led corresponding to the Espresso button blinks on the control panel (B).

11.3 Making coffee using pre-ground coffee


Important!

- Never add pre-ground coffee when the machine is off, or it could spread through and soil the inside of the machine. This could cause damage to the machine.
- Never use more than 1 level scoop (D2), as this could soil the inside of the machine or block the funnel (A4).

Please note:

When using pre-ground coffee, only one cup can be made at a time.

1. Press the  button (B5) repeatedly until the Led  lights up (B7).
2. Make sure the funnel is not blocked, then add one level scoop of pre-ground coffee (fig. 16).

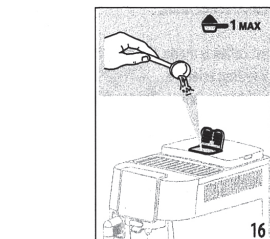

3. Place a cup under the coffee spouts (A16) (fig. 15);
4. Select the required drink (B8);
5. Preparation begins and the Led corresponding to the selection blinks on the control panel (B).

Important!

- It is not possible to make a  Doppio+ coffee using pre-ground coffee.

11.4 General indications for making coffee-based drinks

- Indicator lights may appear on the control panel (B) during use. Their meaning is given in section "20. Explanation of lights".
- To make a hotter coffee, see section "11.7 Tips for a hotter coffee".
- If the coffee is delivered a drop at a time, too weak and not creamy enough or too cold, read the tips in section "21. Troubleshooting".
- To customize drinks according to personal taste, see sections "11.5 Varying the intensity of the coffee" and "11.9 Customizing the quantity in the cup".

Please note:

In energy saving mode, a few seconds may elapse before the first coffee is delivered as the machine must heat up again.

11.5 Varying the intensity of the coffee

1. Press the  button (B5) repeatedly until the Leds relative to the desired intensity light up (B6):

			Mild
			Medium
			Strong

2. Select the desired coffee drink.

Please note:

- When the next coffee is made, the machine will show the last intensity setting selected.
- In the event of power failure, the machine will revert to the default setting: medium.

11.6 Rinsing

Using this function, hot water can be delivered from the coffee spouts to clean and heat the internal circuit of the machine.

1. Place a container of at least 100ml capacity under the coffee spouts (A16) (fig. 5).
2. Press the  button (B4) and hold for at least 5 seconds: the cycle will start and stop automatically (to terminate the cycle sooner, press this same button a second time).

Please note:

- If the machine is not used for more than 3-4 days it is highly advisable, when switching on again, to run 2/3 rinse cycles before preparing any drinks;
- It is normal for the grounds container (A10) to contain water following a rinse cycle.

11.7 Tips for a hotter coffee

To make a hotter coffee, proceed as follows:

- run a rinse cycle (see section "11.6 Rinsing ");
- warm the cups using the Hot water function;
- set a higher coffee temperature via the menu (see section "15. Settings menu").

11.8 Adjusting the coffee grinder

The coffee grinder does not require any adjustment, at least initially, as it has been factory set to ensure that coffee is prepared correctly.

Please note:

The adjustment dial must be turned only when the coffee grinder is in operation during the initial step of coffee preparation.

To make an adjustment while the coffee grinder is in operation, turn the dial (A2) as follows:

If the coffee is delivered too slowly, or not at all. The effect of this adjustment will not be noticeable until at least 2 further coffees have been made.	Turn one click toward number "7" 
--	---

For a fuller bodied and creamier coffee The effect of this adjustment will not be noticeable until at least 2 further coffees have been made.	Turn one click toward number "1" 
--	---

Please note:

- To interrupt delivery, press any drink selection button.
- At the end of delivery, to increase the quantity of coffee in the cup, simply press and hold the drink selection button (within 3 seconds); the Led will blink rapidly.

11.9 Customizing the quantity in the cup

1. Press the button relative to the drink being programmed and hold for a few seconds: when the Led corresponding to the selection blinks rapidly, the machine is in programming mode. Delivery begins;
2. Once the cup is filled to the desired level, press the button again: delivery ceases and the quantity is stored.

Please note:

To cancel the current setting, press a button corresponding to another drink.

12. MAKING MILK-BASED DRINKS

Please note:

- Before using the carafe, check that all the components are cleaned and assembled as described in section "17. Thorough cleaning of milk carafe".
- To ensure that milk is not under-frothed or topped with large bubbles, always clean the milk container lid (E1) and the carafe connector (E6) as described in sections "12.6 Cleaning the milk carafe after each use", and "17. Thorough cleaning of milk carafe".

12.1 What milk to use?

The quality of the froth will vary depending on:

- the temperature of the milk or vegetable drink used (for best results, always use milk or vegetable drink straight from the fridge, 5 °C);
- type of milk or vegetable drink;
- the brand used;
- ingredients and nutritional values.

LatteCrema HOT 	
Cow's milk	
Whole (fat >3,5%)	✓
Semi-skimmed (fat between 1.5 and 1.8%)	
Skimmed (fat <0.5%)	
Vegetable drinks	
Soy	✓
Almond	✓
Oatmeal	✓


Please note:

For best results when using vegetable drinks, select "Barista" versions of these products to optimize the quality of the froth.

12.2 How much milk?

The milk container (E7) is marked with a graduated scale (fig. 17) to help ensure that the ideal quantity of milk will be poured when preparing the drink.

The intermediate marks correspond to increments of ≈ 20ml.

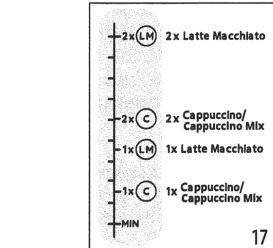


Please note:


- Depending on the type and temperature of the milk used, the recipe can differ slightly from one drink to another.
- If there is insufficient milk in the carafe, the milk spout will produce a dry puff.

12.3 Filling and attaching the milk carafe


1. Release the lid (E1) by turning clockwise: the reference mark on the lid must be aligned with the  symbol (fig. 18);
2. Then lift the lid (fig. 19)

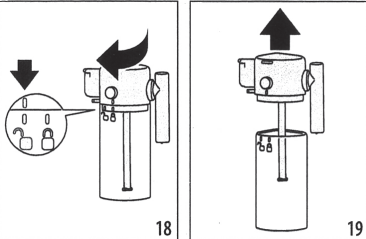

3. Fill the milk container (E7) with suitable quantity of milk (fig. 17 and 20);
4. Make sure the milk intake tube (E4) is secured correctly to the socket on the underside of the milk carafe lid (fig. 21);

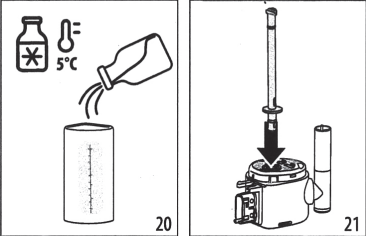

5. Close the carafe: refit the lid (the reference mark on the lid must be aligned with the  symbol) then turn toward the  symbol until locked in position (fig. 22);
6. Lower the flap and attach the carafe to the connector, pushing it fully home (fig. 23). The machine emits a beep (if the beep function is enabled).

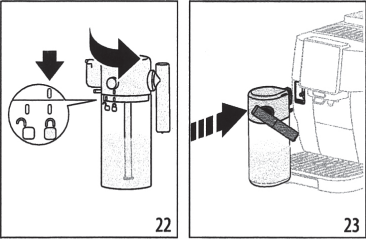


12.4 Selection of coffee intensity or use of pre-ground coffee

Once the milk carafe has been prepared, before selecting the desired milk-based drink, the intensity of the coffee can be customized as described in section "11.5 Varying the intensity of the coffee" or alternatively, select pre-ground coffee (and in this instance, proceed to add one scoop of coffee as indicated in section "11.3 Making coffee using pre-ground coffee  ").

12.5 Delivering milk-based drinks

1. Place a cup of suitable size under the coffee spouts (A16) and under the frothed milk spout (E3) (fig. 24).
2. Select the milk-based drink from the control panel

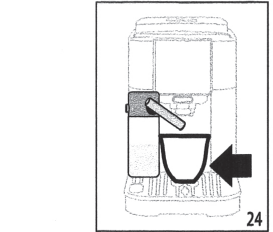


Please note:


If "Energy Saving" mode is activated (see section "15. Settings menu"), there may be a few seconds delay before the drink is delivered.

12.6 Cleaning the milk carafe after each use

Following each delivery of a milk-based drink, the Led associated with the  button will blink on the control panel (B4) (fig. 25).

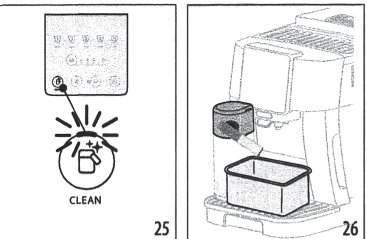

1. Leave the milk carafe in the machine (there is no need to empty the milk container);
2. Place a cup or other recipient under the milk spout (fig. 26);
3. Press the  button: hot water and steam will be released from the milk spout. Cleaning stops automatically;
4. Press the release button (E5) on the lid (E1) and pull the carafe to remove it (fig. 27).

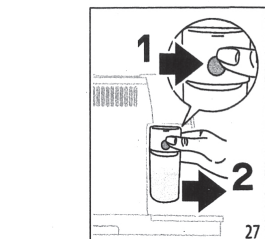

Where various drinks are prepared in succession:

- Proceed with cleaning of the carafe after the final preparation.

After multiple preparations, the milk carafe is empty or the milk that remains is not enough to make further drinks

- Having carried out the cleaning step with the  button, disassemble the milk carafe and clean all components, proceeding as described in the section "17. Thorough cleaning of milk carafe".

After multiple preparations, there is enough milk left in the carafe to make further drinks

- Having carried out the cleaning step with the  button, remove the milk carafe and put it straight in the refrigerator. The carafe still containing milk can be kept in the refrigerator for no more than 2 days, after which time all components should be cleaned, proceeding as described in the section "17. Thorough cleaning of milk carafe".

Important:

If the milk carafe is left out of the refrigerator for more than **30 minutes**, disassemble and clean all components, proceeding as described in the section "17. Thorough cleaning of milk carafe".

Following preparation of milk-based drinks — general notes:

- In certain cases, the machine will need to heat up before cleaning can take place.
- Wait for cleaning to be completed. The function ceases automatically. It must not be stopped while in progress.

12.7 Customizing the quantity in the cup

1. Press the button relative to the milk-based drink being programmed, and hold for a few seconds. The light blinks rapidly to indicate that the programming menu is active. Delivery of the first ingredient will start;

2. Once the cup is filled to the desired level, press the drink button a second time: delivery of the first ingredient stops and delivery of the second ingredient begins;
3. Once the cup is filled to the desired level, press the button again: delivery ceases and the quantity is stored.

Please note!


- To cancel the current setting, press a button corresponding to another drink.

13. DELIVERING HOT WATER

Danger of scalding!

Never leave the machine unattended when hot water is being released.

1. Lower the flap and fit the hot water spout (fig. 28).

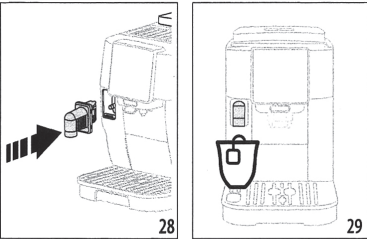

2. Place a container under the hot water spout (fig. 29) (as close as possible to avoid splashes).
3. Press the Hot water button .

4. Delivery will stop automatically. To terminate the delivery sooner, press the  button a second time.

Please note:


In energy saving mode, a few seconds may elapse before hot water emerges as the machine must heat up.

13.1 Customizing the quantity of hot water

1. Press the Hot water button  and hold for a few seconds: the light blinks rapidly to indicate that the programming menu is active. Delivery begins;
2. Once the cup is filled to the desired level, press the button again: delivery ceases and the quantity is stored.

15. SETTINGS MENU

Having accessed the menu, the buttons that remain active can be used to select the corresponding functions:

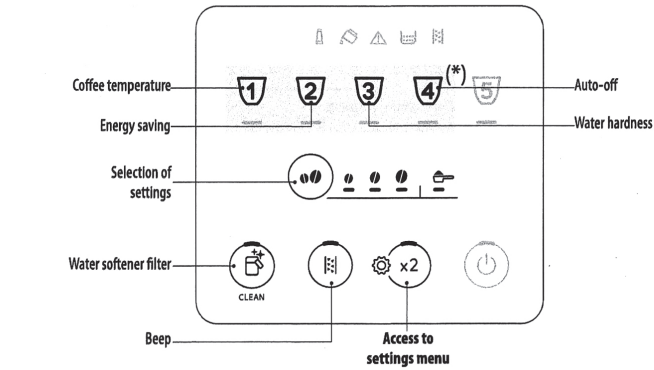

(*) Drinks differing according to model

1. Access the menu:

x 5 sec
x2

Press and hold the button for a few seconds: the buttons used for selecting settings will light up. Proceed by pressing the button for the setting to be changed.

2. Change the machine settings:

Water softener filter 	Press the intensity button repeatedly until the Leds relative to the desired setting light up 	FILTER IN PLACE (Ref. "7. Water softener filter" and "7.1 Replacing the filter") FILTER REMOVED (Ref. "7.2 Removing the filter")	Confirm selection
Beep 	Press the intensity button repeatedly until the Leds relative to the desired setting light up 	ENABLED DISABLED 	Confirm selection
Coffee temperature 	Press the intensity button repeatedly until the Leds relative to the desired setting light up 	LOW MEDIUM HIGH 	Confirm selection
Energy saving 	Press the intensity button repeatedly until the Leds relative to the desired setting light up 	ENABLED DISABLED 	Confirm selection
Water hardness 	Press the intensity button repeatedly until the Led corresponding to the required level lights up 	LEVEL 1 LEVEL 2 LEVEL 3 LEVEL 4 	Confirm selection
Auto-off 	Press the intensity button repeatedly until the Led corresponding to the required time setting lights up 	15 MINUTES 30 MINUTES 1 HOUR 3 HOURS 	Confirm selection

3. Exit the menu:

x2

Press the button: The machine is ready for use again.

Please note!
After 30 seconds without a button being pressed, the machine exits the settings menu automatically.

15.1 Restore factory settings

Make sure the machine is in stand-by (off, but connected to the mains power supply).	
Press the drinks buttons 1, 2 and hold for 5 seconds: all settings and drink quantities will be reset to the default factory values.	x 5 sec x2
The machine emits a long beep and all indicator lights blink to confirm the reset	BEEP)))

16. CLEANING THE MACHINE

- Important!**
- Do not use solvents, abrasive detergents or alcohol to clean the machine. With De'Longhi superautomatic coffee machines, no chemical additives are required for cleaning purposes.
 - Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces.


Component	Frequency	Procedure
Grounds container 	When the indicator lights up, the grounds container must be emptied: the machine cannot now make coffee.	- Remove the drip tray, empty and clean. - Empty the grounds container and clean thoroughly to remove all residues that may have collected on the bottom. - Check the condensate tray (color red) and if full, empty if out. The appliance cannot be used to make coffee again until the grounds container has been cleaned. The machine will display the message indicating the need to empty the grounds container 72 hours after the first coffee has been prepared, even if the container is not full (for the 72 hours to be calculated correctly, the machine must never be disconnected from the mains power supply).
Drip tray components 	The drip tray is fitted with a level indicator (color red) showing the level of water it contains. Before the indicator projects from the cup tray, the drip tray must be emptied and cleaned	- Remove the drip tray and the grounds container; - Remove the cup tray and drip tray grille, then empty the drip tray and the grounds container and wash all components; - Check the red condensate tray and, if full, empty if out; - Reposition the drip tray complete with grille, and the grounds container. When removing the drip tray, the grounds container must also be emptied, even if it is not completely full.
Inside of the machine 	Check periodically (about once a month) that the inside of the machine (accessible by removing the drip tray) is not dirty.	- Switch the machine off and isolate it from the power supply. Never immerse the machine in water. - Remove coffee deposits with a brush and sponge; - Remove all residues with a hand vacuum cleaner
Coffee spouts 	Clean the coffee spouts periodically (once a month)	- Clean the coffee spouts periodically with a sponge or cloth; - Check that the holes in the coffee spout are not blocked. If necessary, remove coffee deposits with a toothpick.

17. THOROUGH CLEANING OF MILK CARAFE


VERY IMPORTANT
To ensure optimum results are obtained from the Lattecrema system over time, clean the milk carafe thoroughly on a regular basis.

Clean the milk carafe as described below:


- Release the lid (E1) by turning clockwise: the reference mark on the lid must be aligned with the symbol (fig. 18);
- Now lift the lid (fig. 19).
- Pull out the milk intake tube (30);

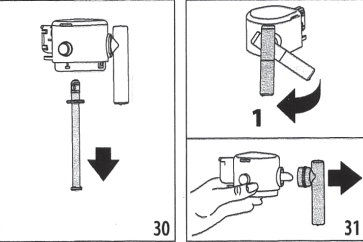


- Turn the milk spout at right angles to the body and pull until completely detached (fig. 31);
- Press the button (E5) to separate the connector (fig. 32).

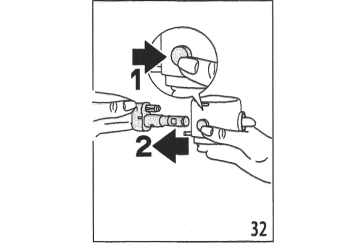


- Wash in a dishwasher (recommended) or by hand as indicated below:
 - In a dishwasher:** Rinse all the above components and the milk container under hot running drinking water (at least 40 °C), then place them in the top basket of the dishwasher and run a wash program at 50 °C, e.g. standard ECO.
 - By hand:** Rinse all the components and the milk container thoroughly with hot running drinking water (at least 40 °C) to remove all visible milk residues, making certain to direct the water through all the holes of the lid (fig. 33). Next, immerse all the components in a solution of hot drinking water (at least 40° C) and washing up liquid for at least 30 minutes. Rinse all the components described above thoroughly under hot drinking water, rubbing each one individually between fingers and thumbs.

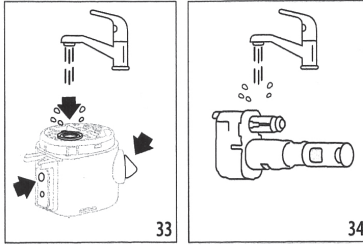

- Rinse the milk carafe connector (E6) thoroughly (fig. 34). Take particular care to ensure that there are no milk residues in the air channel (see enlargement) (fig. 35): free the channel clean if need be, using a toothpick;

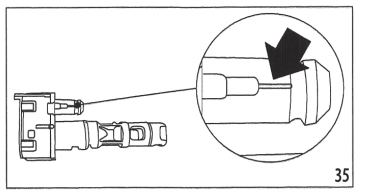

- Dry all the components with a clean dry cloth;
- Push the connector fully home (fig. 36 and 37): when securely inserted, the connector can be detached only by pressing the release button on the lid.

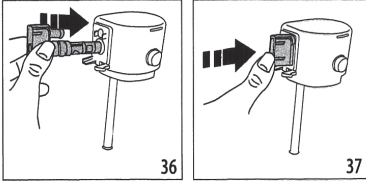


- Reassemble all the lid components;
- Close the carafe: refit the lid (the reference mark on the lid must be aligned with the symbol marked on the milk container (E7) then turn toward the until locked (fig. 22).

18. CLEANING THE INFUSER

Clean the infuser (A6) regularly, at least once a month.
Important!
The infuser (A6) cannot be removed while the machine is on.

- Press the button (B1) to turn the machine off;
- Remove the water tank (A9);
- Open the infuser flap, positioned on the right hand side (fig. 38);
- Press the two colored release buttons inwards (fig. 39), at the same time pulling the infuser outwards;

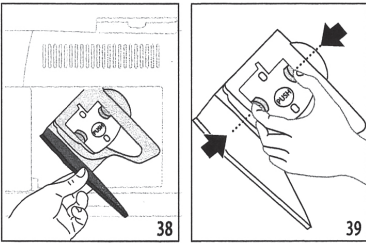


- Immerse the infuser in water for about 5 minutes, then rinse under the tap;
Important!
RINSE WITH WATER ONLY
NO DETERGENTS - NO DISHWASHER
- Do not use detergents when cleaning the infuser, as they could damage it.
- Use a brush to remove any coffee residues left in the infuser housing, which can be seen through the infuser flap;

- After cleaning, replace the infuser by sliding it into its housing, then apply pressure to the PUSH symbol until it clicks into place;

Please note:

If the infuser proves difficult to insert, adapt it (before insertion) to the right position by pressing the two levers (fig. 40).

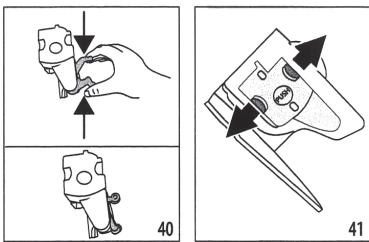

- Once inserted, make sure the two colored buttons have snapped out (fig. 41);
- Close the infuser flap;
- Reposition the water tank in the machine.

19. DESCALING

- Before use, read the instructions and the labeling on the descaler pack.
- Use only descaler supplied by De'Longhi. Using unsuitable descaler and/or performing descaling incorrectly may result in faults.
- Descaler can cause damage to delicate surfaces. If the product is accidentally spilt, dry immediately.

To descale	
Descaler	De'Longhi descaler
Container	Recommended capacity: 2l
Time	~30min
Accessory	Hot water spout (D5)

Important:
If the water softener filter is installed, it must be removed before adding the descaler solution. Thereafter, reinstate the filter at the start of step 3

Descale the machine when the indicator lights up on the control panel (C4). This same indicator will blink while the descale cycle is in progress.

Please note:


- Once the descaling cycle has begun, it cannot be interrupted and must be concluded with the full rinse cycle. With this in mind, make sure there is sufficient descaler.

Proceed as follows:


- Make certain that the water spout (D4) is fitted;

Step 1: Descaling action

- Press the button (B5) and hold for at least 5 seconds, until the relative Led starts blinking rapidly. The indicator Led (C5) blinks to confirm that the descaling program is in progress. The mild intensity Led lights up to indicate that step 1 of the descale cycle is in progress;
- Empty the drip tray (A14) and the grounds container (A10) and reposition them; empty the water tank completely (A9) and remove the softener filter (if installed);
- Pour the descaler into the water tank up to level A (corresponding to a 100 ml pack) marked on the inner surface of the tank (fig. 42), then add water (1 liter) up to level B (fig. 43) and reposition the water tank in the machine.

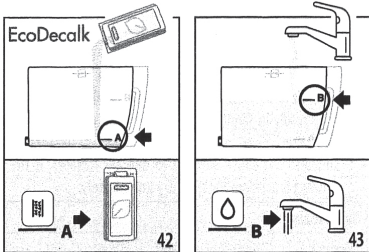

- Place an empty container of at least 2 liters capacity under the coffee spouts (A16) and the water spout (D4) (fig. 44).

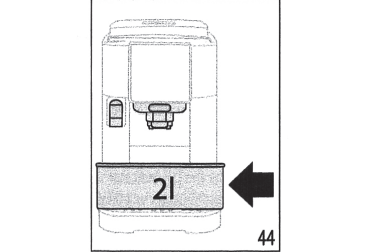


- Press the button to start the descaling cycle; the indicator light blinks to confirm that step 1 is in progress;
- For 15 minutes or so, the machine alternates automatically between pausing and releasing liquid from the hot water spout and the coffee spout.

When the first step of the descaling cycle has been completed, the low water level indicator (C2) will light up.

Step 2: First rinse

- Empty the container used to collect the descaler solution. Remove and empty the water tank, rinse under running water, then fill with fresh drinking water up to the MAX level (fig. 45) and return it to the machine: reposition the container under the spouts;

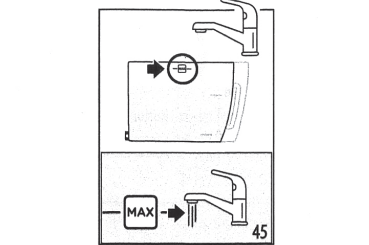

- Press the button (which blinks rapidly) to start the rinse: the medium intensity Led blinks to indicate that step 2 of the descale cycle is in progress;
- The machine will proceed automatically with rinsing of the coffee and hot water spouts;

When the second step of the descaling cycle has been completed, the low water level indicator (C2) will light up.

Step 3: Second rinse	
----------------------	--

11. Empty the container used to collect the water from the first rinse. Remove and empty the water tank, then fill with fresh drinking water up to the MAX level (fig. 44) and reinstate the softener filter, if in use; return the tank to the machine and reposition the container under the spouts;
12. Press the button (which blinks rapidly) to start the rinse: the strong intensity Led blinks to indicate that step 3 of the descale cycle is in progress; the rinse fluid will flow from the hot water spout; (*)

Step 4: Completion of descale procedure	
---	--

13. When the Led relative to the pre-ground function lights up, the descale cycle has been correctly terminated;
14. The indicator of the grounds container (C4)lights up: remove the container in which the rinse water is collected and empty it; take out the drip tray and empty the grounds container, where part of the rinse water will have been collected. Reposition all the parts in the machine.
15. The “no water” indicator (C2)lights up: remove the tank and fill with fresh drinking water. Reposition the water tank in the machine.

The machine is ready for use.

Please note:

- It is normal for the grounds container to contain water following a rinse cycle.
- (*) If the water tank has not been filled to the MAX level, at the end of descaling, the system requests a third rinse to guarantee that the descaler solution has been completely eliminated from the machine's internal circuits. In this instance, repeat step 3 from point 11.

20. EXPLANATION OF LIGHTS

Indicator/Led	Meaning
Drink indicators blinking	The machine is warming up: wait
Drink and settings indicators permanently alight	The machine is ready for use: select the desired drink and the relative options
	Replace the filter (see section “7. Water softener filter”)
	Insufficient water in tank: fill the tank
	The water tank is missing, or is not positioned correctly: ensure the tank is correctly in place
	General alarm: the inside of the machine is very dirty. Clean the machine thoroughly. If the message is still displayed after cleaning, contact a service center.
	The infuser has not been replaced after cleaning: reinstate the infuser as described in section “18. Cleaning the infuser”
	No coffee beans: fill the beans container, then press any button to exit the alarm condition.
	The beans are too finely ground, so that the coffee is delivered too slowly or not at all. Adjust the coffee grinder (A2) (section “11.8 Adjusting the coffee grinder”r”).
	A selection has been made using pre-ground coffee without putting the coffee in the relative funnel (A4)

Indicator/Led	Meaning
	Too much coffee has been used. Select a milder intensity or reduce the quantity of pre-ground coffee
	The coffee emerges too slowly or drop-by-drop.. The coffee is ground too finely. Use coffee for espresso machines.
	- A milk drink has been selected, but the connector (E6) has not been properly inserted: check that the milk carafe is complete with all components correctly assembled (see section “17. Thorough cleaning of milk carafe”) - The milk carafe was removed during delivery of milk. Reposition the milk carafe: the machine is ready for use again - A milk drink has been requested, but there is not enough milk in the container (see section “12.2 How much milk?”).
	Hot water has been selected, but the spout is not in place: fit the water spout
	The water circuit is empty. Deliver hot water by pressing the corresponding button Hot Water
	The grounds container needs emptying (A10)
	The grounds container (A10) is missing, or not inserted correctly: insert the drip tray complete with the grounds container and press fully home
	Descaling is required (“19. Descaling ”)
	Descaling has been interrupted. Complete the cycle, restarting from the step indicated by the intensity selection Leds.
	Descaling in progress
	Installation/Replacement of water filter softener progress

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

21. TROUBLESHOOTING

Possible malfunctions of the machine are listed below.

If the problem cannot be resolved as described, contact a service center.

Problem	Cause	Solution
The appliance does not switch on.	The cord is not plugged into the mains socket.	Plug into the mains socket.
The coffee is not hot.	The cups were not preheated.	Warm the cups by rinsing them with hot water (Please note: the hot water function can be used).
	The internal circuits of the appliance have cooled down because 2-3 minutes have elapsed since the last coffee was made.	Before making coffee, warm the internal circuits by pressing and holding the button (B4) for a few seconds to run a rinse cycle.
	Coffee temperature setting too low.	Select a hotter coffee temperature in the settings menu (see “15. Settings menu”).
The coffee is weak or not creamy enough.	The machine needs descaling	Run the descale procedure. Next, check the water hardness (“8. Measuring water hardness”) and make sure the machine setting matches the local water supply hardness (“15. Settings menu”).
	Coffee ground too coarsely.	Adjust the grinding level (“11.8 Adjusting the coffee grinder”r”). The effect will not be noticeable until at least 2 coffees have been made.
	Coffee not suitable.	Use coffee for espresso machines.
	Coffee not fresh.	The coffee pack has been opened for too long and has lost its taste.
The coffee emerges too slowly or drop-by-drop.	Coffee ground too finely.	Adjust the grinding level (“11.8 Adjusting the coffee grinder”r”). The effect will not be noticeable until at least 2 coffees have been made.
The machine does not deliver coffee.	Impurities have been detected in the internal circuits	Wait until the machine is ready for use again, and proceed to select the required drink. Contact a service center if the problem persists.
Coffee does not come out of one or both spouts.	Coffee nozzles blocked.	Clean the nozzles with a cloth. Any encrusted deposits can be removed with a toothpick, if necessary.
The coffee delivered is watery.	Pre-ground coffee funnel clogged.	Open the flap and clean the funnel with the aid of a brush.
The infuser cannot be removed.	The machine has not been correctly switched off.	Switch the machine off by pressing the button.
With the descaling procedure completed, the appliance prompts for a third rinse	During the two rinse cycles, the water tank was not filled to the MAX level	Restart the descaling procedure from “Step 3: Second rinse”.
The milk presents large bubbles, or splashes from the spout(E3) , or is under-frothed.	Milk is not cold enough, or is not semi-skimmed or skimmed.	Use skimmed or semi-skimmed milk straight from the refrigerator (temperature about 5° C). If the result is still not as expected, try changing the brand of milk.
	Milk carafe lid dirty.	Disassemble the components and clean thoroughly as described in section “12.6 Cleaning the milk carafe after each use”. Take particular care when cleaning the milk carafe connector (E6).
	Vegetable drinks are being used.	The end-result varies widely depending on the nutritional properties of the drinks. “Barista” versions of these drinks are recommended.
	Milk carafe missing or not correctly in place.	Prepare the milk carafe and position it correctly in the machine.
Milk-based drinks are not enabled	Several milk drinks have been prepared in succession and the machine needs to heat up to the right temperature in order to make the next drinks.	Wait until milk-based drinks are again enabled on the control panel.
	The cup tray on top of the machine is hot	Several drinks have been prepared in rapid succession
The machine emits noises or small puffs of steam while not in use	The machine is ready for use or has just been turned off, and a few drops of condensate are falling into the steamer, which is still hot.	This is to be expected as an aspect of normal operation: to minimize the effect, empty the drip tray regularly.
The machine emits puffs of steam from the drip tray and/or there is water on the surface where the machine is positioned.	The drip tray grille has not been replaced after cleaning.	Ensure the grille is repositioned in the drip tray.

De'Longhi reserves the right to modify the technical specification and styling of its products at any moment, without compromising their functionality and quality.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and/or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

PRINTED IN MEXICO / Elbrd: J.M. / SC: 02-19-2026

OBPN: 57132C8704_00_1023 / SHNMDL: ECAM22080B_D

8 1 4 1 0 0 7 1 2

