




COFFEE MAKER

“RECIPE BOOK NOT INCLUDED”

8 1 4 1 0 0 7 1 3

Please read this manual carefully before operating your unit and retain for future reference.

DeLonghi

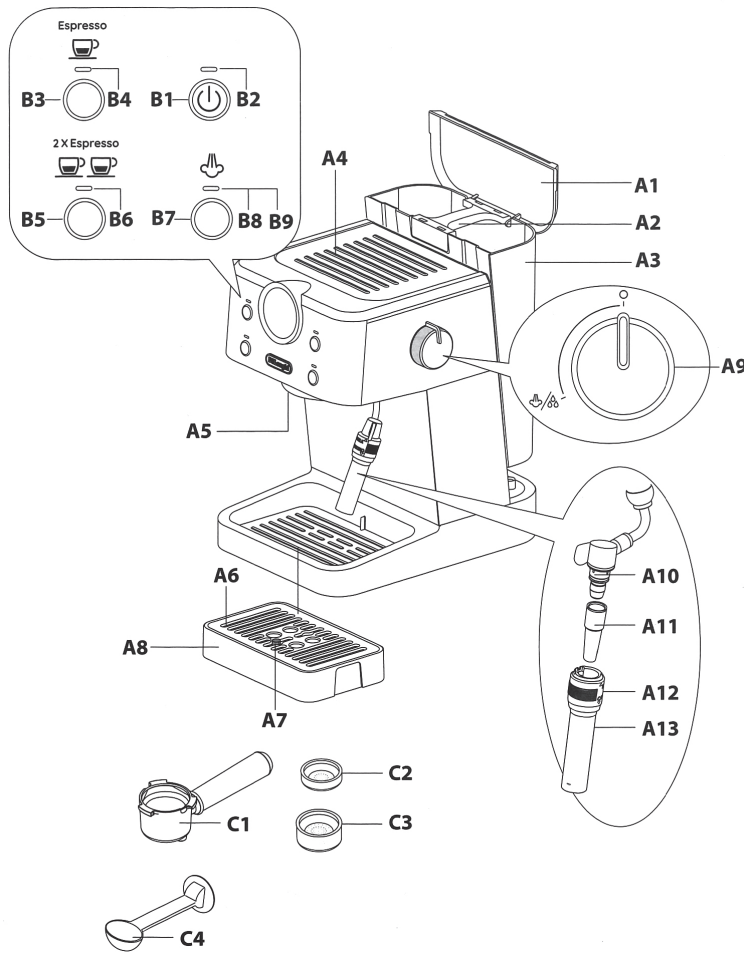


- Accessory type and quantity may vary depending on the model. -

NOTES:

- In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

- The actual descriptions of control panel and their locations may vary depending on the model.

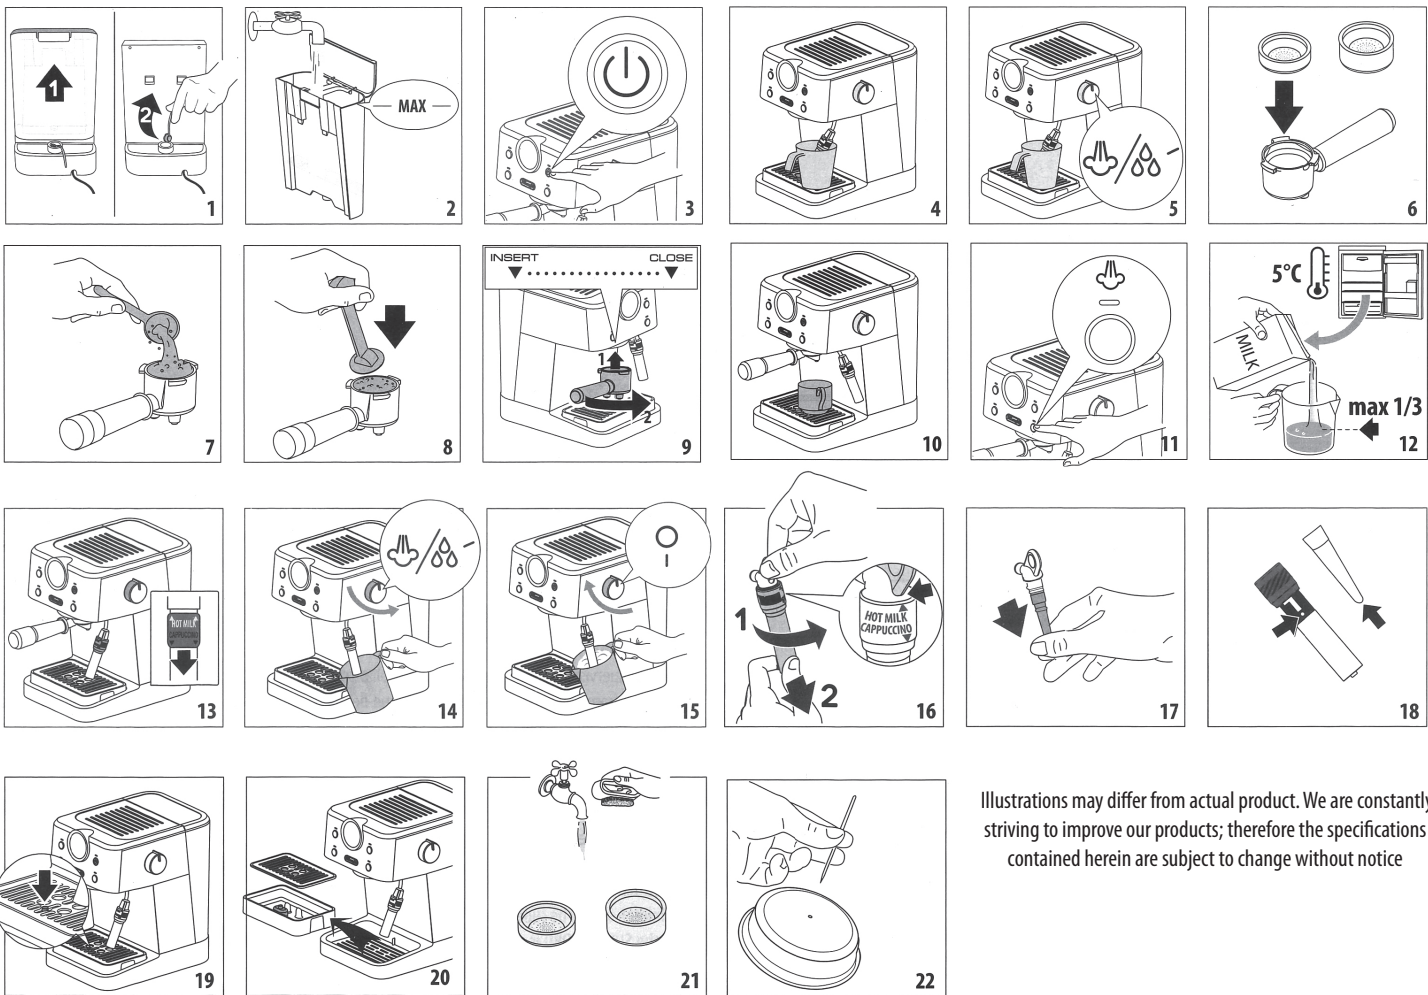

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Contact a Service Center.
- The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Do not use the appliance for other than the intended use. This appliance is to be utilized for domestic use only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. The manufacturer declines all responsibility for any damage caused by improper, incorrect, or irresponsible use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- WARNING: To avoid the risk of injury, do not open the brewing chamber during the brewing process.
- The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.

1. SAFETY WARNINGS

Danger! Failure to observe the warning may result in life threatening injury by electric shock.

This is an electrical appliance and may cause electrical shocks. You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the main socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the main socket and Contact a Service Center.
- Before cleaning the appliance, turn it off, unplug from the main socket and allow to cool.

Important: Failure to observe the warning could result in injury or damage to the appliance.

Keep all packaging (plastic bags, polystyrene foam) away from children.

Danger of burns! Failure to observe the warning could result in scalds or burns.

This appliance produces hot water and steam may form while it is in operation.

Avoid contact with splashes of water or hot steam.

1.1 Designated use and restrictions

This appliance is designed and made to prepare coffee or hot water and to heat milk using steam.

Use drinking water only to fill the tank as described in the Instruction for Use. Never use the hot water/steam spout (A12) with beverages other than milk.

Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage deriving from improper use of the appliance.

1.2 Instruction for Use

Read this Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.

1 Please note:

Keep this Instruction for Use. If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

1.3 Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged.

Contact a Service Center.

2. TECHNICAL DATA

Mains voltage: 120V~60Hz
Absorbed power: 1350 W
Pressure: 15 bar
Water tank capacity: 57.48 fl oz/ 1,7 l
Size WxDxH 8.89x11,14x12 inch / 226x283x310 mm
Weight 9 lbs / 4.1 kg



None of the components or accessories is dishwasher safe.

Before using the appliance, always read the safety warnings.

3. DESCRIPTION

3.1 Description of appliance - A

- A1. Water tank lid
- A2. Water tank handle
- A3. Water tank
- A4. Cup holder tray
- A5. Coffee spouts
- A6. Drip tray grid
- A7. Water level indicator in drip tray
- A8. Drip tray
- A9. Hot water/steam dial
- A10. Hot water/steam dispenser
- A11. Hot water/steam nozzle
- A12. Frother dial
- A13. Hot water/steam wand

3.2 Description of control panel - B

- B1. Main switch (ON/STAND-BY)
- B2. “ON” light (white)
- B3. 1 cup button
- B4. “1 cup” light (white)
- B5. 2 cup button
- B6. “2 cup” light (white)
- B7. Steam button
- B8. “Steam” light (white)
- B9. “Descaler light” (orange)

3.3 Description of accessories - C

- C1. Portafilter
- C2. 1-cup filter
- C3. 2-cup filter
- C4. Scoop/Tamper

Please note: to identify your model, see the nameplate located on the bottom of the appliance.

4. PREPARING THE APPLIANCE

Wash all accessories with warm water, then proceed as follows:

1. Extract the water tank (A3) and remove the **red cap** on the base of the tank (fig. 1) and fill it with fresh clean water, taking care not to exceed the MAX level (fig. 2).
2. Reinsert the tank, pressing lightly to open the valves located on the bottom of the tank itself and paying attention it's correctly positioned (water tank adhering to the appliance).

Important: Never operate the appliance without water in the tank or without the tank.

5. SETTING UP THE APPLIANCE

When used for the first time, the internal circuits of the appliance must be rinsed as follows:

1. Plug into the mains socket. The appliance runs a self-diagnosis cycle, indicated by the sequential flashing of all the lights ☹️, ☹️☹️, ☹️☹️☹️, ⌚️.
2. Press the main switch ⌚️ (B1) (fig. 3).
3. The lights ☹️ and ☹️☹️ flash, indicating that the appliance is heating up: when the lights are steadily lit, the appliance is ready.
4. Attach the portafilter to the appliance with the filter inserted; align the portafilter handle with “INSERT”, then rotate to the right until the handle is aligned with “CLOSE” (fig. 9).
5. Place a container with a capacity of at least 0,5 liter under the coffee spout (A5).
6. Press the button ☹️☹️. Repeat this procedure 3 times.
7. Empty the container and place it under the hot water/steam dispenser (fig.4).
8. Turn the steam dial (A9) to position ☹️/☹️☹️ (fig. 5) and dispense hot water: the appliance automatically stops dispensing and the lights ☹️, ☹️☹️ and ☹️☹️☹️ flash. Turn the knob back to position “O”.

The appliance is ready for use.

Please note: It is normal for there to be water in the space under the tank. This should therefore be dried regularly with a clean sponge.

