 



SONY®

Television

Please read this manual carefully before operating your unit and retain for future reference.

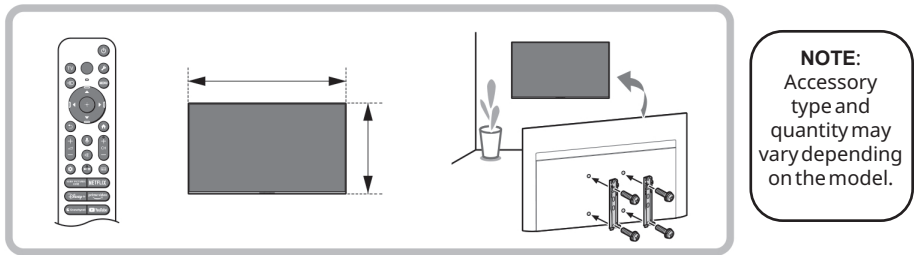

 
Dimensions and weight (without Table-Top Stand)

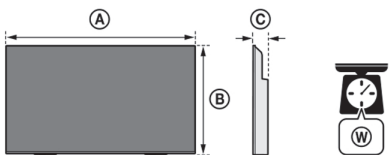

	(mm)/(inches)*1			(kg)/(lb.)*1
	(A)	(B)	(C)	
K-75S20CM2 / 75S20M2	1670 / 65 3/4	975 / 38 1/2	83 / 3 3/8	28 / 61.7
	1670 / 65 3/4	975 / 38 1/2	83 / 3 3/8	28 / 61.7
K-65S20CM2 / 65S20M2	1447 / 57	846 / 33 3/8	83 / 3 3/8	19.7 / 43.4
	1447 / 57	846 / 33 3/8	83 / 3 3/8	19.7 / 43.4
K-55S20CM2 / 55S20M2	1227 / 48 3/8	724 / 28 5/8	82 / 3 1/4	13.2 / 29.1
	1227 / 48 3/8	724 / 28 5/8	82 / 3 1/4	13.2 / 29.1
K-50S20M2	1111 / 43 3/4	655 / 25 7/8	80 / 3 1/4	9.8 / 21.6
	1111 / 43 3/4	655 / 25 7/8	80 / 3 1/4	9.8 / 21.6
K-43S20M2	958 / 37 3/4	570 / 22 1/2	79 / 3 1/8	7.8 / 17.2
	958 / 37 3/4	570 / 22 1/2	79 / 3 1/8	7.8 / 17.2

*1 (Approx.)

 
Dimensions and weight (with Table-Top Stand)

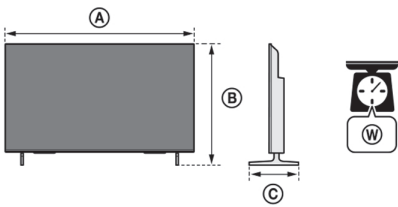


	(mm)/(inches)*1			(kg)/(lb.)*1
	(A)	(B)	(C)	
K-75S20CM2 / 75S20M2	1670 / 65 3/4	1033 / 40 3/4	393 / 15 1/2	29 / 63.9
	1670 / 65 3/4	1033 / 40 3/4	393 / 15 1/2	29 / 63.9
K-65S20CM2 / 65S20M2	1447 / 57	904 / 35 5/8	327 / 12 7/8	20 / 44.1
	1447 / 57	904 / 35 5/8	327 / 12 7/8	20 / 44.1
K-55S20CM2 / 55S20M2	1227 / 48 3/8	782 / 30 7/8	288 / 11 3/8	13.5 / 29.8
	1227 / 48 3/8	782 / 30 7/8	288 / 11 3/8	13.5 / 29.8
K-50S20M2	1111 / 43 3/4	714 / 28 1/8	255 / 10 1/8	10 / 22.1
	1111 / 43 3/4	714 / 28 1/8	255 / 10 1/8	10 / 22.1
K-43S20M2	958 / 37 3/4	628 / 24 3/4	255 / 10 1/8	8 / 17.7
	958 / 37 3/4	628 / 24 3/4	255 / 10 1/8	8 / 17.7

*1 (Approx.)

 The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness

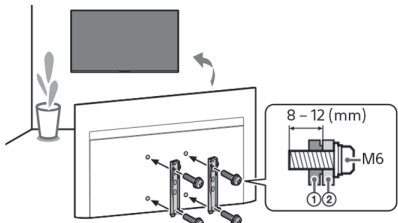

 - ① TV's rear cover
- ② Wall-Mount Bracket (not supplied)

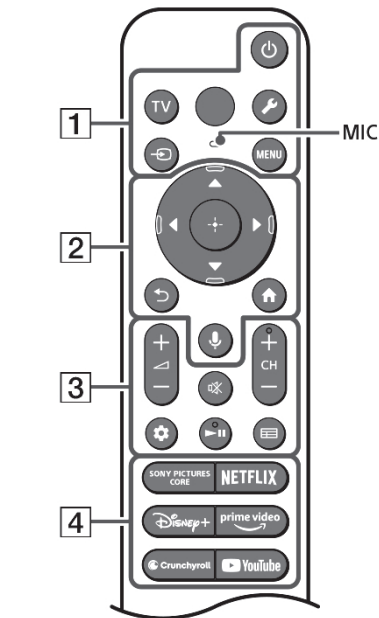

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- 1 **⏻ (Power)**
TV: Display TV channel list or switch to input.
⚙️ (Quick settings): Display Quick Settings.
📶 (Input): Display and select the input source, etc.
MENU (Control menu): Display the Control menu.
- 2 **⬅️/➡️/⬅️/➡️/⊕:** On screen menu navigation and selection.
⬅️ (Back)
🏠 (Home)
🗣️ (Google Assistant / Microphone): Use Google Assistant*1&2.

- 3 **⬆️ + / - (Volume)**
🔇 (Mute)*3
CH + / - (Channel)
⚙️ (Dashboard): Display Dashboard.
⏮️ ||
📺 (Guide): Display the digital program guide of TV or Cable/satellite box*4.
- 4 **App buttons**
- *1 Only for limited region/country/model/ language.
*2 Google Assistant requires an Internet connection.
*3 Accessibility shortcut is available by pressing and holding 🔇 (Mute).
*4 [Cable/Satellite box setup] setting is required.

About Manuals
Please retain the manuals for future reference.

Help Guide (On screen Manual)

- To open it, select [Settings] → [Help & Feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
- You can refer to the Help Guide with your smartphone.

Read and understand the contents of this manual before operating this product.

- Note**
- Read the supplied safety documentation for additional safety information.
 - Images and illustrations used in the supplied manuals are for reference and may differ from the actual product.
 - Setting menus are subject to change without notice due to software updates.

NOTE: The remote control vary depend of model:
The buttons on the remote control may have a different name or location than the remote control shows in this manual.

IMPORTANT - Read the End User Software License Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software License Agreement.

On your product screen. Press **⚙️** (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [End user license agreement].

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

IMPORTANT NOTICE FOR MEXICO

Operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Note:
This product utilizes the following device for wireless functionalities:
Model: WBU058-BGA-V11
Brand: FOXCONN

WLAN:
2.4 GHz (2.4000 GHz – 2.4835 GHz)
5 GHz (5.150 GHz – 5.850 GHz)
6 GHz (5.925 GHz - 6.425 GHz)
Bluetooth®:
2.4 GHz (2.4000 GHz – 2.4835 GHz)

Information for the remote control with voice command included with this product:
Model: RMF-TX820U*1
Brand: Sony

Note: Uses the following device for wireless functionalities:
Model: UE878
Brand: UEI

*1 To see the model name of the remote control, open the remote control cover and see the label on the remote control.

Safety Information

Compatible Wall-Mount Bracket Information

Use the following Sony Wall-Mount Bracket with your TV model.

Sony Wall-Mount Bracket Model No.	Sony TV Model No.
	K-75S20CM2 / 75S20M2 / 65S20CM2 / 65S20M2 / 55S20CM2 / 55S20M2 / 50S20M2 / 43S20M2
	SU-WL450*1

Use with other Wall-Mount Brackets*2 may cause instability and could result in property damage or injury.

 
*1 Only for limited region/country/model.

Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Two or more persons are needed to transport a large TV set.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.
- When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

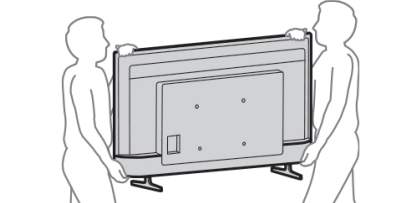

Securing the TV

! Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling

- Secure the TV to a wall and/or Stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
 - slippery, unstable and/or uneven surfaces.
 - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

 


- Route all AC power cords and connecting cables so that they are not accessible to curious children.


Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a Stand (not supplied).


- 1 Secure the Stand for the TV.
Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:
- Attach one side of the angle brace to the wall stud.
 - Attach the other side to the Stand.

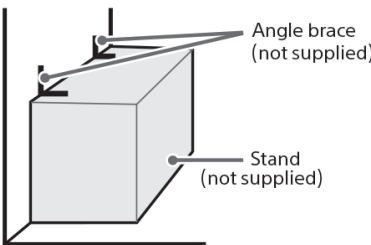


 
- 2 Secure the TV to the Stand.
Use the optional hardware listed as follows (not supplied):
- M6 machine screws (screwed into the TV's rear cover).
 - A screw or similar (attach it to the Stand).
 - Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

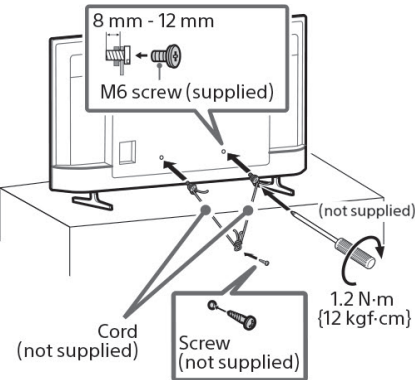

 The length of the M6 machine screw differs depending on the rope or chain diameter. Please refer to below illustration.

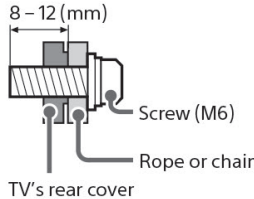

  
- 3 Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

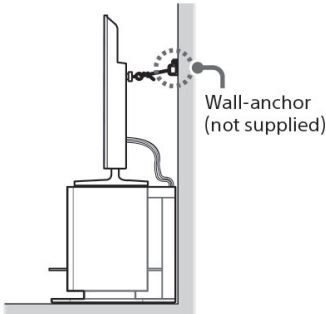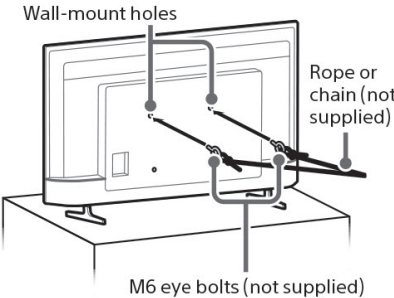

The images shown in this manual are for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO / Elbrd: J.M / SC: 11-28-2025
OBPN: 5-065-334-01(1) / SHNMDL: 55S20CM2_55S20M2

 8 1 4 1 0 0 5 7 8

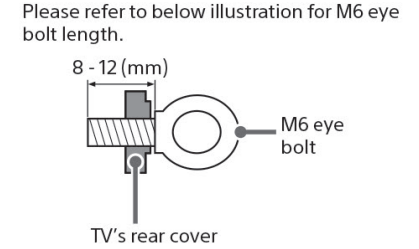

Note

- Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.
- Securing the TV to the Stand without securing the TV and the Stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

The BRAVIA® 4K TV Experience

Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the “4K TV Experience”. This document will help you get the most out of your TV.

 
This TV displays all video input signals in a resolution of 3 840 dots × 2 160 lines.

Note

- For supported PC formats, refer to the online Help Guide.

Guidelines for IR Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

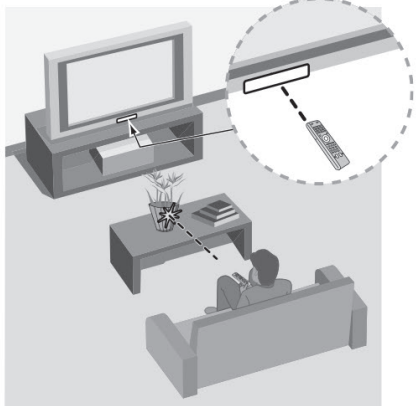

- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL450 only)*1 (not supplied)

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

Wall-Mount Bracket Installation Information

For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket).

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV’s weight.
- Sony is not liable for any damage or injury caused by mishandling or improper installation.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from children.

Note

- Read the supplied safety documentation for additional safety information.

*1 Only for limited region/country/model.

Using the optional Wall-Mount Bracket (except SU-WL855) (not supplied)


This TV’s instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see “Detaching the Table-Top Stand from the TV”. Prepare the TV for the Wall-Mount Bracket before making cable connections.

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV’s weight.
- The screws for installing the Wall-Mount Bracket to the TV are not supplied.
- Refer to the following table for the wall-mount hole pattern.

	(mm)		
	a	b	c
K-75S20CM2 / 75S20M2	300	300	131
K-65S20CM2 / 65S20M2	300	300	125
K-55S20CM2 / 55S20M2	300	300	115
K-50S20M2	200	200	118
K-43S20M2	200	200	103

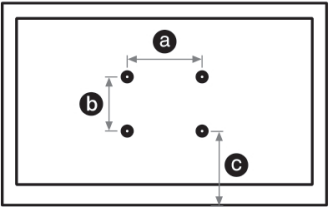 


- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from children.

Note


- Read the supplied safety documentation for additional safety information.

*1 Only for limited region/country/model.

 1 Remove the screws from the rear of the TV.

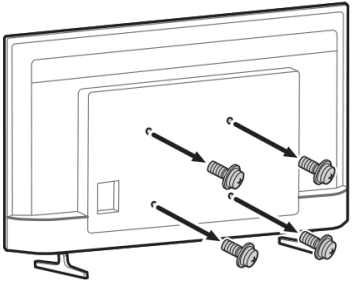

2 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).



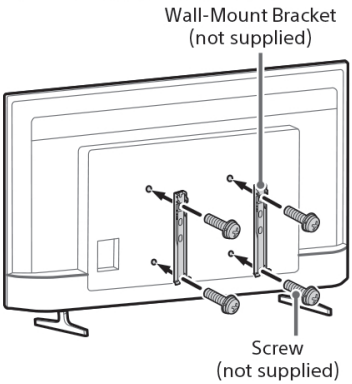 


- Note**
- If using an electric screwdriver, set the torque at approximately 1.2 N·m {12 kgf·cm}.
 - Be sure to fasten the Wall-Mount Bracket when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Bracket. Use of another tool might result in over torquing the Wall-Mount Bracket and damaging the TV.

Detaching the Table-Top Stand from the TV

K-75S20CM2 / 75S20M2 / 65S20CM2 / 65S20M2 / 55S20CM2 / 55S20M2

   1 Detaching one side of the Table-Top Stand at a time: remove the screws firstly then the Table-Top Stand. Firmly hold the Table-Top Stand securely with both hands while the other people lift up the TV.

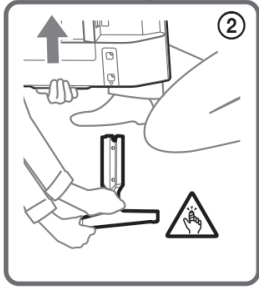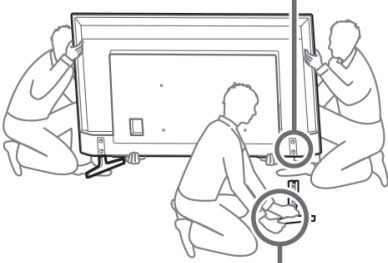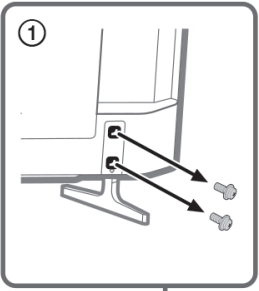


2 Repeat the previous step and remove the other side of the Table-Top Stand.

- Note**
- Three or more people are required to detach the Table-Top Stand.
 - Be careful not to use excessive force while detaching the Table-Top Stand from the TV as it may cause the TV set to fall resulting in personal injury or physical damage to the TV.
 - Take care when handling the Table-Top Stand to prevent damage to the TV.
 - Be careful when lifting the TV as the Table-Top Stand is detached, the Table-Top Stand may topple over and cause personal injury.
 - Take care when removing the Table-Top Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.
 - Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
 - Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.
 - When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

K-50S20M2 / 43S20M2

 Detaching the Table-Top Stand from the TV.

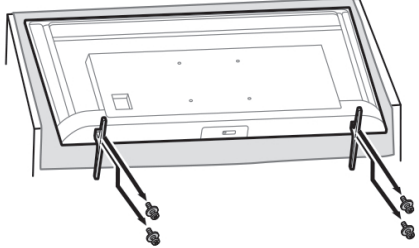

- Note**
- Make sure to place TV on the place where you put a soft cloth on to prevent damaging display’s surface.
 - When installing the Wall-Mount Bracket, do not use the screws removed from the Table-Top Stand.
 - Be sure to store the removed Table-top Stand and its screws in a safe place, keeping them away from children. You will need them if you want to use the TV on a table in the future. The Table-Top Stand cannot be purchased separately.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- Restart your TV by pressing the power button on the remote control for about five seconds. Select [Restart] and TV will restart. If the TV does not recover, try unplugging the AC power cord then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord. Or, press the power button on the TV for about 40 seconds until the TV turns off.
- Refer to the Help menu shown below.
- Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- Perform the factory data reset.

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

- How to reset the TV to factory settings**
- WARNING:** The reset will clear all of your customized settings including the parental lock setting.
- You can reset the TV to factory settings by selecting [Factory data reset]. How to select [Factory data reset], refer to the online Help Guide.
 - To force factory data reset, unplug the AC power cord. Press and hold ⏻ button on the TV, then plug in the AC power cord.
 - For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out of and deactivating all network services as well as factory reset the TV.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 4357 for the PIN and enter the new PIN.

For more information, refer to the Help Guide.

To open it, select [Settings] → [Help & Feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].

Specifications

System

TV system
NTSC: National Television System Committee
ATSC: 8VSB Terrestrial
QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)

Channel coverage
Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69
Analog Cable: 1 - 135 / Digital Cable: 1 - 135

Panel system
LCD (Liquid Crystal Display) Panel, LED Backlight

Wireless technology
Protocol IEEE 802.11a/b/g/n/ac/ax
Bluetooth® Version 5.3

Input/Output jacks

CABLE/ANTENNA
75 ohm external terminal for RF input
HDMI IN 1/2/3/4 (HDCP 2.3-compatible)

Video:
4096 × 2160p (50, 60 Hz)*1, 4096 × 2160p (24 Hz), 3840 × 2160p (50, 60 Hz)*1, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 480p, PC Formats*2

Audio:
In eARC (Enhanced Audio Return Channel) mode
Refer to the online Help Guide for details.
Except eARC mode
7.1 channel linear PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 bits, Dolby Audio, Dolby Atmos, DTS
eARC/ARC (Enhanced Audio Return Channel/ Audio Return Channel) (HDMI IN 3 only)*3
In eARC mode
Refer to the online Help Guide for details.
In ARC mode
Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, Dolby Atmos, DTS
➡ DIGITAL AUDIO OUT (OPTICAL)
Digital optical jack (Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS)

➡ 1, ➡ 2
USB port 1 and 2 support High Speed USB (USB 2.0)

LAN
10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. The communication rate and quality are not guaranteed.)

REMOTE
RS-232C mini jack, IR IN mini jack
These jacks are for receiving the external control signal.

Power and others

Power requirements
110 V - 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption
In use (W)
K-75S20CM2 / 75S20M2: 226
K-65S20CM2 / 65S20M2: 189
K-55S20CM2 / 55S20M2: 141
K-50S20M2: 114
K-43S20M2: 95
In standby*4*5
Less than 0.5 W with 120 V AC and less than 0.5 W with 240 V AC

Screen size (measured diagonally) (Approx.) (cm/inches)
K-75S20CM2 / 75S20M2: 189.3 / 74.5 (75" class)
K-65S20CM2 / 65S20M2: 163.9 / 64.5 (65" class)
K-55S20CM2 / 55S20M2: 138.8 / 54.6 (55" class)
K-50S20M2: 125.7 / 49.5 (50" class)
K-43S20M2: 108.0 / 42.5 (43" class)

Display resolution (horizontal × vertical) (pixels)
3 840 × 2 160

Output rating
500 mA (for USB 1/2)

Others

Operating temperature
0 °C - 40 °C / 32 °F - 104 °F

Optional accessories
SU-WL450

*1 Refer to the on screen menu to set [HDMI signal format].

*2 Refer to the online Help Guide for details.

*3 Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.

*4 Specified standby power is reached after the TV finishes necessary internal processes.

*5 Standby power consumption will increase when your TV is connected to the network.

Note

 
 
- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.

Licensing Information


- Dolby, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2024 Dolby Laboratories. All rights reserved.
- For DTS patents, see <https://xperi.com/dts-patents/>. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/ or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.

Setup Guide







Please Read this guide carefully before using the device and keep it for future reference.

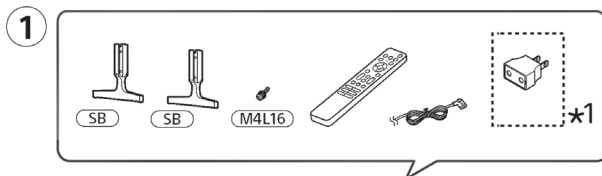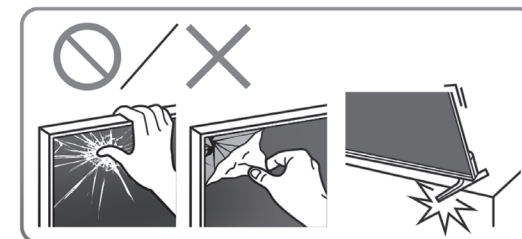

 
• Accessory type and quantity may vary depending on the model.



(Tools not included)

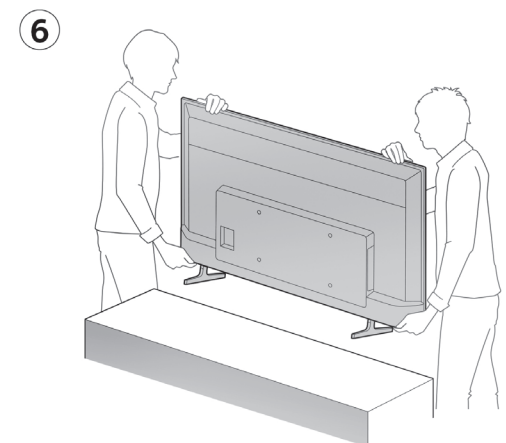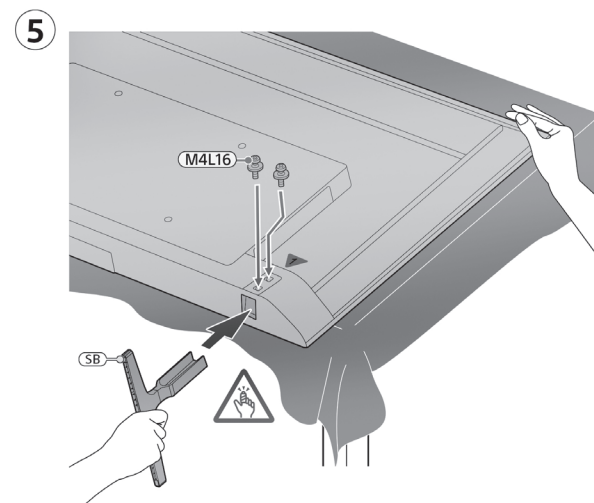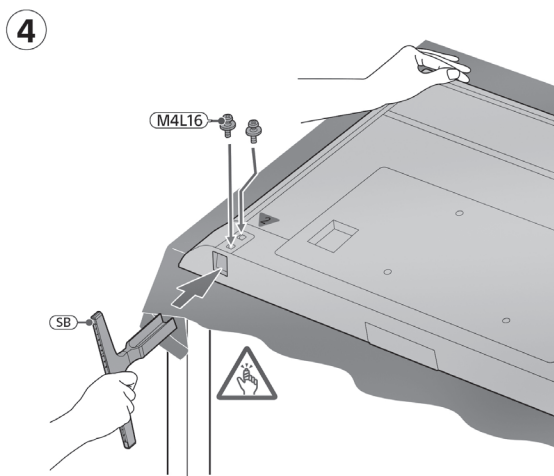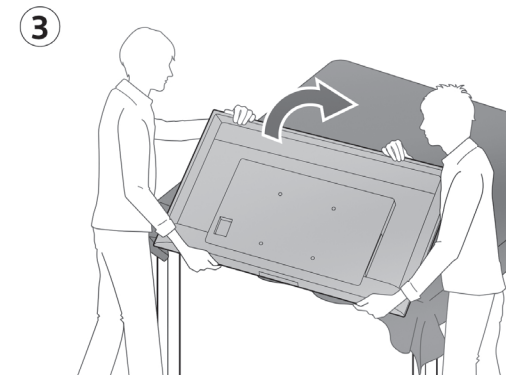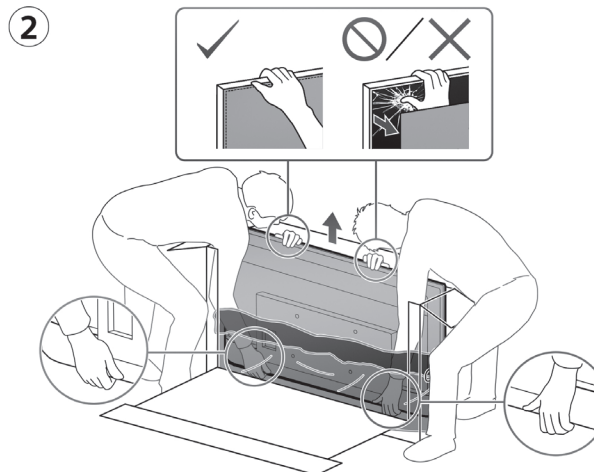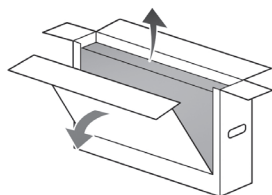      


7

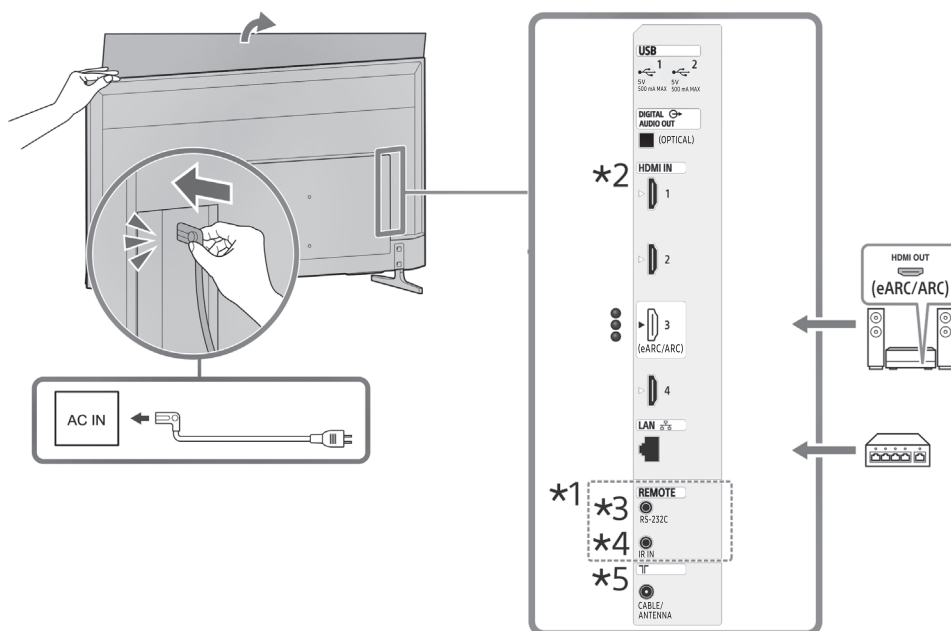 

NOTE : The actual number of ports may have a different name or location.

 
8

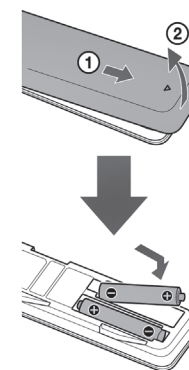


NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

(Batteries not included)

 9

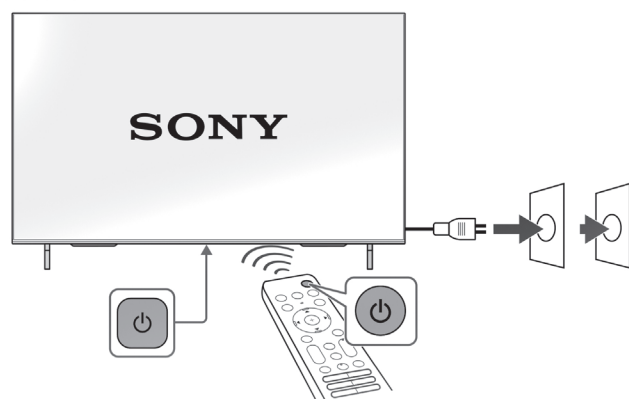

 NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

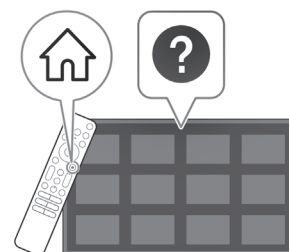

***2** < 21 mm
< 12 mm

***3** 3.5/3,5 mm
1: Rx/D
2: Tx/D
3: GND

***4** 3.5/3,5 mm
1: IR
2: GND

***5** < 7 mm
< 1.5/1,5 mm

NOTE : The cables mentioned in this guide is not supplied with your unit.

