

IMPORTANT SAFETY INSTRUCTIONS -
FOR HOUSEHOLD USE ONLY

READ CAREFULLY BEFORE USE - SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.
READ ALL INSTRUCTIONS BEFORE USING THIS SPOT CARPET/UPHOLSTERY CLEANER

⚠ WARNING REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, INJURY,
OR PROPERTY DAMAGE:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

2. **DO NOT** modify the plug provided with the appliance. If the grounded plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified electrician.

3. **DO NOT** force into outlet or try to modify it.

4. **DO NOT** pull, close door, or wrap around sharp edges or corners on the cord. To unplug, grasp the plug, not the cord. Keep cord away from heated surfaces.

5. To reduce the risk of fire or electric shock due to internal component damage, use **ONLY** Shark Deep Clean Pet and StainStriker formula in the correct tanks, as intended for use with this appliance. See Instructions below.

6. The areas around where you are cleaning may become wet, use care to avoid slipping and falling.

7. Use care when removing and reattaching the hand tool to the Spot Cleaner to avoid accidental activation of the cleaning solution.

8. **DO NOT** spray solution on your skin or in your eyes.

9. **DO NOT** fill solution tanks while installed on the appliance. Remove before filling.

10. **DO NOT** operate if there is any wetting of the exterior surfaces of the appliance. If the appliance is wet, dry with a cloth before use.

11. To reduce the risk of shock and unintended operation, turn off and unplug Spot Cleaner before any adjustment, cleaning, maintenance, or troubleshooting.

12. Before each use, carefully inspect each part for damage or wear. If a part is damaged or worn out, immediately discontinue use. **DO NOT** use if any part is damaged or if Spot Cleaner is not working as it should, has been dropped, left outdoors, or dropped into water.

13. **DO NOT** immerse or spray water on the body of the Spot Cleaner. To clean the surface, wipe with a dry cloth.

14. **DO NOT** allow to be used by children or as a toy. Close supervision is necessary when used near children.

15. **DO NOT** handle plug or Spot Cleaner with wet hands.

16. **DO NOT** use without the dirty water tank, clean solution tank, or filter in place.

17. Use only identical Shark® replacement parts. Only use Shark® branded filters and accessories.

18. If plugging unit into extension cord, ensure cord is no more than 15m to prevent damage to the motor.

19. **DO NOT** place Spot Cleaner on uneven surfaces.

20. **DO NOT** use to pick up:

a) Large objects

b) Hard or sharp objects (glass, nails, screws, or coins)

c) Large quantities of dust (e.g., drywall dust).
21. **DO NOT** use in the following areas:

a) Poorly lit areas

b) Outdoor areas

c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).

22. **DO NOT:** Engage spray trigger unless pointing at the affected area. **WARNING:** May still spray when the unit is powered off.

23. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.

24. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

 
25. Use extra care when cleaning on stairs.

26. **GROUNDING INSTRUCTIONS:** This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding attachment plug. This appliance is for use on a nominal 120V circuit. Make sure that the appliance is connected to an outlet with the same configuration as the plug that is properly installed and grounded in accordance with all local codes and ordinances. No adapter should be used with this appliance.

27. Do not store unit where temperatures reach freezing levels to avoid damaging internal parts.

28. **FIRST AID** keep out of reach of children. Causes skin and serious eye irritation. If in eyes, rinse continuously with water for minutes. Remove contact lenses if present and easy to do so. Continue rinsing. If on skin, wash with soap and water. If skin and eye irritation persists, seek medical attention.

29. Please recycle container. Dispose of contents/container with licensed waste disposal site in accordance with the requirements of the local waste disposal authority. Do not dispose in drains or watercourses in concentrate form.



SAVE THESE
INSTRUCTIONS

PARTS

- Ⓐ Power Button

Ⓑ CarpetXpert™ Tank

Ⓒ Rinse & Go™ Self-Wash Cycle

Ⓓ StainStriker Tank

Ⓔ Dirty Water tank

Ⓕ Hair Filter
- Ⓖ Mini Stain Eliminator

Ⓗ Suction Inlet

Ⓘ Spray Outlet

Ⓢ Spray Trigger

Ⓚ Detach Button

Ⓛ (3.5") Stain Eliminator
- Ⓜ Bristles/Hair-Gripping Fins

 
 
 
 
Ⓝ Pet Hair Extractor Tool

Ⓞ Pet Mess Extractor Tool

Ⓟ 6oz. Deep Clean Pet Formula


Ⓠ 12oz. OXY Multiplier Formula

NOTE: *Not all accessories come with all units. Tools may vary by model.

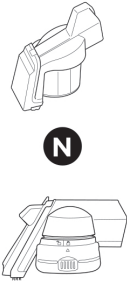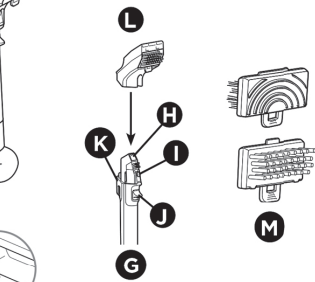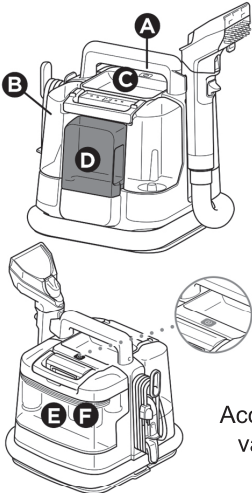


Accessory type and quantity may vary depending on the model.

 
GETTING STARTED

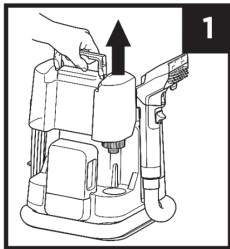

 
1. Lift the CarpetXpert™ Tank off the unit. Turn the tank over, unscrew the cap, and remove it.

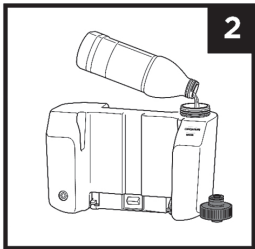

 
2. Add water to the CarpetXpert™ Tank up to the WATER fill line. Then add Deep Clean Pet formula to the CONCENTRATE fill line.
IMPORTANT: Never use very hot water, even from the faucet. Never use boiling water. Never use microwaved water. Warm water is okay.

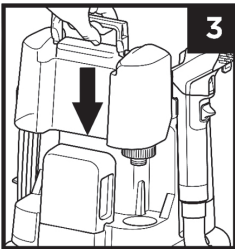

 
3. Replace the cap, then reinstall the tank until it clicks into place.

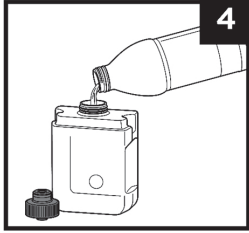

 4. Detach the StainStriker™ tank from the unit and turn over. Unscrew the cap and pour the OXY Multiplier formula into the tank.

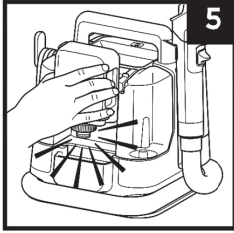

 5. Replace the cap and reinstall the tank until it clicks into place.

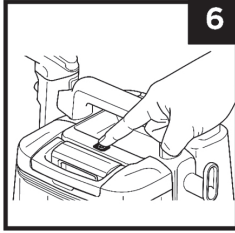


6. Unwrap the power cable and plug into a power socket. Turn **ON** unit to begin cleaning.

TIP: Before first use, remove the dirty water tank then reinstall it, making sure it is securely in place and the seal is properly fitted.


IMPORTANT: Clean with a traditional vacuum cleaner first before using StainStriker. Use **ONLY** Shark branded cleaning solutions: Deep Clean Pet and OXY Multiplier.

 WET STAIN CLEANING

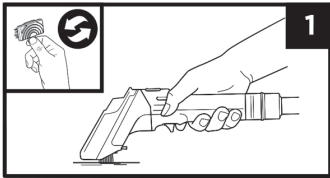

1. Follow the Stain Guide on the Stain Tool Handle. Press the power button to turn on the unit. Spray the stain area, then scrub it with the tool. Tilt the tool forward and drag it across the stain to extract liquid. Repeat if needed. To avoid longer dry times, do not overspray.

 
DRY STAIN CLEANING

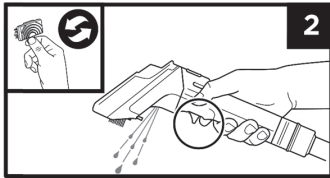

2. Follow the Stain Guide on the stain tool. Press the power button to turn on the unit. Scrub the stain area with the tool bristles, then spray the stain and scrub again. Tilt the tool forward and drag it across the stain to extract liquid. Repeat if needed. To avoid longer dry times, do not overspray.

CLEANING TIPS:

 
- For older and tougher stains, allow up to 5 minutes for the cleaning solution to penetrate deeper into the stain.
- If a difficult stain was not fully removed, wait 24 hrs, and try a 2nd pass. With extremely difficult stains, this might be needed.
- Fresh stains can be cleaned immediately after spraying.
- Always agitate the area thoroughly to break up the stain. Brush in multiple directions for best results.




DRY TIME TIPS:

- Do not overspray, especially on furniture and upholstery. Overspraying may cause fluid to be absorbed deep into cushions and upholstery.
- For the most effective suction, tilt the handle forward, apply pressure, then drag the tool backward. Repeat until little to no fluid is being sucked into the window on the tool.

 
MAINTENANCE

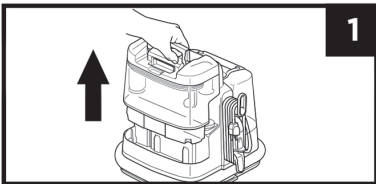

 
1. Detach the dirty water tank, making sure to keep it upright. Set the tank down on a level surface. Push the handle all the way back until it clicks, then lift off the lid.

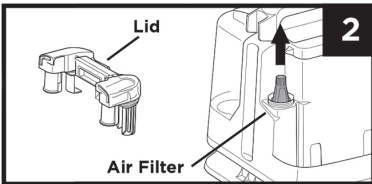

 
2. Clean and rinse off the underside of the lid. Remove cone shaped Air Filter by pulling it up, and rinse off any debris.

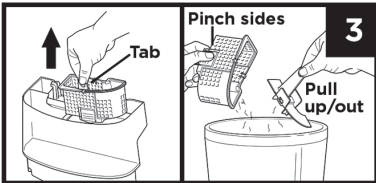

 3. To remove hair from the hair filter, take the filter out of the dirty water tank by pulling the tab directly up. Hold the filter over the trash, then pinch the bottom sides of the filter basket and pull out the tab. Tap the hair out into the trash.

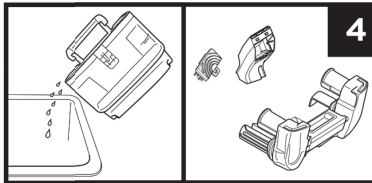


 4. Pour debris and liquid out of the dirty water tank into a sink or drain. Rinse tank thoroughly with soap and water. Clean debris off the hand tools, bristles, and float valve thoroughly using soap and water. Allow all parts to air-dry completely before reinstalling.

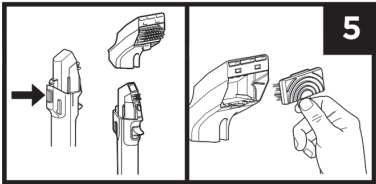


5. Detach the stain tool by pressing the release button. Remove the cover from the tool to clean the air path. Wash the bristles on the tool thoroughly.

 
NOTE: Clean unit after every use to avoid odors, bacteria, and mold.

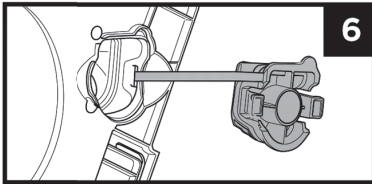

 6. To clear any clogged debris, remove the connecting clip on the bottom of the unit. Pinch the sides of the clip, then pull it out.
Important: Be sure to securely replace the cover on the tool to prevent leaking.

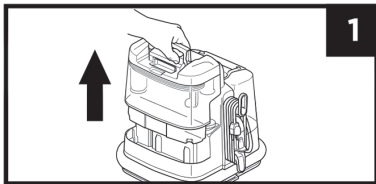

 1. Detach the dirty water tank, making sure to keep it upright. Set the tank down on a level surface. Push the handle all the way back until it clicks, then lift off the lid.

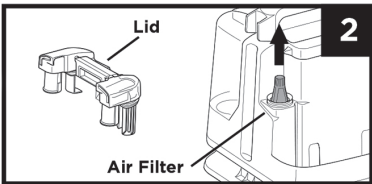

2. Clean and rinse off the underside of the lid. Remove cone shaped Air Filter by pulling it up, and rinse off any debris.

• The images shown in this manual are for illustrative purposes only and may be subject to change.

