

IMPORTANT SAFETY INSTRUCTIONS

 
SAVE THESE INSTRUCTIONS

WHEN USING YOUR SHARK STEAM MOP, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING: READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP.

DANGER OF SCALDING. Please use caution when using the steam mop. The steam emitted from the steam mop is very hot.

POLARIZED PLUG:

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not attempt to defeat this safety feature.**

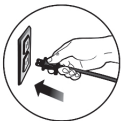

1. Use the system only for its intended use.
2. **DO NOT** use outdoors.
3. **DO NOT** leave the appliance unattended when plugged in. Always unplug the power cord from the electrical outlet when not in use and before servicing.
4. **DO NOT** allow the appliance to be used by children. Close attention is necessary when used by or near children, pets or plants.
5. Use only as described in this manual.
6. Use only manufacturer's recommended accessories.
7. **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used.
8. To protect against a risk of electric shock, **DO NOT** immerse the steam mop into water or any other liquids.
9. **DO NOT** handle plug or steam mop with wet hands or operate appliance without shoes.
10. **DO NOT** pull or carry by power cord, use power cord as handle, close a door on the power cord, or pull the power cord around sharp edges or corners. Keep power cord away from heated surfaces.
11. **DO NOT** unplug by pulling on power cord. To unplug, grasp the plug not the power cord. Do not use extension cords or outlets with inadequate current carrying capacity.
12. **DO NOT** put any objects into openings. Do not use with any opening blocked.

13. **DO NOT** put hands or feet under the steam mop. Unit gets very hot.
14. Use **ONLY** on flat, horizontal surfaces. Do not use on walls, counters or windows.
15. **DO NOT** use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
16. **DO NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use. If you live in a hard water area, we recommend using distilled water in your steam mop.
17. When in use, NEVER turn the appliance over or on its side. **NEVER DIRECT STEAM TOWARDS PEOPLE, ANIMALS OR PLANTS.**
18. **NEVER LEAVE THE STEAM MOP IN ONE SPOT ON ANY SURFACE FOR ANY PERIOD OF TIME WHEN MICRO-FIBER POCKET IS ATTACHED.**
19. Carefully remove the micro-fiber pocket immediately after you have unplugged and allowed the steam mop to cool.
20. When cleaning the steam mop, unplug the power cord from the electrical outlet and clean with a dry or damp cloth. Do not pour water or use alcohol, benzene or paint thinner on the unit.
21. Extreme caution should be exercised when using this appliance to clean stairs.
22. Never use steam mop without micro-fiber pocket attached.
23. Keep your work area well lit.
24. Store steam mop indoors in a cool, dry place.
25. To avoid circuit overload, do not operate another appliance on the same socket (circuit) as the steam cleaner.
26. If an extension cord is absolutely necessary, an extension cord rated a minimum of 15 ampere, 14 gage cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange cord so that it cannot be pulled or tripped over.
27. **DO NOT** leave your Steam Mop unattended when the system is connected to a power supply /electrical outlet.
28. **DO NOT** store unit with damp/ wet micro-fiber cleaning pocket attached. Never leave the steam mop in one spot on any surface for any period of time with a damp or wet micro-fiber cleaning pocket attached as this will damage your floors.
29. Always unplug and allow the steam mop to cool before removing or changing mop heads.

 
⚠ WARNING: Your steam mop is designed to clean hard floor surfaces that will withstand high heat. Do not use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.

Shark



S3501

Getting Started

When assembling your Steam Pocket® Mop there may be a little water in or around the water tank. This is because we test all our Steam Pocket® Mops 100% before you buy them, so you get a quality Shark® Steam Pocket® Mop.



  - a All Purpose Cleaning Pads
- b Quick Release Swivel Cord Wrap
- c Cord Clips
- d Mop Handle
- e Telescopic Handle Latch
- f Water Tank Viewing Window
- g Power-On Blue Light
- h Water Tank Cap
- i Rectangle Mop Head

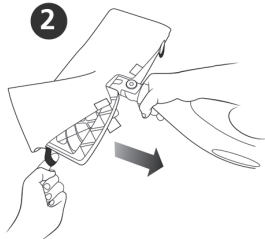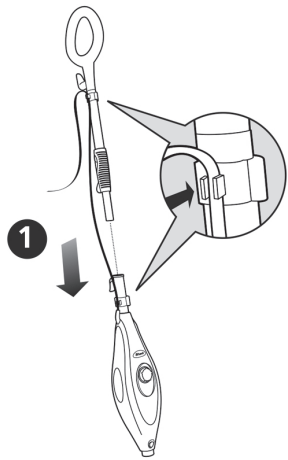

⚠ IMPORTANT: Always make sure the mop is **UNPLUGGED** from the wall when not in use. Never fill the mop, attach the mop head, change or remove the microfiber pocket when the mop is plugged into the wall. To prolong the life of your Shark® Pro Steam Pocket® Mop, we recommend using distilled water. Make sure you only add water to the tank. Chemicals or cleaning solution may damage the appliance and could be unsafe for you and your family.

 
 
 
ASSEMBLE

- 1 Insert the mop handle into the pump actuator (the tube that leads to the tank). Push the mop handle and pump actuator together in until you hear it click into place.
- 2 Select a cleaning pad. Fit one side of the pocket onto the head first, then using the lavender loop, pull the pocket over the head. Attach the quick fasteners on the top of the pocket to secure in place.

Owner's Guide

Please read this manual before use the unit.


For Household Use Only

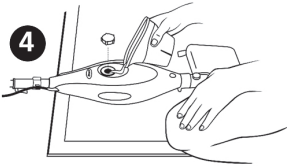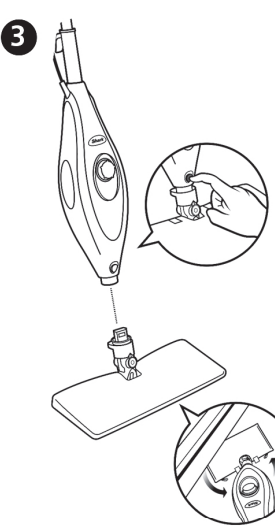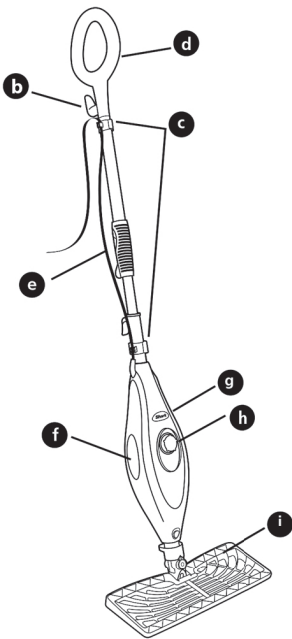

- 3 Snap the mop head into the mop body until you hear it latch into place. Press the release button to exchange mop heads.
- 4 Turn the water tank cap counter clockwise and remove from the tank.

Use the filling flask and pour water into the tank. Please do not overfill. Replace the cap on the water tank by turning clockwise and tightening.

 ⚠ IMPORTANT: Do not use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We recommend that you check the use and care instructions from the floor manufacturer.

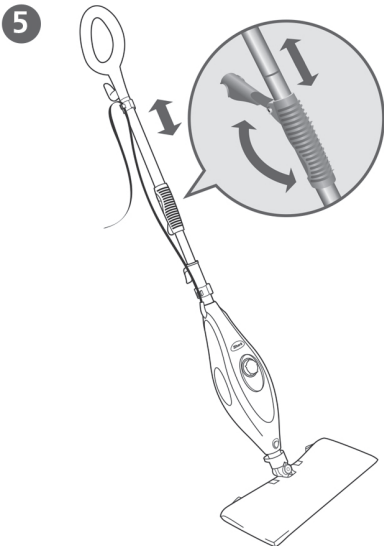

- 5 For your comfort, you can adjust the height of the mop. Just lift the latch on the tube 90 degrees to the open position. Holding the handle, extend the tube to the height that's right for you and then close latch to locked position.

⚠ QUICK TIP: For easier pushing and pulling, extend the handle length.

Note:
In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.

Using Your Steam Pocket® Mop

IMPORTANT: Do not use the mop without attaching a microfiber pocket and adding water to the tank first. When you are using the mop for the first time, it might take longer than the normal 30 seconds to start steaming. Just pump the handle a few times in a downward motion to prime the pump.

 


NOTE: Make sure the floors are swept or vacuumed before using the Steam Pocket® Mop.

1 Pull and twist the quick release cord holder to unwrap the power cord completely.

Plug into an electrical outlet The power “On” light will turn blue, it takes approximately 30 seconds for the mop to heat up and the steam to be ready.

2 Pump the handle a few times in a downward motion. This pumping action will release steam as you mop and allows you to customize the amount of steam you want. Begin mopping with a forward and backward motion. The natural motion of mopping will produce steam.

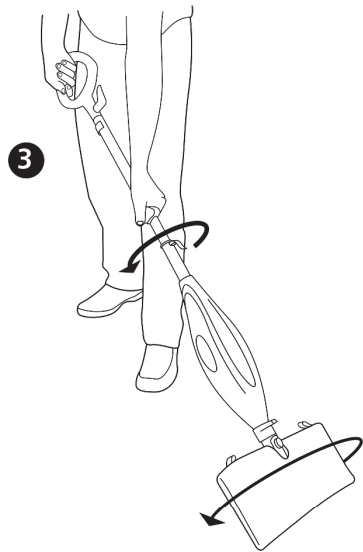

3 When one side of the microfiber pocket gets dirty, just flip the mop head and you can quickly start using the other side.

IMPORTANT: Please wait 3-5 minutes for the Steam Pocket® Mop to cool before switching the mop head or the microfiber Steam Pocket®.

 
4 When the water tank is empty, the Steam Pocket® Mop will stop producing steam. You can refill the water tank at any time as long as the mop is unplugged from the outlet.

IMPORTANT: Never leave the Steam Pocket® Mop with a damp/wet microfiber pocket on any floor surface for any amount of time as this may damage the floor.


Care of Your Steam Pocket® Mop

AFTER USE AND STORAGE

1 When you have finished using the Steam Pocket® Mop, unplug the cord from the outlet and let the unit cool 2-3 minutes. Release steam by pumping the handle several times before removing the microfiber Steam Pocket® from the mop head.

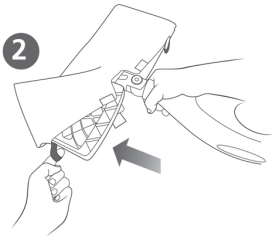


 2 Remove the microfiber Steam Pocket® by releasing the quick fasteners and using the lavender loop on the side of the pocket to pull off. Avoid contact with the hot pocket or dirt. Then empty the water tank.

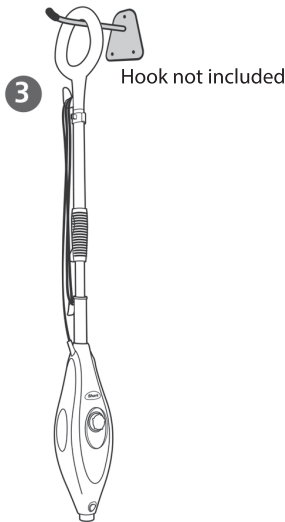

3 To store the Shark® Steam Pocket® Mop hanging up; first remove the head (after it has cooled and the steam has been released) then hang on a large hook.

 NOTE: If you want to store it standing upright, then make sure it’s leaning against a wall for added support and safety. Always store your Steam Pocket® Mop with the microfiber Steam Pocket® removed, away from children or high traffic areas.

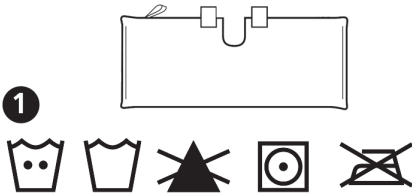

CARE OF YOUR MICROFIBER CLEANING PAD

1 We recommend washing your microfiber Steam Pockets® separately from other fabrics to avoid picking up lint.

Only use liquid detergent. (No powder detergent) Do not use any fabric softeners or bleach.

Line dry or dry on a low dryer setting.



2 If there are loose threads on the pocket carefully cut the thread with scissors. Do not pull on them or cut at the base.

DECALCIFYING YOUR STEAM MOP

Calcium and mineral deposits can build up and impact the performance of your steam mop over time.

Troubleshooting Guide

PROBLEM	POSSIBLE REASONS & SOLUTIONS
The Steam Pocket® Mop will not turn on.	Your Steam Pocket® Mop should be securely plugged into an electrical outlet only. Check your fuse or breaker. If your unit still doesn’t work, call a service center.
Steam Pocket® Mop will not make steam.	Is there water in the water tank? If not, add water to your Steam Pocket® Mop following the instructions.
Steam Pocket® Mop leaves water on the floor.	Check to see if your microfiber Steam Pocket® is too wet. We recommend you unplug the Steam Pocket® Mop and change the microfiber Steam Pocket®. Make sure the steam pocket is attached correctly.
Steam Pocket® Mop is hard to push.	Make sure the steam pocket is attached correctly. Check to see if your pocket is excessively dirty. Try increasing the height of the pole for better leverage.
Floors are cloudy, streaky or spotty after steaming.	The microfiber pocket might be dirty. Flip or change the pocket. If you washed the pocket with powder detergent then the pocket might be ruined. If you are cleaning in a kitchen area where there might be a build-up of grease then use a degreasing agent such as an all-purpose cleaner or dish soap and paper towels to clean the area first. You might have left the mop in the same spct for too long. Do you have hard water? If you do you, we recommend switching to distilled water.

