

NINJA

BLAST™

PORTABLE BLENDER

CO155BC | Owner's Guide

8 1 4 1 0 0 7 5 8

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	For household use only.
	Indicates location to attach USB-C cord for charging unit.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 1

Read all instructions prior to using the appliance and its accessories.
- 2

Use only a power supply with an extra low voltage corresponding to the marking on the bottom of the motor base.
- 3

ALWAYS exercise care when handling the BlastBlade™ Assembly. The blades are sharp, handle carefully. **ONLY** grasp the BlastBlade™ Assembly by the motor base. Failure to use care when handling the BlastBlade™ Assembly will result in a risk of laceration.
- 4

Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 5

Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 6

Before use, wash all parts that may contact food. Follow washing instructions covered in this Owner's manual.
- 7

DO NOT blend hot liquids, or effervescent or carbonated liquids, as doing so may cause pressure buildup, resulting in risk of burns or other injuries to the user.
- 8

DO NOT fill the blending vessel past the **MAX** line.
- 9

Blades are sharp. Handle carefully.
- 10

Keep hands, hair, and clothing out of the vessel when loading and operating. **DO NOT put your hands inside the vessel or anywhere near the BlastBlade™ Assembly. Blades can still activate when the sip lid is removed.**
- 11

Remove utensils prior to processing. Failure to remove may cause the blending vessel to be damaged or to shatter, which may cause personal injury.
- 12

To protect against the risk of fire from battery damage, **DO NOT** submerge the motor base in any form of liquid.
- 13

DO NOT store outdoors or allow the product to be submerged in liquid.
- 14

DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 15

This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16

Before each use, inspect BlastBlade™ Assembly for damage. If a blade is bent or damage is suspected, contact a service center.
- 17

DO NOT attempt to sharpen blades.
- 18

DO NOT allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
- 19

ALWAYS use the appliance on a dry and level surface.
- 20

ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 21

During operation and handling of the appliance, avoid contact with moving parts.
- 22

DO NOT operate the appliance with an empty container.
- 23

DO NOT microwave any containers or accessories provided with the appliance.
- 24

DO NOT perform grinding operations.

“Recipe book not included”



- 25

Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause the vessel to shatter and potentially result in personal injury and property damage.
- 26

DO NOT attempt to defeat the interlock mechanism. Ensure the vessel and sip lid are properly installed before operation.
- 27

DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
- 28

NEVER leave the appliance unattended while in use.
- 29

If you find unmixed ingredients sticking to the sides of the cup, turn off the appliance using the Power Button, and use a scraper to dislodge ingredients.
- 30

DO NOT attempt to remove the vessel and/or sip lid from the motor base while the BlastBlade™ Assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and/or vessel.
- 31

DO NOT store ingredients for extended amounts of time before or after blending them. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury.
- 32

If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, turn **OFF** the Ninja Blast™ Portable Blender using the Power Button and allow it to cool for approximately 15 minutes before using again.
- 33

DO NOT process dry ingredients without adding liquid to the blending vessel. Unit is not intended for dry blending.
- 34

Operate **ONLY** with the sip lid on.
- 35

DO NOT refrigerate or freeze blender.

BATTERY USE

- 1

The battery is the power source for the Ninja Blast™ Portable Blender. Carefully read and follow all charging instructions.
- 2

DO NOT incinerate this appliance even if it is severely damaged. The lithium-ion batteries can explode in a fire. Always properly recycle products powered by lithium-ion batteries.
- 3

Since there is no power cord, prevent accidental blade activation by ensuring the blender is turned **OFF** when not in use, while cleaning, or when drinking from the sip lid.
- 4

Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals together increases the risk of fire or burns.
- 5

Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- 6

This unit contains batteries that are only replaceable by skilled persons.
- 7

This unit contains batteries that are non-replaceable and moving parts that potentially present risk to the user.

SAVE THESE INSTRUCTIONS

NOTES:

- In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

- Accessories may vary depending on the model.

- The images shown in this manual are for illustrative purposes only and may be subject to change.

PARTS

- A

Sip Lid
- B

Carry Handle
- C

Blending Vessel*
- D

 
Vessel Cap*
- E

Blade Cover*
- F

Motor Base with BlastBlade™ Assembly
- G


USB-C Charging Cord
- H

Charging Port

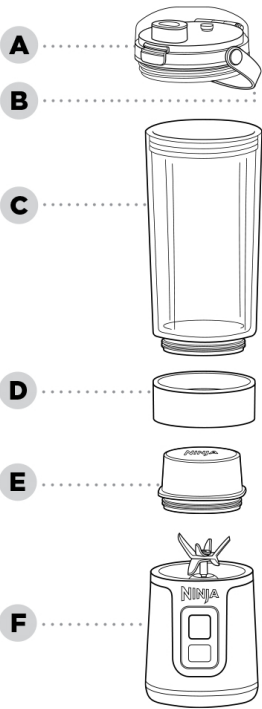

NOTE: CLEAN BEFORE USE

 *Blending vessel sizes and quantity, and accessories vary by model.

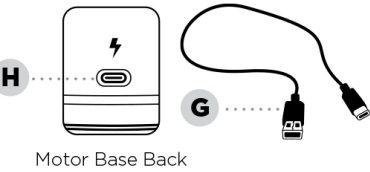

CHARGING ⚡

Charge the unit using the provided charging cord and a 5V 3A power supply until the LEDs illuminate solid green. Charging port is located on the back of the motor base.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's manual before proceeding.

NOTES:

- Handle the BlastBlade™ Assembly by grasping around the motor base.

 
• All attachments are BPA free. All attachments **EXCEPT** the motor base are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure lid and vessel are removed from motor base before placing in the dishwasher. Exercise care when handling BlastBlade™ Assembly.

Remove all packaging materials from the unit. Exercise care when unpacking BlastBlade™ Assembly, as the blade are sharp.

To clean the vessel and lid, add warm water up to **MIN LIQUID** line, then add 1 small drop of dish soap. Securely attach the lid and blend. Empty contents and rinse again with warm water. **DO NOT** submerge the motor base in water when cleaning. Exercise care when handling BlastBlade™ Assembly, as the blades are sharp.

Thoroughly rinse and air-dry all appropriate parts.

USING THE CONTROL PANEL

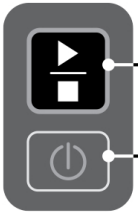

PROGRAMS:

►■ **(START/STOP) BUTTON**
Press Start/Stop button once to activate the 30-second blend cycle.

POWER BUTTON
Press Power button to turn unit **ON** and **OFF**.


LED Color(s)	Troubleshooting	Solutions
Flashing WHITE	Vessel and base are not aligned	Ensure vessel and motor base are aligned using the arrows on the vessel and the back of motor base.
Flashing ORANGE	Blades are blocked	Move lodged ingredients from blades and restart blending program.
Solid RED	Needs charge	Charge unit.
Flashing RED and BLUE	Abnormal charger	Defective charger; unplug and find correct 5V 3A charger.
Clockwise-moving ORANGE	Unit cool-down time-out	Let unit sit at room temp for 15 minutes before using again.
Flashing WHITE and RED	While charging	Contact a Service Center.
Flashing RED in the bottom left and top right	While blending	Contact a Service Center.


NOTE:
The actual descriptions of control panel and their locations may vary depending on the model.

USING THE BLENDING VESSEL

IMPORTANT: Review all warnings at the beginning of this Owner’s manual before proceeding.

  1 Ensure the motor base is fully charged, and ensure the vessel is properly installed by aligning vessel arrow with motor base arrow located on the back of the motor base.

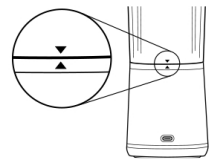

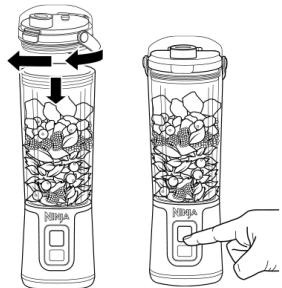


2 Turn unit **ON** by pressing the ⏻ button until ►■ (Start/Stop) button lights illuminate.


3 Add ingredients, starting with liquids, to the MIN LIQUID line. Then add solid ingredients. If using ice, always add it last. **DO NOT** fill ingredients past the MAX line. Secure lid onto the vessel, twisting clockwise to tighten.

4 Blend for a 30-second blend cycle by pressing the ►■ (Start/Stop) button.

5 Open the sip lid to sip, or remove the lid to pour out blender outputs into another container. **DO NOT** remove vessel from motor base when filled. Empty vessel prior to removing from motor base.

  
6 After blending, power **OFF** the unit by pressing the ⏻ button. Motor base should be turned **OFF** when drinking from the sip lid and when blender is no longer in use.

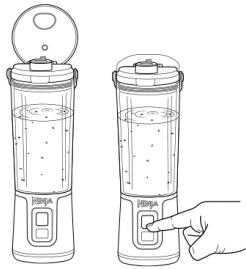

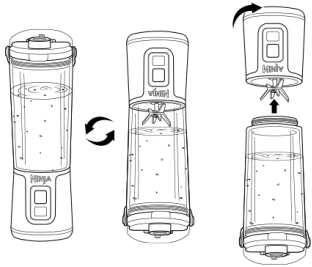

7 After blending is complete, ensure the lid is on tight and turn the blender upside down.

 8 Twist motor base counterclockwise to remove it from the vessel, and set the motor base right side up.

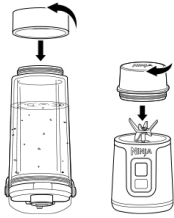

9 Install the vessel cap on the bottom of the vessel by turning it clockwise. Install the blade cover on the motor base to cover the exposed blades of the motor base by turning the cover clockwise.

10 Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING

Blades can still operate when the lid is removed. Always turn the unit **OFF** when cleaning without the lid on or when the BlastBlade™ Assembly is exposed.

Quick Clean

To clean, add warm water up to **MIN LIQUID** line, then add 1 small drop of dish soap. Securely attach the lid and blend. Empty contents and rinse again with warm water.

Hand-Washing

Wash vessel, lid, and BlastBlade™ Assembly with warm, soapy water. Use a dishwashing utensil or cloth to clean the BlastBlade™ Assembly on the motor base. Exercise care when handling the BlastBlade™ Assembly on the motor base as the blades are sharp. Wipe the motor base with a clean, damp cloth. **DO NOT** submerge the motor base in water. Thoroughly rinse and air-dry all appropriate parts.

Motor Base

Motor base is **NOT** dishwasher safe and cannot be submerged in water. Use a long-handled cleaning brush to clean the blades. **DO NOT** put the motor base in the dishwasher or submerge in water. Ensure the USB-C charger is not inserted before cleaning. Use the USB-C cover over the charging port when cleaning (feature not on all models). After cleaning, let the USB-C charging port air-dry for 30 minutes before charging the unit.

DEEPER CLEAN

Dishwasher

Vessel, sip lid, and covers are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure the vessel and sip lid are removed from the motor base before being placed in the dishwasher. After cleaning, let the USB-C charging port air-dry for 30 minutes before charging the unit.

STORING

Store the unit upright and with the lid, vessel, and motor base fully assembled.

DO NOT store blended or unblended ingredients in the vessel with the BlastBlade™ Assembly attached for prolonged periods of time.

DO NOT stack items on top of the vessel. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

TROUBLESHOOTING GUIDE

⚠WARNING: To reduce the risk of shock and unintended operation, turn **OFF** unit before troubleshooting.

Ensure the unit is not charging when troubleshooting.
Ensure the unit is fully charged and vessel is properly aligned.

Control panel doesn’t turn off.

- Press the ⏻ button to turn the unit **ON** and **OFF**.

Doesn’t mix well; ingredients get stuck.

- When filling the vessel, start with liquid to the **MIN LIQUID** line, then fresh fruit or veggies, followed by leafy greens or herbs. Add your seeds, powders, or nut butters. Finish with ice or frozen ingredients.
- If ingredients are routinely getting stuck, adding some liquid will usually help. Ensure you have filled the vessel to or above the **MIN LIQUID** line. You can also shake the blender while blending, or turn the blender upside down, start a blend cycle, and turn it right side up, to move ingredients while blending.

Sip lid is hard to assemble on the vessel.

- Set the assembled motor base and vessel on a level surface. Place the sip lid on the top of the vessel and align the threads so the sip lid sits flat. Turn clockwise until you have a tight seal.

Vessel is hard to assemble on the motor base.

- Set the motor base on a level surface. Place the vessel on the top of the motor base and align the threads so the vessel sits flat. When the vessel is properly installed, the LEDs on the display will be solid purple or solid yellow, depending on the battery level.

FCC WARNINGS

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the product and receiver. Connect the product into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: This product may not cause harmful interference, and this product must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this product.

TECHNICAL SPECIFICATIONS

Voltage: 5V⎓, 0.5A–3A

 


Please make sure to read the enclosed
Ninja® Owner's Guide prior to using your unit.

NINJA BLAST™

PORTABLE BLENDER

QUICK ASSEMBLY

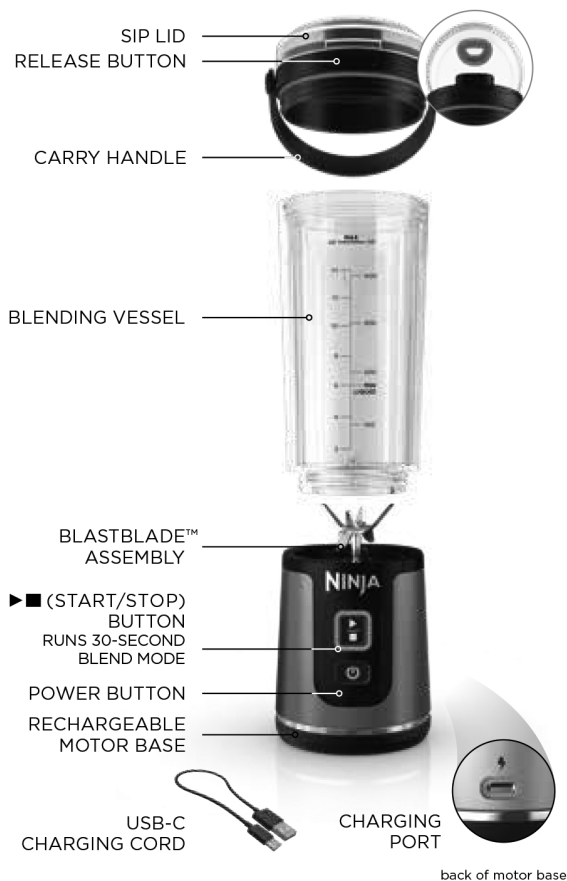

**For best results, ensure the blender
is fully charged before use.**

 
Clean before first use.

NOTE: Color and accessories vary by model.

▲WARNING: Handle the blade assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

LOAD IT UP

DO NOT blend without ingredients or without lid.
DO NOT go past MAX line when loading vessel.

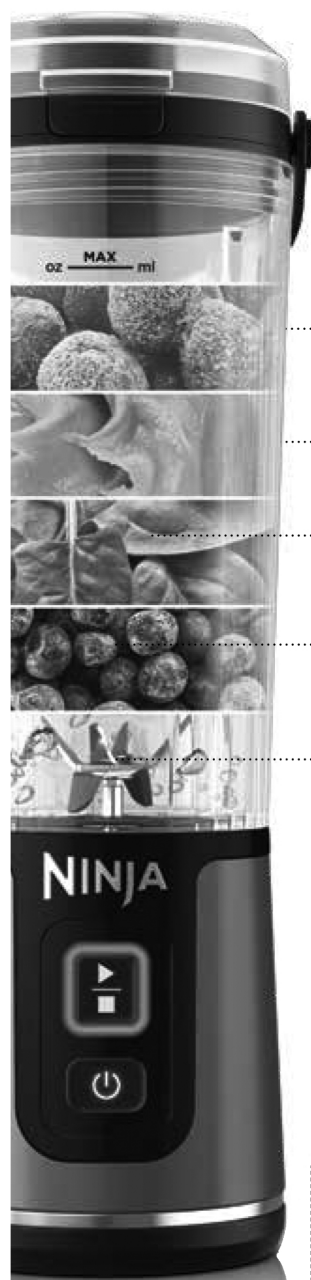

PREP TIPS: For best results, cut ingredients in 1-inch pieces. Place frozen ingredients in the cup last.

5 **Finish** off with ice or frozen ingredients.

4 Then add dry or sticky ingredients like **protein powders**, nut butters, and seeds.

3 Then add leafy greens.

2 Next add fresh fruits.

1 **Start** by adding liquid up to the **MIN LIQUID** line.

The images here are for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.

For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

BLENDING INSTRUCTIONS

- 1 Install vessel until arrows on back of motor base are aligned with arrows on back of vessel. Turn unit on by pressing button until the LED icon illuminates.
- 2 Add ingredients, starting with liquids then solid ingredients. If using ice, always add to vessel last. Secure lid onto vessel.
- 3 **Blend:** Press the (Start/Stop) button. The unit will run for **30 seconds**. To stop the program sooner, press the (Start/Stop) button again.
- 4 When blending is complete, press the button to turn the unit off.



 
NOTE: When drinking or when blade function is not in use, turn blender **OFF** using button. Unintentional blade activation can occur when the lid is off.

CLEANING INSTRUCTIONS

- To clean, add warm water up to **MIN LIQUID** line, then add **1 small** drop of dish soap. Securely attach the lid and blend. Empty contents and rinse.

DEEPER CLEAN

- Both vessel and lid are top-rack dishwasher safe. These parts should **NOT** be cleaned with a heated dry cycle.
- After disassembling the vessel and lid, rinse blades and use a dishwashing utensil to clean them. Wipe motor base with a clean, damp cloth. Motor base is water resistant, **HOWEVER** the motor base is **NOT** dishwasher safe. **DO NOT** submerge base in water.

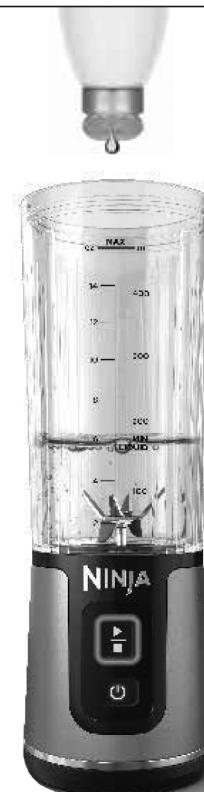

CONTROL PANEL



Blend Readiness



Vessel Misalignment:
Flashing WHITE LEDs



Low Battery:
Solid YELLOW LEDs



Ready State:
Solid PURPLE LEDs

Charge States



Fully
Charged:
Solid GREEN LEDs
(Charging:
Flashing Green)



Low Battery:
Solid YELLOW
LEDs



Requires
Charge:
Solid RED LEDs

Blending States



**30-Second
Blend Mode:**
Clockwise-moving
PURPLE LEDs.
If blending stops
before 30 seconds,
add more liquid.



**30-Second
Blend Mode:**
Clockwise-moving
YELLOW LEDs.
Battery is low.
Charge unit.



**Blades
Blocked:**
Flashing
ORANGE LEDs
for 5 seconds

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

Blocked Blade Troubleshooting

To get back to blending:

- 1 **Check ingredients:**
- Ensure ingredients aren't above **MAX** line.
 - Ensure there is enough liquid. Fill to or above **MIN LIQUID** line.
- 2 **Dislodge blockage:**
- Shake unit to remove blockage.
 - Turn unit upside down and restart blending.
 - Turn unit off and remove blockage from blade using long utensil. Restart unit.

NOTE:

- Blending performance will be best when unit is fully charged.
- Only use provided USB-C charging cord with 5V 3A power supply.

COFFEE PROTEIN SHAKE

PREP: 5 MINUTES | **MAKES:** 1 (18-OUNCE) SERVING

INGREDIENTS

- 1 tablespoon agave nectar (optional)
- 1/2 cup coffee, chilled
- 1/2 cup almond milk
- 1 frozen banana, cut in quarters
- 1 scoop chocolate protein powder
- 1/4 cup ice cubes

DIRECTIONS

- 1 With the vessel installed onto the motor base, add ingredients in the order listed. Secure the lid.
- 2 Turn the unit on by pressing **⏮** button, then press the **▶■** (Start/Stop) button for 30-second blend mode.
- 3 When blending is complete, press the **⏮** button to turn the unit off.

GREEN POWER SMOOTHIE

PREP: 5 MINUTES | **MAKES:** 1 (18-OUNCE) SERVING

INGREDIENTS

- 1/2 cup orange juice
- 1/2 cup coconut milk
- 1/2 cup baby spinach
- 1/2 banana, cut in half
- 1/2 cup frozen mango chunks

DIRECTIONS

- 1 With the vessel installed onto the motor base, add ingredients in the order listed. Secure the lid.
- 2 Turn the unit on by pressing **⏮** button, then press the **▶■** (Start/Stop) button for 30-second blend mode.
- 3 When blending is complete, press the **⏮** button to turn the unit off.

NOTE: When drinking or when blade function is not in use, turn blender **OFF** using **⏮** button. Unintentional blade activation can occur when the lid is off.

SPIKED STRAWBERRY LEMONADE

PREP: 5 MINUTES | **MAKES:** 1 (18-OUNCE) SERVING

INGREDIENTS

- 1/4 cup vodka
- 3/4 cup lemonade
- 1 cup whole frozen strawberries

DIRECTIONS

- 1 With the vessel installed onto the motor base, add ingredients in order listed. Secure the lid.
- 2 Turn the unit on by pressing **⏮** button, then press the **▶■** (Start/Stop) button for 30-second blend mode.
- 3 Upon completion, blend an additional 30 seconds by pressing the **▶■** (Start/Stop) button.
- 4 When blending is complete, press the **⏮** button to turn the unit off.

APPLE CIDER VINAIGRETTE

PREP: 5 MINUTES | **MAKES:** 1 CUP

INGREDIENTS

- 1/2 cup olive oil
- 1/2 cup apple cider vinegar
- 2 teaspoons minced garlic
- 1 1/2 tablespoons agave nectar
- 1/2 teaspoon Dijon mustard
- 1 teaspoon kosher salt
- 1 teaspoon ground black pepper

DIRECTIONS

- 1 With the vessel installed onto the motor base, add ingredients in the order listed. Secure the lid.
- 2 Turn the unit on by pressing **⏮** button, then press the **▶■** (Start/Stop) button for 30-second blend mode.
- 3 When blending is complete, press the **⏮** button to turn the unit off.

CREAMY AVOCADO SALSA

PREP: 5 MINUTES | **MAKES:** 1 1/2 CUPS

INGREDIENTS

- 2 tablespoons lime juice
- 1/4 cup milk of choice
- 1 teaspoon kosher salt
- 1 teaspoon ground black pepper
- 1/2 jalapeño, seeds removed, diced
- 1/4 cup cilantro, leaves and stems
- 1/4 cup sour cream
- 1/4 cup mayonnaise
- 1 avocado, pit removed, peeled, diced

DIRECTIONS

- 1 With the vessel installed onto the motor base, add ingredients in the order listed. Secure the lid.
- 2 Turn the unit on by pressing **⏮** button, then press the **▶■** (Start/Stop) button for 30-second blend mode.
- 3 Upon completion, blend additional 30 seconds by pressing the **▶■** (Start/Stop) button.
- 4 When blending is complete, press the **⏮** button to turn the unit off.
- 5 Serve creamy avocado salsa with tortilla chips.

NOTE: When drinking or when blade function is not in use, turn blender **OFF** using **⏮** button. Unintentional blade activation can occur when the lid is off.

814000758

PRINTED IN MEXICO / SC: 05-04-2026 / Elbrd: J.M / SHNMDL: CO155BCST_CO155BCTL_B
OBPN: CO155BCSeries_QSG_IG_E_MP_Mv2_240311