

Shark STEAMSPOT™

Scrubbing & Sanitizing Steam Mop

814100710

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • HOUSEHOLD USE ONLY

This steam mop has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. It is not recommended to use an extension cord with this product.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

GENERAL WARNINGS

WHEN USING YOUR SHARK® STEAMSPOT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

 
1. **DO NOT** leave the steam mop unattended when plugged in. **ALWAYS** unplug the power cord from the electrical outlet when not in use and before servicing.
2. **DO NOT** use with damaged cord or plug. If steam mop is not working as it should or has been dropped, damaged, left outdoors, or dropped into water, please contact a service center. Incorrect reassembly or repair can cause a risk of electrical shock or injury when the steam mop is used.
3. To protect against a risk of electric shock, **DO NOT** immerse the steam mop in water or any other liquids.
4. **DO NOT** handle the plug or steam mop with wet hands or operate it without wearing shoes.
5. **DO NOT** pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. **DO NOT** run steam mop over cord. Keep cord away from heated surfaces.
6. **DO NOT** unplug by pulling on power cord. To unplug, grasp the plug not the power cord. **DO NOT** use extension cords or outlets with inadequate current-carrying capacity.
7. Unplug before servicing.
8. **ALWAYS** make sure the steam mop is **UNPLUGGED** when not in use.
9. **NEVER** fill the steam mop or attach the mop head when the steam mop is plugged into an electrical outlet. Unplug from the electrical outlet and allow to cool before you fill the mop, or attach or remove the head.
10. When cleaning the exterior of the steam mop, unplug the power cord from the electrical outlet and clean the steam mop with a dry or damp cloth. **DO NOT** pour water or use alcohol, benzene, or paint thinner on the steam mop.
11. To avoid circuit overload, **DO NOT** operate another appliance on the same socket (circuit) as the steam mop.
12. To avoid scalding injuries, **ALWAYS** unplug and allow the steam mop to cool before removing or changing mop heads, accessories, or pads.

USE WARNINGS

13. When in use, **NEVER** turn the steam mop over on its side or direct steam toward people, pets or plants.
14. Use the system only for its intended use.
15. **DO NOT** use for space-heating purposes.
16. **DO NOT** use outdoors.
17. **DO NOT** allow the steam mop to be used by children. Close attention is necessary when used near children, pets, or plants.
18. Use only as described in this manual.
19. Use only manufacturer's recommended accessories.
20. **DO NOT** put any objects into the steam nozzle openings. Discontinue use if the steam nozzle is blocked.
21. **DO NOT** put hands or feet under the steam mop. It gets very hot.
22. Use **ONLY** on flat, horizontal surfaces. **DO NOT** use on walls, counters, or windows.
23. **DO NOT** use on leather, wax-polished furniture, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.
24. **DO NOT** add cleaning solutions, scented perfumes, oils, or any other chemicals to the water used in the steam mop as this may damage it or make it unsafe for use. If you live in a hard-water area, we recommend using distilled water in your steam mop.
25. **NEVER** leave any pads in one spot while using or storing for an extended period, as this may damage your surfaces.
26. You can release the pad after you have unplugged the steam mop and allowed it to cool.
27. Extreme caution should be exercised when using the steam mop to clean stairs.
28. **NEVER** use the steam mop without a pad attached.
29. Keep your work area well lit.
30. Store steam mop indoors in a cool, dry place.
31. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
32. **DO NOT** carry the steam mop while in use.
33. The steam emitted from the steam mop is very hot and may cause scalding. Please use caution when using the steam mop.
34. **DO NOT** use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax and on some unwaxed floors, the sheen may be removed by the heat and steam action.
35. **ALWAYS** test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.
36. **DO NOT** scrub any one area for an extended period.
37. **DO NOT** use the steam mop without attaching a pad and adding water to the water tank. When you use the steam mop for the first time, it might take longer than the normal 30 seconds to start steaming.
38. **DO NOT** use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax and on some unwaxed floors, the sheen may be removed by the heat and steam action. Test an isolated area of the surface to be cleaned before proceeding. Check the use and care instructions from the floor manufacturer.
39. To prolong the life of your steam mop, we recommend using distilled water. Add **ONLY** water to the tank. Chemicals or cleaning solutions (including vinegar) may damage the steam mop and could be unsafe for you and your family.
40. **DO NOT** use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
41. The liquid or steam must not be directed towards equipment containing electrical components, such as interior of ovens. Dispose of contents/container with a licensed waste disposal site in accordance with the requirements of the local waste disposal authority.
42. Use only identical replacement parts. Only use parts designated for this product.
43. **DO NOT** allow to be used as a toy.
44. Keep Steam mop away from children.
45. Keep the appliance out of reach of children when it is energized or cooling down.


READ ALL INSTRUCTIONS BEFORE USE

ASSEMBLING YOUR STEAMSPOT

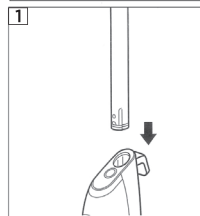

1. Align the pole with the opening in the main body and insert firmly until it clicks into place.

 
NOTE: Do not leave the steam mop plugged in when not in use

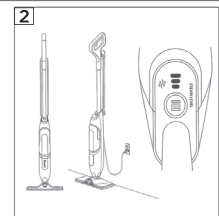

2. Stand the unit upright on a flat surface near a wall outlet and plug in the cord. The LEDs on the main body will illuminate when the cord is plugged in. Make sure all parts are clicked securely into place.

USING YOUR STEAMSPOT

 SELECTING A MODE

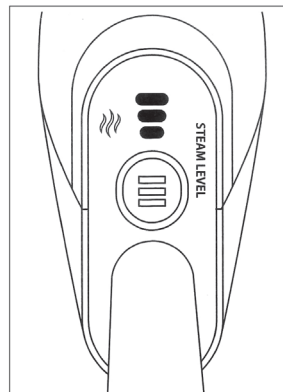

NOTE: When plugged in, the unit will not release steam until the handle is tilted back and the steam mop is in use.

NOTE: The actual descriptions of control panel and their locations may vary, depending on the model.

 
 
NOTE: The image shown here is for illustrative purposes only and may be subject to change.

MODES:

- IN USE:**
LED LIGHTS ON (NUMBER OF LEDS ILLUMINATED WILL VARY PER MODE)
- STANDBY:**
(LED LIGHTS FLASHING)
- HIGH:**
MAXIMUM STEAM LEVEL:
ALL 3 LIGHTS ARE ILLUMINATED
- MEDIUM:**
MEDIUM STEAM LEVEL: 2 LIGHTS ARE ILLUMINATED
- LOW:**
MINIMUM STEAM LEVEL:
BOTTOM LIGHT IS ILLUMINATED

ERROR MESSAGES:
(REFER TO ERROR MESSAGE SECTION)

FILLING THE CLEAN WATER TANK

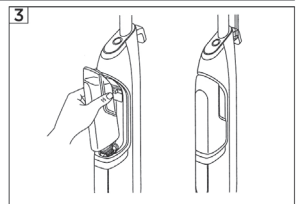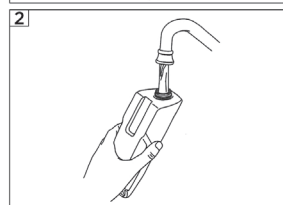

1. Pull out the tank and unscrew the cap.
2. Fill the water tank with **cold or room temperature** water to the **WATER** fill line.
3. Reattach the cap and rotate it until it is secure. Reinsert the tank until it clicks into place.

NOTE: Without sufficient water supply in the tank, the unit will not produce steam.


NOTE: Adding chemicals or cleaning solutions (including vinegar) may damage the steam mop and could be unsafe for you, your family, and your pets.

TO SANITIZE FLOORS


1. Attach a clean pad to the mop head.
2. Plug in the unit, tilt the handle down towards you, and press the Mode button to select the **HIGH** mode.
3. Wait at least 20 seconds for the unit to begin producing steam.
4. To ready the unit for sanitization, start cleaning with a forward and backward motion on an appropriate sealed hard floor surface. After three minutes, your unit will be ready to sanitize.
5. Move the floor nozzle slowly and evenly over the area to be sanitized while applying continuous downward pressure. Slowly repeat, making sure to cover the entire area to be sanitized with at least 15 strokes.

*To sanitize floors, be sure to completely follow the product's directions for use. Sanitization studies were conducted under controlled test conditions. Successful sanitization results have been demonstrated in laboratory studies performed using the following species of bacteria: Pseudomonas aeruginosa, Staphylococcus aureus, Escherichia coli, Salmonella enterica (typhi), and Enterobacter aerogenes.

 
HOW TO USE YOUR STEAMSPOT

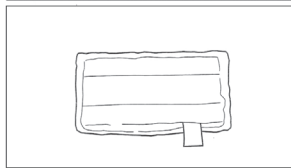

 
1. Place the pad on the floor with the velcro strips facing up.

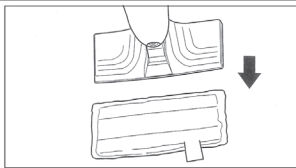

 
2. Hold the steam mop over the pad, with the back of the nozzle above the tag on the pad. Press down until the pad is attached.

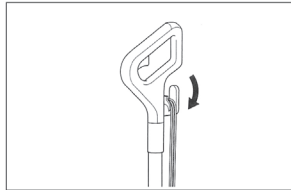

 
3. Twist the quick-release cord holder to unwrap the power cord. Plug the cord into a wall outlet.

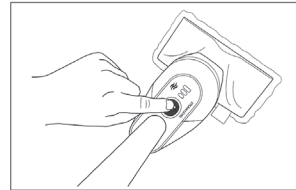

 4. Press the Mode button to select the steam level.

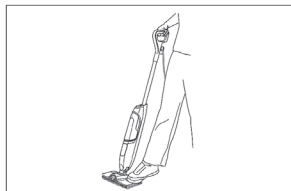

 5. Step on the floor nozzle and tilt the handle back to activate the steam flow.

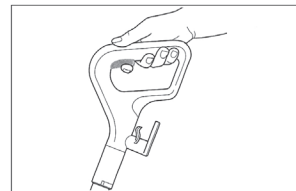

6. To activate the Steam Blaster, press the spray trigger on the handle.

INTELLIGENT STEAM CONTROL*

The Shark® SteamSpot has 3 Intelligent Steam Control modes so you can select the ideal amount of steam to use for each cleaning task. In MEDIUM mode, more steam will be produced than in LOW mode. In HIGH mode, the maximum amount of steam will be produced. Press the Mode button to select the steam level.

MODE	IDEAL FOR THESE SEALED SURFACES	RECOMMENDED USAGE
 LOW	Laminate Hardwood Vinyl	Cleaning delicate surfaces. Light cleaning and dusting. Loosening and lifting light dirt.
 MEDIUM	Marble Tile Stone	Basic, everyday cleaning. Cleaning large areas. Cleaning moderate and heavy-traffic areas.
 HIGH	Marble Tile Stone	Reaching hard-to-clean surfaces. Tough cleaning and removing stuck-on messes and stains. Deep cleaning heavy-traffic areas. Cutting through heavy dirt and grime and sanitizing* floors.

STEAM BLASTER®:

- To target tough messes with an extra burst of cleaning power, move the front of the nozzle 2 to 4 inches from the mess (**fig. 3**), then press and hold the spray trigger on the handle as needed. (Hold longer for the toughest messes.)
- Before scrubbing, wait 5 seconds to let the steam blast penetrate the mess.

Tip: For more difficult messes, wait for 20 seconds or more.

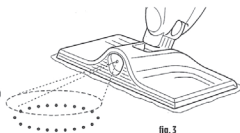 


fig. 3


CLEANING TIPS

Move Forward to Clean	For the most effective scrubbing and mopping, make cleaning passes in a forward direction.
Stain Cleaning	Saturate heavily stained areas. Hold the mop in place over a stain for 2 to 3 seconds to saturate it, then run the nozzle over the area multiple times until the stain is fully removed. Repeat if needed. Tough dry stains: Use the Steam Blaster to saturate the stain. Wait 5 seconds before scrubbing. Repeat as needed. Sticky/thick stains: Hold the mop in place over the stain for 10 seconds, then mop.
Mopping	Increase steam level when more saturation is needed.


NOTE: If your floors are cloudy, streaky, or spotty after cleaning, it may be due to accumulated soap or grease residue. See Maintenance section for more information.

MAINTAINING YOUR STEAMSPOT

 DISASSEMBLY

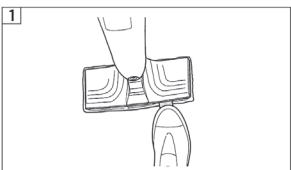

 1. With the mop head on the floor, step on the pad tag and lift the steam mop to disengage the pad.

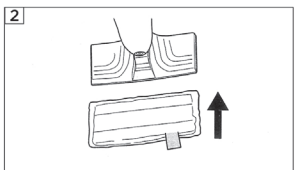

2. Dirty pads can be machine-washed or hand-washed. Allow pads to air-dry completely before reinstalling.

PAD CARE INSTRUCTIONS

Machine-wash pads separately with warm water, using liquid detergent. Do not clean pads in a dishwasher, as some detergents may cause the pads to leave streak marks on the floor. NEVER USE BLEACH, POWDERED DETERGENT, OR FABRIC SOFTENERS

This will damage the pads or leave a coating that will reduce their cleaning performance and absorbency.

 
 
 
The pads should be line-dried or tumble-dried on a low setting, as this will extend the life of the microfiber fabric.

Loose fibers can indicate wearing of the microfiber fabric. DO NOT pull the loose fibers, as this can cause the weave to come undone. Simply trim the loose fibers with scissors.

REPLACEMENT PADS

For best cleaning results, we recommend replacing the pads every 4 months following normal use. As with any fabric, dirt particles, grease, friction, and repeated washing can cause the fibers to break down, and you may notice an increase in effort needed to push or pull the mop.

STORAGE

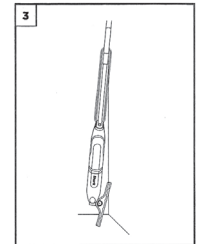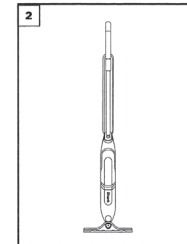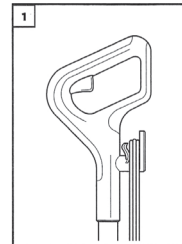

1. When ready to store the steam mop, wrap the power cord securely around the storage clips. Rotate the nozzle 90 degrees and flip it up for compact storage.

TROUBLESHOOTING

PROBLEM	POSSIBLE REASONS & SOLUTIONS
The steam mop isn't producing any steam.	The steam mop should be securely plugged into an electrical socket. Check your fuse or circuit breaker or try a different socket. Make sure the water tank is full, the unit is plugged in, and the Mode button is illuminated. If the mode lights are off, try a different electrical socket. If the lights are blinking, press the Mode button to select a steam mode. If the lights are illuminated steadily, wait 20 seconds for the unit to warm up. If after following the above steps the steam mop still does not produce any steam, contact a service center.
The steam mop is producing intermittent steam.	This is normal. For more consistent steam, select the MEDIUM mode. Also make sure the water tank is full.
I can't select a steam mode.	Make sure the steam mop is plugged in and the mode lights are flashing. If your steam mop is producing steam but the mode lights are off, contact a service center.
Floors are cloudy, streaky, or spotty after steaming.	The pad might be dirty. Install a clean pad. If you washed the pad with powdered detergent, then it could be damaged and require replacement. Due to accumulated soap or grease residue, the floor may require several cleanings with the steam mop. A more stubborn case may require you to rinse the floor with a mix of one part vinegar and two parts water* (but DO NOT put any cleaning solution into the steam mop's water tank). *Please consult your flooring manufacturer's care and maintenance instructions before applying any cleaning products or solutions.
It's hard to push or pull the mop.	The mop might be hard to push or pull if the pad isn't wet enough. It should get easier to move the mop across the floor after it's been running for a few minutes. An overly dirty pad could also make it harder to push or pull the mop. We recommend using a clean pad.
The steam mop is vibrating or wobbling.	Turn the power OFF and unplug the unit, and wait for the pad to cool. Follow the instructions in the Assembling Your Steam Spot section to reinstall the pad.
The steam mop turns off on its own.	If your steam mop shuts off while in use, it likely needs to cool down. Perform the following steps before you restart cleaning: 1. Turn the steam mop off, unplug it, and remove the pad. 2. Allow the unit to cool for a minimum of 30 minutes. 3. Reinstall the pad. Plug in the steam mop, select a steam mode, and begin cleaning.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

TECHNICAL SPECIFICATIONS:

Voltage: 120V, 60 Hz
Watts: 1050W (S2000 models) /
1200W (S2001, S2005 models)
Water Capacity: 500ml (16.9oz)

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2024 SharkNinja Operating LLC.
DIRT GRIP, INTELLIGENT STEAM CONTROL, SHARK, and STEAM BLASTER
are registered trademarks of SharkNinja Operating LLC.

PRINTED IN MEXICO Elbrd: A.M. SC: 04-20-2026

OBPN: S2001_IB_MP_Mv8_241218 SHNMDL: S2001

8 1 4 1 0 0 7 1 0

 


QUICK START GUIDE

Please read this guide carefully before operating your unit and retain for future reference.


GETTING STARTED

- A** Handle
- B** Pole
- C** Mode Button
- D** Steam Blaster® Trigger
- E** Clean Water Tank
- F** Power Cord
- G** Nozzle Base
- H** Dirt Grip® Pad
- I** Scrub Pad

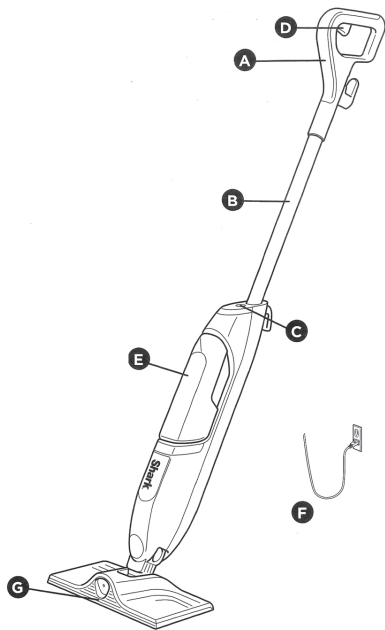


NOTE: Some pad types may not be included based on the model.

 
ASSEMBLING YOUR STEAM MOP

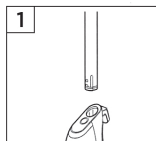

 
Align the pole with the opening in the main body and insert firmly until it clicks into place.

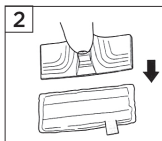

 Attach a pad by pressing the nozzle onto the pad with the tag facing the rear.

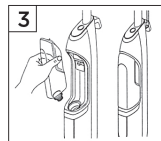

 Pull out the water tank and unscrew the cap. Fill the water tank with water **ONLY**.

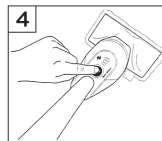

Plug in the SteamSpot™ and select a steam setting by pressing the Mode button. Tilt the handle back and wait 20 seconds to reach full steam production.

NOTE: The image shown here is for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO Elbrd: A.M. SC: 04-20-2026

OBPN: S2001_IB_MP_Mv8_241218 SHNMDL: S2001_EGB

8 1 4 0 0 0 7 1 0

