



Let's get brewing.

K-CUP[®] SINGLE SERVE COFFEE MAKER

814100766

• Please read this manual carefully before using the device and keep it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. READ ALL INSTRUCTIONS


- For household use only.
- Do not use distilled water.
- Scalding may occur if the handle is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact a service center, authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only.
- Only use K-Cup[®] pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
- Avoid spilling any liquid substances on powered connections.

- WARNING:** Keep all plastic bags away from children.
- CAUTION:** Keurig recommends using only Keurig[®] My K-Cup[®] Universal Reusable Filters and Keurig[®] approved K-Cup[®] pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig[®] pods or accessories may cause brewer malfunction or injury.
- WARNING:** Used K-Cup[®] pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
- WARNING:** There is extremely hot water under pressure in the K-Cup[®] pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
- CAUTION:** There are sharp needles that puncture the K-Cup[®] pod above the K-Cup[®] pod holder and in the bottom of the K-Cup[®] pod holder. To avoid risk of injury, be aware of the needle locations.
- WARNING:** If this appliance has a polarized plug (one blade is wider than the other), it is intended to fit into a polarized outlet only one way to reduce the risk of electric shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- POWER CORD INSTRUCTIONS:**
 - A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
- CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.



SAVE THESE INSTRUCTIONS

Button Overview

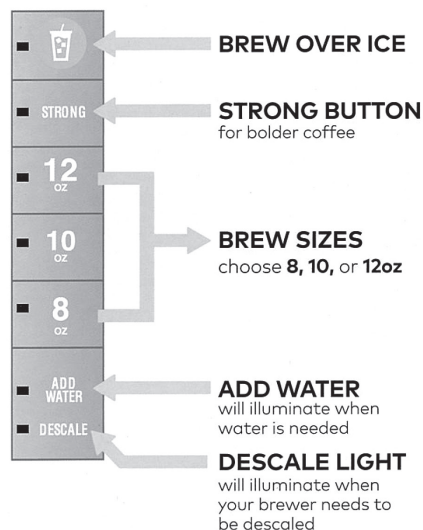

2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig[®] Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the tank is seated properly in the base. Replace lid.

NOTE: Do not use distilled water

Before You Brew



1 Plug & Place

Remove packing tape from brewer. Plug into an outlet.

Place a large mug (10oz minimum) on the drip tray.



3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup[®] pod.** The brewer will power on automatically.

4 Cleansing Brew

The 3 cup sizes will blink. Press the **8oz** button to start a cleansing brew. Pour the hot water into the sink.

Do not remove the water reservoir or lift the handle once the **BREW** button has been pressed until the brew has completed. The one-time setup process is now complete and you are ready to brew!

NOTE:

The actual descriptions of control panel and their locations may vary depending on the model.

To Brew Over Ice



1 Place Tumbler & Pod
Add ice to a tumbler and place on the drip tray (for more height, remove drip tray). Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

2 Brew & Enjoy!
Select the **BREW OVER ICE** button, then select your brew size. The **BREW OVER ICE** and selected brew size lights will remain illuminated while brewing. Brewing is complete when all size lights are illuminated. Lift the handle and dispose of the K-Cup® pod.
Like your coffee strong? Try the 8oz option!
NOTE: STRONG feature is not available while using **BREW OVER ICE**.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process. Do not brew into glass.
NOTE: For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

To Brew Hot



1 Place Mug & Pod
Place a mug on the drip tray. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

2 Brew & Enjoy!
The 3 brew size buttons will blink. Select and press your brew size. Brewing is complete when all the size lights are illuminated.
Lift the handle and dispose of the K-Cup® pod. For a bolder brew, the **STRONG** button may be turned on before or after the brew size is selected.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process. Do not brew into glass.
NOTE: For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

The images shown here are for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Brewer Features

BREW OVER ICE: Brew a refreshing iced coffee in minutes. The **BREW OVER ICE** feature automatically adjusts brew temperature, starting hotter to help extract full flavor, then cooling down for less ice melt.

STRONG BREW: For a bolder, more intense cup.

FAST & FRESH-BREWED: Coffee made in minutes.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7.25" tall.

SIMPLE BUTTON CONTROLS: Just insert any K-Cup® pod and use the button controls to brew a delicious cup.

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

COMPATIBLE WITH THE MY K-CUP® UNIVERSAL REUSABLE COFFEE FILTER: Brew your own ground coffee (sold separately).

DESCALE MODE: Once in mode, follow guided process to effectively remove scale from your brewer.

AUTO OFF: Automatically turns your brewer off 5 minutes after the last brew for energy savings, but will be ready to brew as soon as it is powered on again.

HIGH ALTITUDE: To ensure your coffee maker works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your coffee maker.

1. Begin with the brewer plugged in and powered off.

2. Press and hold the **BREW OVER ICE** button and **10oz** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Brewing Mode has been enabled.

3. High Altitude Mode will remain enabled until steps 1-2 are repeated and the **12oz** light turns off and the **8oz** light turns on to confirm that the High Altitude Brewing Mode is disabled.

HIGH ALTITUDE BREWING: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

Caring for Your Brewer

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule (products sold separately):

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution Keurig® Descale Pouch**	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

*To turn off Descale notification, follow the full descaling procedure as outlined in this guide.
**Descal pouch provides 1 month of coverage.

If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid and drip tray with warm, soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.
NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Descaling Procedure

NOTE: The full descaling procedure must be completed to turn off the **DESCALE** light.

You will need: a large ceramic mug (14oz minimum), fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® pod holder. The descaling procedure takes approximately 20 minutes.

STEP 1: Prepare the Brewer
Pour the entire bottle* of Keurig® Descaling Solution into an empty water reservoir. Then fill the empty bottle with water and pour into the water reservoir. **Do not insert a K-Cup® pod.** Place a large mug on the drip tray.

STEP 2: Descale the Brewer
To activate Descal Mode, begin with the brewer plugged in and powered off, then press and hold the **8oz** and **12oz** buttons together for 3 seconds. When flashing, press the **12oz** button to start the descaling process. Continue to brew until the Descale hot liquid into the sink. Continue to brew until the **ADD WATER** light illuminates.

STEP 3: Fresh Water Rinse
Empty and rinse the water reservoir and refill to the **MAX FILL** line with fresh water. When flashing, press the **12oz** button to start the rinsing process. Once the brew is complete, pour the hot liquid into the sink. Continue to brew until the Descale notification turns off. The brewer has now exited Descal Mode and will be ready for use!

NOTE: The cleaning action of Keurig® Descaling Solution may result in a "foam" dispensed from the brewer. This is natural, as the solution is reacting with the scale inside. For a brewer that is heavily scaled, the brewer may not fill properly after the descaler is added. If this occurs, you may see little to no output dispensed, followed by the sound of air blowing out. If this occurs:

- Turn off and unplug the brewer.
- If there is Keurig® Descaling Solution in the water reservoir, discard the contents, rinse the water reservoir thoroughly, and refill with water.
- Plug the brewer back in, power on, and repeat the Step 3 Fresh Water Rinse cycle. The brewer should begin to function normally as the solution is rinsed out and the scale is removed. If problem persists, allow brewer to sit unplugged for at least 30 minutes before continuing with the rinse.

*If using a Descal Pouch, pour contents of pouch plus 26oz of water into tank.

PRINTED IN MEXICO
Elbrd: E.Z / SC: 07-09-2026
OBPN: AW0000000655 REV B / SHDML: KISK26FAGY_B

