

Read Important Safety Instructions before use and save for future reference.

Shark
chillpill

Owner's Manual

LET'S GET STARTED.



IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY.

Refer to Owner's Manual for operating instructions.

Intended use: For personal cooling. Do not expose to rain or use in wet conditions.

NOTE: After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL INSTRUCTIONS BEFORE USE.

- DO NOT** expose this fan to rain or wet conditions. Water entering the fan will increase the possibility of battery damage and risk of fire.
- Keep hair and loose items securely away from the fan's air inlets and outlets. Tie back long hair before use. If entanglement occurs, power off or lock the unit immediately and disconnect power if charging.
- The fan must only be supplied at safety extra-low voltage corresponding to the marking on the appliance. Using a charger designed for a different battery type may create a risk of fire when used with an incompatible battery.
- Use only an external supply with the following specifications: 5 VDC, 3 A, 15 W.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
- In the event of a battery leaking, **DO NOT** allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amount of water and seek medical advice.
- CHOKING HAZARD.** Always keep wicks and any other small parts out of the reach of children.
- Children should be supervised to ensure that they **DO NOT** play with the fan.
- Charge the fan **ONLY** with the charging cable supplied with the fan. Inspect charging cord for damage before every use. **DO NOT** use damaged charger cord.
- DO NOT** charge or operate the fan in environments above 104°F or below 40°F.
- DO NOT** operate the fan, misting pod, or cooling plate in environments above 104°F, as extreme ambient temperatures may impair performance or cause condensation.
- Keep hands dry when touching the cooling plate to reduce risk of sticking or discomfort from the cold surface.
- This fan is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety.

- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- DO NOT** use if fan is not working as it should, has been damaged, or dropped into water.
- This product is **NOT** a humidifier. **DO NOT** use mist around infants or small children.
- Keep non-waterproof electronic equipment and appliances out of the misting stream.
- DO NOT** handle live electrical products while in range of the misting stream.
- To avoid accidental damage or injury **DO NOT** touch the metal surface of the misting pod while the fan is on.
- Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use distilled, warm, or hot water. Only use cold or room temperature water.
- DO NOT** use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.
- DO NOT** attempt to operate the misting feature with an empty water tank. The metal surface of the misting pod may reach high temperatures if operated without water. Hand wash exterior/hard plastic/non-electronic parts with damp cloth or alcohol wipe.
- Prior to cleaning or other maintenance, the fan must be unplugged from the charge cable and power supply.
- Cleaning and user maintenance shall not be made by children without supervision.
- Allow the cooling plate to reach room temperature before cleaning or moving it to avoid condensation.
- DO NOT** use sharp or metallic objects on the cooling plate surface to prevent scratching or compromising the cooling function.
- If the cooling plate surface appears damaged, cracked, or excessively frosted, discontinue use and contact an authorized service center.
- DO NOT** attempt to repair or adjust any electrical or mechanical functions of this fan, as this may cause danger and void the warranty.
- Only use Shark®-branded accessories.
- After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.
- Avoid storing the product outside to prevent damage from weather or environmental conditions.
- DO NOT** use if fan is not working as it should, has been damaged, or dropped in water.

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery: model FA020BAT50P from Huizou BlueWay Electronics Co., Ltd. or from Blueway VINA Company Limited. **DO NOT** use any other battery. **ONLY** recharge the battery with the charging cable supplied with your fan.

DO NOT incinerate or compost the product with its integral battery. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

MAINTENANCE

Main Unit & InstaChill™ Cooling Plate

- Turn off the fan and disconnect the power before cleaning.
- Wipe fan surfaces with a damp cloth or alcohol wipe. **DO NOT** submerge or pour water or other liquids to clean the product.

Note: The air inlet grill is not removable.

Misting Pod Cleaning and Maintenance

Empty and dry the water tank completely after every use. We recommend performing a clean soak every week, or as needed:

- Disconnect the misting pod from the fan.
- Remove the wick from the misting pod and replace monthly.
- Fill the water tank with 10 mL of undiluted distilled white vinegar (5% acetic acid by volume) and let sit for 5–7 minutes. **DO NOT** let the vinegar sit for more than 15 minutes.
- Carefully empty the tank and refill with clean tap or filtered water.
- Ensure the water tank and misting cap are fully sealed, then shake the pod for 10 seconds.
- Carefully empty the water out of the tank.
- Repeat steps 4–6 to thoroughly rinse the water tank.
- Let the tank dry completely before installing a new wick.

GET TO KNOW YOUR CHILLPILL™

Fully charge before first use.



SWAP ATTACHMENTS

Line up the open circle icon, then rotate the cap until it clicks into place.



- 1 UNLOCK TO USE**
Slide the power lock to the unlocked position.



 
 
- 2 POWER ON**
After unlocking, push down on the display to activate your ChillPill.



- 3 SET YOUR SPEED**
Turn the dial to increase or decrease airflow.
POWER OFF
Press down and hold the display, or slide the lock to the locked position.

ADJUST THE HINGE TO DIRECT AIRFLOW

Twist the barrels to adjust the airflow angle. You can use the battery barrel as a handle or as a tabletop stand.

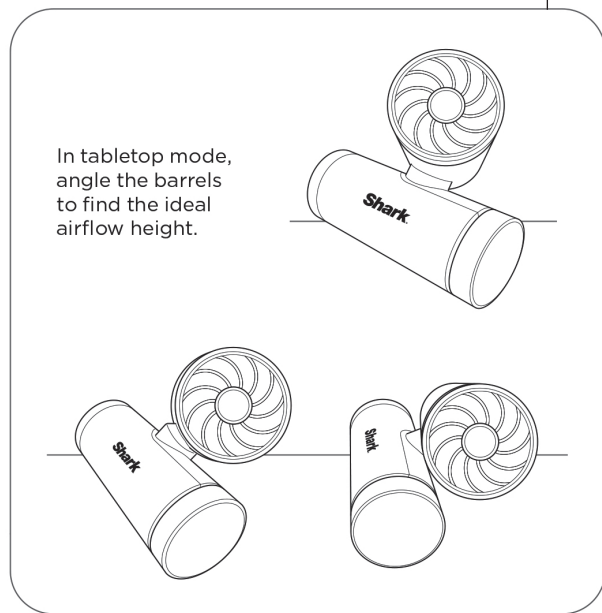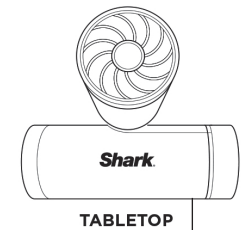

The images shown in this manual are for illustrative purposes only and may be subject to change.

USING THE FAN

The Fan Cap comes pre-installed and ready to use.



NOTE:
The actual descriptions of control panel and their locations may vary depending on the model.



Rotate the dial to adjust fan speed.
Try speeds 1-5 indoors, 5-10 outdoors.

MORE SPEEDS. ENDLESS WAYS TO CHILL.

Recommended speeds	1	2	3	4	5	6	7	8	9	10
At home relaxing	●	●	●							
Focused work sessions	●	●	●	●						
Running errands	●	●	●	●	●					
Daily commutes or travel	●	●	●	●	●	●				
Crowds, festivals & sidelines		●	●	●	●	●	●	●		
Parks & picnics				●	●	●	●	●	●	●
Time spent outdoors					●	●	●	●	●	●
Hot day cooldown						●	●	●	●	●

USING THE MISTING POD

 
1 ADD WATER
Open the tank and fill with water to the top. Thoroughly dry the exterior before use.

NOTE: Make sure the moisture wick is inside the misting pod. Replace the wick monthly.

2 INSTALL THE POD
Align the open circle icon with the icon on the barrel, then rotate until the pod clicks into place.

3 RELEASE THE MIST
Rotate the cap to open the protective cover. Pod must be in the open position to mist.

NOTE: (Not included in all models)

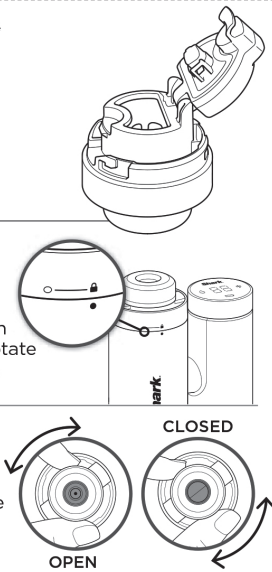

MIST MODES

Push down on the display to cycle through mist modes and to power off. Rotate the dial to adjust airflow speeds.



CONSTANT MODE
For a steady stream of mist. Icon is solid blue.
(Up to 5 minutes runtime)

INTERVAL MODE
For pulses of mist. Icon blinks blue.
(Up to 10 minutes runtime)



USING THE INSTACHILL™ COOLING PLATE

Align the open circle icon with the icon on the barrel, then rotate until the pod clicks into place. Push down on the display to activate. Place the cooling plate against areas like wrist, neck, and forehead for instant cooling on contact.



*With select units only

COOLING LEVELS

Push down the display once to activate Level 1 cooling. Push down again to increase to Level 2. Push down a third time to turn off.

Automatically turns off after 8 min. to conserve battery.



LEVEL 1
One dot indicates milder setting.
Great for indoor use.




LEVEL 2
Two dots indicate colder setting.
Great for indoor/outdoor use.

NOTE: ChillPill™ cannot operate as a fan while the cooling plate is attached.

For best results, use the cooling plate in temperatures under 90°F, and keep away from moisture.

CHARGING + BATTERY LIFE

 Always use your Shark®-branded cable. For best results, use with a 5V=3A power adapter.



RUNTIME			
Fan Speed	Fan Only	Fan + Mist	Cooling Plate
1	11 hours	4 hours	Level 1 2 hours
5	4.5 hours	2 hours	Level 2 1 hour
10	1.5 hours	1 hour	

CHARGE TIME (0-100%): UP TO 3.5 HOURS

The images shown in this manual are for illustrative purposes only and may be subject to change.

SOMETHING STUCK IN YOUR BLADES?

Always keep hair and loose items securely away from the fan's air inlets and outlets. **To keep your ChillPill safe, clean the inlet mesh filter when needed, and replace it when worn.**

To service the blades:

1 LOCK FOR SAFETY
The power lock must be in the locked position before performing any blade maintenance.



2 REMOVE THE INLET MESH FILTER
Insert a flat-head screwdriver into the slot under the filter rim and gently pry off the filter.



3 CLEAN THE BLADES
Use a cotton swab or tweezers to gently wipe away any hair or debris on the blades.

4 REPLACE THE FILTER
Align the tabs on the rim of the filter with the slots, then gently press until the filter snaps into place.



5 UNLOCK TO USE
Slide the power lock to the unlocked position.



*With select units only



8 1 4 1 0 0 7 9 3 A

PRINTED IN MEXICO / Elbrd: J.M. / SC: 24-07-2026 / OBPN: FA020_QSG_QO_MP_MV17_251111 / SHDML: UHO25_E2GB