


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

IDENTIFICATION OF PARTS

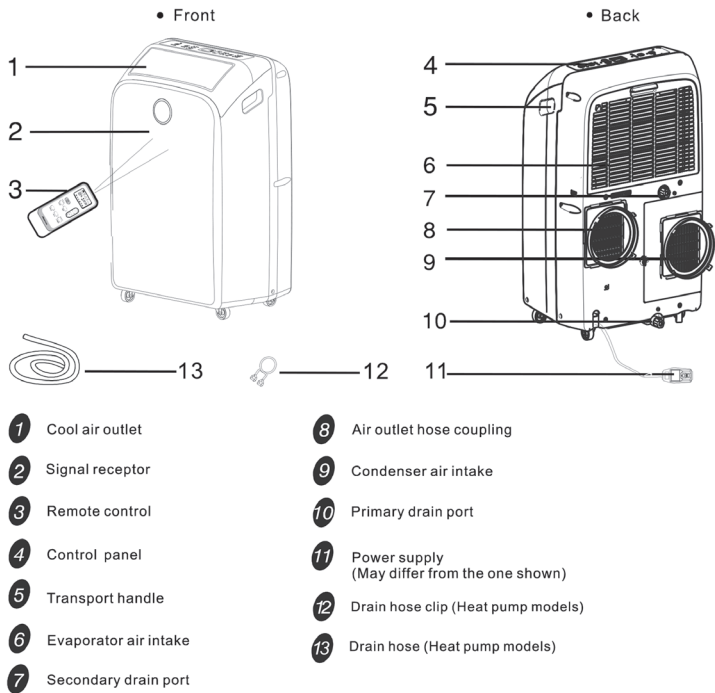

The figures in this manual are based on the external view of a standard model. They may differ from that of the air conditioner you have selected.

AIR CONDITIONER SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING". These words mean:

DANGER

A hazard that if not avoided will result in death or serious injury.

WARNING

A hazard that if not avoided could result in death or serious injury.

All safety messages will tell you what the potential hazard is and tell you how to reduce the chance of injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not use an extension cord.
- Do not remove ground prong.
- Unplug air conditioner before servicing.
- Do not use an electrical adapter.
- Use two or more people to move and install air conditioner.
- The appliance is not intended for use by young children or impaired persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

STORAGE AND DISPOSING OF THE UNIT

- Please recycle or dispose of the packaging material for product in an environmentally responsible manner.
- Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- Dispose of this appliance in accordance with Federal and Local regulations. Refrigerants must be evacuated before disposal.

WARNING Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources(for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- Do not drill holes in the unit.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

INSTALLATION REQUIREMENTS

Tools and Parts

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

Tools needed (Tools not included)

- Phillips screwdriver
- Scissors
- Pencil
- Cordless drill and 1/4" bit

Parts supplied

Check that all parts are included in parts package.

Part	Description	Part	Description
	A. Foam seal		I. Inner slider section-short
	B. Coupling		J. Inner slider section
	C. Flexible exhaust hose		K. Outer slider section
	D. Window exhaust adapter		L. Foam seal-long
	E. Rivets		M. Foam seal-short
	F. Screws		N. Drain hose (Heat pump models)
	G. Window-lock bracket		O. Drain hose clip(Heat pump models)
	H. Outer slider section with vent		P. Remote control

NOTE: Accessory type and quantity may vary depending on the model.

Electrical Requirements

WARNING

Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Recommended Grounding Method


This portable air conditioner must be grounded. This room air conditioner is equipped with a power supply cord with a three-prong grounding plug. The cord must be plugged into a mating, grounded three-prong outlet, grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded three-prong outlet installed by a qualified electrical installer.

It is the customer's responsibility:

To contact a qualified electrical installer. To assure that the electrical installation is adequate and conforms to the Nation Electrical Code,ANSI/NFPA 70-last edition,and all local codes and ordinances.

Copies of the standards listed may be obtained from: Nation Fire Protection Association www.nfpa.org

Wiring requirement
115 V (103.5 min. to 126.5 max.)
15 A time-delay fuse or circuit breaker
Power Supply Cord

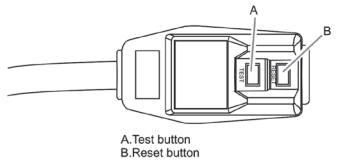

NOTE:

Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that sense leakage current. If the cord is crushed, the electronics detect leakage current and power will be disconnected in a fraction of a second.

To test your power supply cord:

1. Plug power supply cord into a grounded 3prong outlet.
2. Press RESET (on some devices, a green light will turn on).
3. Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn off).
4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn on). The power supply cord is ready for operation.

NOTE:

- The Reset button must be pushed in for proper operation.
- The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset.
- Do not use the power supply cord as an off/on switch. The power supply cord is designed as a protective device.
- A damaged power supply cord must be replaced with a new power supply cord. Contact a service center.
- The power supply cord contains no user serviceable parts. Opening the tamper-resistant case voids all warranty and performance claims.


Location Requirements

- NOTE:**
- The flexible exhaust hose allows placement of the air conditioner at least 20" from window or door.
 - Confirm you are using the correct size air conditioner for the space to be cooled, per sizing recommendations, below:

Area to be cooled	DOE Capacity Needed(BTUs)
Up to 10-ft x 55-ft room; 550 sq. ft.	8, 000 BTU Dual Hose

WARNING

The length of the exhaust hose is specially designed according to the specification of the product. Do not replace or extend ,or otherwise modify the hose.

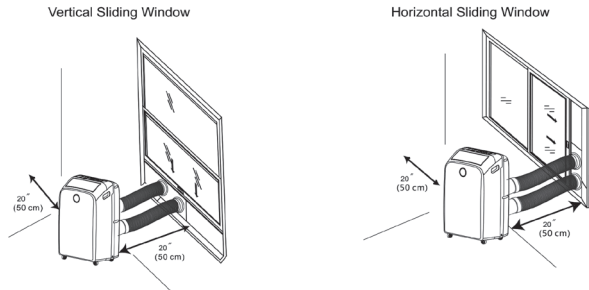

NOTE:

- For best performance, allow at least 20 in of air space on all sides of the unit for good air circulation.
- Do not block the air outlet.
- Provide easy access to the grounded 3 prong outlet.
- To ensure proper function, DO NOT overextend or bend the hose. Make sure that there is no obstacle around the air outlet of the exhaust hose in order for the exhaust system to work properly. All the illustrations in this manual are for explanation purpose only. Your air conditioner may be slightly different. The actual shape shall prevail.



INSTALLATION INSTRUCTIONS

Unpack the Air Conditioner

WARNING

Excessive Weight Hazard

Use two or more people to move and install air conditioner.

Failure to do so can result in back or other injury.

Remove packaging materials

- Remove and recycle packaging materials.
- Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Caution: Installation accessories are stored in the top of the carton, and are required for proper cooling performance. Please remove all accessories from packing materials before use.


Window Vent Panel And Extensions

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 25" to 50" wide,or horizontal sliding windows from 25" to 50" tall.

Panel Length	H	I	J	K	Fig.
Window Length	25"	9 1/4"	18"	18"	
25"	✓				a
25"-33"	✓	✓			b
25"-42"	✓		✓		c
43"-50"	✓			✓	d


- 1.Please check your window size and choose the fit from the above table. For window openings shorter than 25", trim panel H to fit the opening.
- 2.If your window size requires more than 2 panels, after adjusting the length, please secure the panels with rivets. E.

Note: Slider cutting may be needed to fit the width or height of the window .

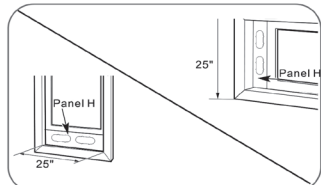



For an 25" window opening, use the window vent panel by itself.

Fig. "a"

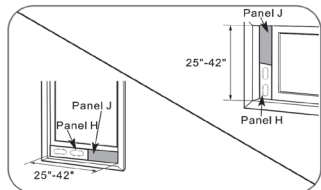


For window openings from 25" to 42", use the window vent panel(Panel H) and a extension panel (Panel J).

Fig. "c"

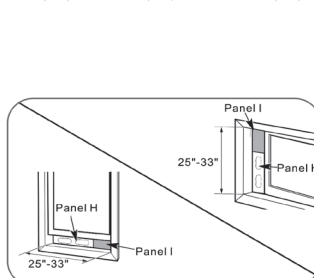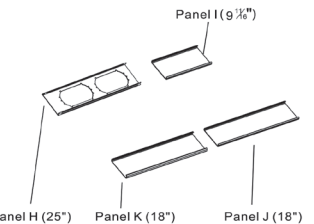

For window openings from 25" to 33", use the window vent panel(Panel H) and a extension panel (Panel I).

Fig. "b"

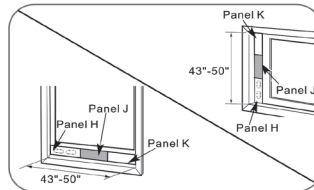



For window openings from 43" to 50", use the window vent panel and two extension panels (Panel K and Panel J).

Fig. "d"


Install The Portable Air Conditioner

Install Exhaust Hose and Adapter

1. Roll the air conditioner to selected location. see "Location Requirements."
2. Preparing the exhaust hose assembly: Press the flexible exhaust hose into the coupling and the window exhaust adapter. Both the coupling and window exhaust adapter have integral clips that snap onto the hose.

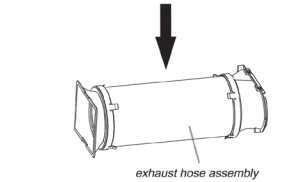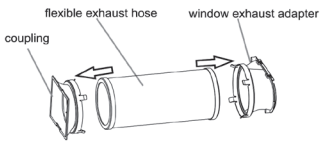

3. Insert the coupling into the slot on the back of the air conditioner.
4. Slide the hose into place.

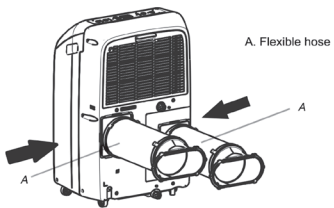

5. Confirm the hose is locked in place before operating.


CAUTION: Ensure the coupling is correctly locked in place by trying to move it up and down by hand. If there's any movement of the coupling, then it isn't locked, and won't provide normal cooling performance. Only extend the hose to the necessary length,keeping it as short as possible.We do not recommend extending the hose more than 9 feet long.

Window Installation

Your window installation kit has been designed to fit most standard vertical and horizontal window applications. Roll the air conditioner to selected location. see "Location Requirements."


1. Attach the window exhaust adapter to the outer slider section (the piece with the large exhaust hole).

NOTE: Product must be used with included Duct Window installation kit for effective cooling.

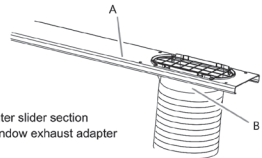


Installation In Vertical Sliding Windows


NOTE:The window installation kit can be used with vertical sliding windows between 25" and 50" wide.

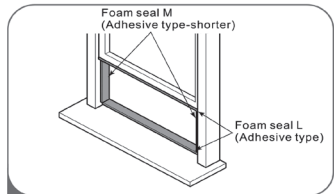


- 1 Cut the foam seal L(adhesive type) & M (adhesive type-shorter)to the proper length, and attach it to the window sash and frame.

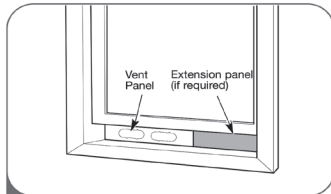


- 2 Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

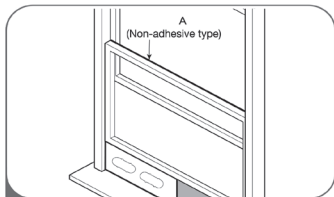


- 3 Cut the foam seal A(Non-adhesive type) to the window width. Stuff the foam seal A between the glass and the window to prevent air and foreign objects from getting into the room.

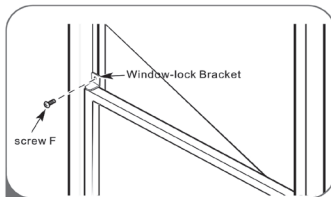


- 4 Install the Window-lock bracket with a type F screw as shown if you need.

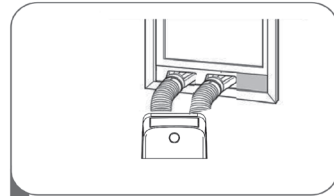

- 5 Insert the diffuser into the opening in the vent panel and slide it to lock it into place.

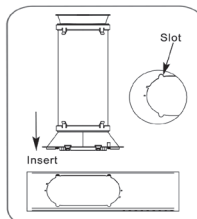


Align the tabs on the diffuser with the slots in the vent panel. Insert the diffuser into the opening in the vent panel.

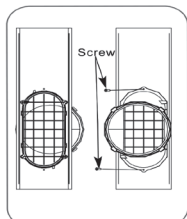


Insert the screw in the hole in the diffuser to prevent the diffuser from sliding out of the vent opening.

Installation In Horizontal Sliding Windows

NOTE: The window installation kit can be used with horizontal sliding windows between 25" and 50" wide.

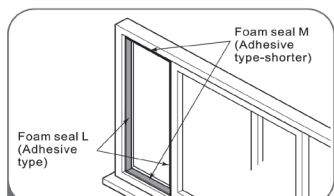

- 1 Cut the foam seal L(adhesive type) & M (adhesive type-shorter)to the proper length, and attach it to the window sash and frame.

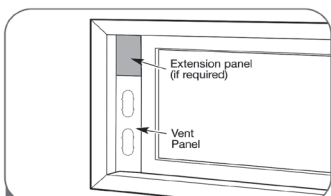

- 2 Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

QUICKSTART

Hisense

8 1 4 0 0 0 8 1 2

Portable Air Conditioner


Caution: Installation accessories are stored in the top of the carton, and are required for proper cooling performance. Please remove all accessories from packing materials before use.



Keep unit upright at least 2 hours prior to use.


Parts Package

Before beginning, check that all parts are included in the parts package.

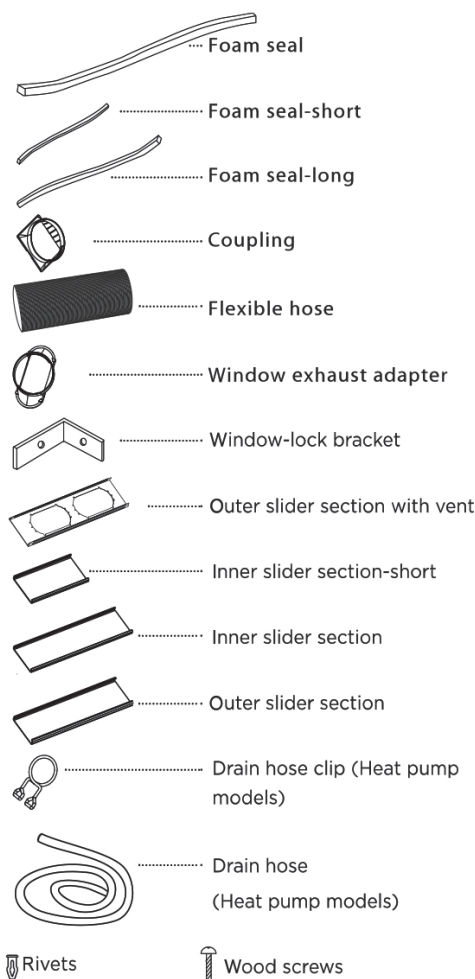

NOTE: Accessory type and quantity may vary depending on the model.


Tools needed (Tools not included)

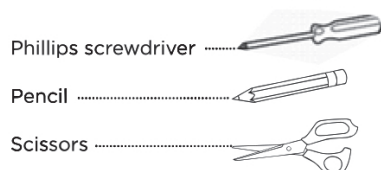

step 1


Suitable Windows

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 25" to 50" wide, or horizontal-sliding windows from 25" to 50" high.

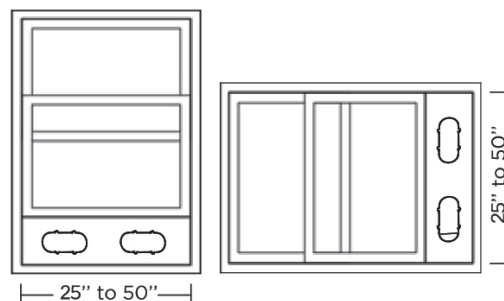

Choose the right panel


Panel window	H 25"	I 9 1/8"	J 18"	K 18"
25"	✓			
25" 33"	✓	✓		
25" 42"	✓		✓	
43" 50"	✓		✓	✓

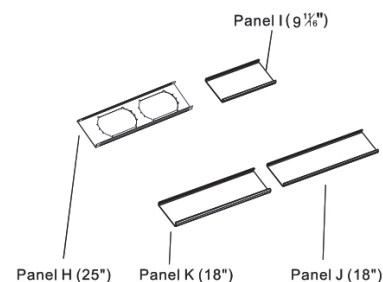


step 2

Window Installation


1 Cut the adhesive foam seal to the proper length, and attach it to the window sash and frame.

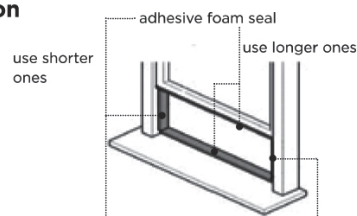


2 Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

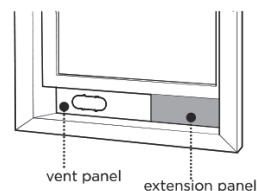

3 Cut the Non-adhesive foam seal to the window width. Stuff the foam seal between the glass and the window to prevent air and insects from getting into the room.

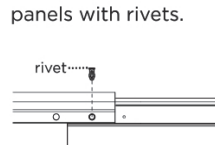


4 Install the Window-lock bracket with wood screws as shown, if you need.

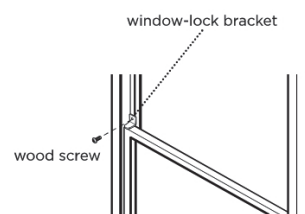

step 3

Connect it together

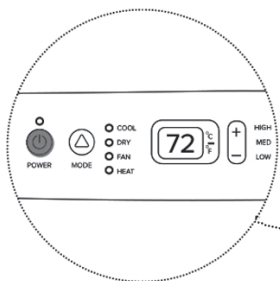


5 Turn The Unit On

Turn the air conditioner on, and set the desired mode and temperature.



4 Plug In the Unit

 
Be sure to use a grounded 3 prong outlet. Do not use an extension cord. Plug in the unit.



1

Preparing the exhaust hose assembly:


Press the flexible exhaust hose into the coupling and the window exhaust adapter. Both the coupling and window exhaust adapter have integral clips that snap onto the hose.

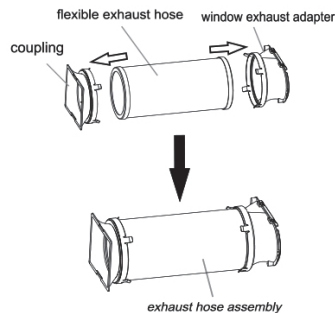

2

Connect The Hose To The Air Conditioner


Slide the coupling into the slot on the back of the air conditioner to lock the hose on the unit.

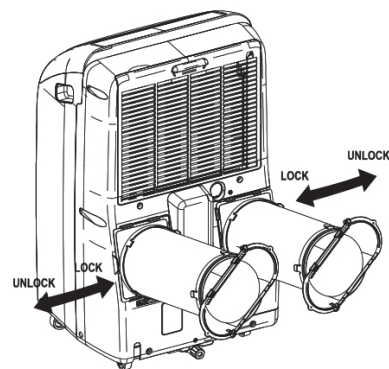


3

Connect The Hose To The Window

Roll the air conditioner to selected location. Attach the window exhaust adapter to the outer slider section (the piece with the large exhaust hole).

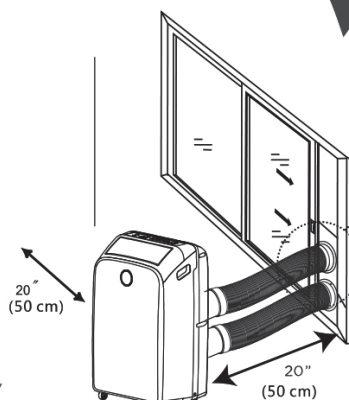

To ensure proper ventilation, keep a distance of least 20in (50 CM) between the Portable AC and the window.

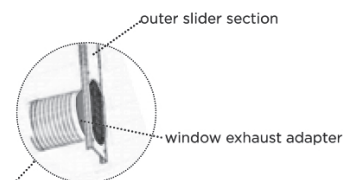


Waterless Design

1. Waterless Design doesn't require routine draining in cooling mode due to internal evaporation of condensate water.
2. Code "E5" alerts you the internal tank has become full. Please drain the air conditioner according to the instructions in User Manual.
3. Before moving the unit, place a pan on the floor beneath the drain cover and remove the drain cover to drain the water.
4. Be sure to replace the drain cover when draining is complete.

Draining the Air Conditioner (Heat Pump models only)

1. Uncover the drain port.
2. Connect the drain hose to the drain port. Make sure the connector does not have a water leak.
3. Place the other end of drain hose into a drain. Check to see that the hose lies flat and is in the drain. Make sure the hose end that goes to the drain is on a lower level than the hole end that connects to the unit. The hose should not be kinked or pinched.

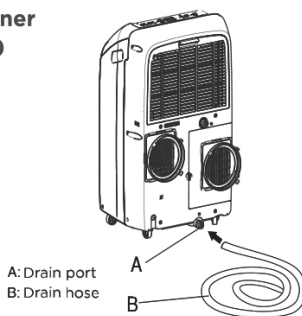

Follow these four easy steps to set up your appliance

1. Install the appliance and turn it on.
2. Open Android Play Store or iOS App Store in your smart phone, then enter "ConnectLife" in the Search bar to find the latest version. Download and install it.
3. Follow WiFi instruction to pair with your appliance.
4. Manage and enjoy complete control over your appliance.



ConnectLife



QR Code for Android



QR Code for iOS

The figures in this guide are based on the external view of a standard model. They may differ from that of the air conditioner you have selected.

See the user manual for detailed instruction on installation and using the features and settings of the air conditioner and remote control.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of FCC RF Rules. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION:

To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device is compliant with Class B limits. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION:

To assure continued compliance, Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Label Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE:

To satisfy FCC exterior labeling requirements, the following text must be placed on the exterior of the end product. "Contains Transmitter module FCC ID: 2AGCCAHEH-W0G1/2AGCCAHEH-W4G1/2AGCCAHEH-W0G2/2AGCCAHEH-W4G2".

To satisfy IESD exterior labeling requirements, the following text must be placed on the exterior of the end product. Transmitter module IC: 20778-AEHW0G1/20778-AEHW4G1/20778-AEHW0G2/20778-AEHW4G2".