

NINJA

CRISPI® PRO

AS100 | Owner’s Guide



IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

|  |                                                                                                                                                               |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Read and review instructions to understand operation and use of product.                                                                                      |
|  | Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored. |
|  | Avoid contact with hot surface. Always use hand protection to avoid burns.                                                                                    |
|  | For indoor and household use only.                                                                                                                            |

**⚠ WARNING**

Failure to follow these instructions could result in electric shock, fire, or burn hazard that could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

- DO NOT touch hot surfaces or exhaust vent**
- 1** The Ninja CRISPI PRO, adjustable platform, Ninja CleanCrisp glass containers, and crisper plates become extremely hot during use. To prevent burns or serious injuries:
- Always grasp glass containers by handles using oven mitts. DO NOT touch the hot glassware containers.
  - Allow platform to cool or use insulated oven mitts before handling.
  - DO NOT touch any other components without protective hot pads or insulated oven mitts.
- 2** During use, hot air and steam is released. Keep hands and face at a safe distance from the air outlet socket vent.
- USER QUALIFICATIONS**
- 3** DO NOT allow children to use, clean, maintain, or play with the appliance . Close supervision is necessary when used near children.
- 4** Close supervision is needed when used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- INTENDED USE**
- 5** Use this appliance for air frying ONLY. DO NOT use for deep-frying. DO NOT use this appliance for anything other than its intended use.
- SELECT A SAFE LOCATION**
- 6** Be sure the appliance is in an appropriate location before you start using it. DO NOT move or relocate when in use. Extreme caution must be used when the glassware containers contain hot food, oil, or liquids. Improper use may result in spilled food that can cause serious burns or personal injury.

- INDOOR COUNTERTOP USE ONLY**
- 7** This appliance is for indoor household use only. DO NOT use outdoors or in moving vehicles or boats.
- 8** For countertop use only. Ensure the surface is level, clean, and dry. DO NOT place near the edge of the worktop.
- KEEP AWAY FROM HEAT**
- 9** To prevent the risk of fire or property damage, DO NOT place appliance or power cord on a stovetop. Never place on hot surfaces, near a hot gas or electric burner, or in an oven.

- ALLOW SPACE FOR VENTILATION**
- 10** DO NOT cover the air intake vent or air socket vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat. Keep all objects 6 inches away from vent while unit is in use.

- AVOID NINJA CLEANCRISP™ GLASS CONTAINERS BREAKING:**
- 11** Sudden temperature changes can break glassware.
- DO NOT add cool or cold liquid or food to hot glassware. Do not add hot liquids or food to cold glassware.
  - DO NOT allow hot glassware to directly contact cool or wet surfaces or items. Allow glassware to cool before putting in a sink, washing, refrigerating, or freezing.
- 12** The containers are not oven, broiler, or stovetop safe. DO NOT use with any heating appliances or heat sources except the CRISPI PRO Main Unit or a microwave. Do not place empty containers in the microwave.
- 13** Physical damage or impacts can break glassware or make it more likely to break from temperature changes.
- Use care to not scratch glass when using metal utensils and knives.
  - DO NOT use abrasive cleaning tools.
  - DO NOT drop or hit glassware against a hard object or strike utensils against it.
  - DO NOT use or repair any glassware that has been dropped, chipped, cracked or severely scratched.
  - If a glass container chips or breaks, use thick gloves and caution while cleaning up the glass. Pieces may be sharp and difficult to locate.
  - Throw away the broken glass; DO NOT recycle.
- 14** Ninja® CleanCrisp™ glass containers are dishwasher safe. They may also be washed by hand using hot, soapy water and non-abrasive cleaners and plastic or nylon cleaning pads if scouring is necessary.
- Plastic lids are for microwave and storage use only and are BPA free.

- PLUG DIRECTLY INTO AN APPROPRIATE SOCKET**
- 15** Keep the appliance and its cord out of reach of children.
- 16** Select a socket above the countertop that allows the cord to be routed out of reach of children and away from hot surfaces and appliance vents.

- 17** To reduce the risk of the appliance being pulled down, potentially resulting in serious burns or impact injury:
- DO NOT let cord hang over edge of table or counters.
  - DO NOT use an extension cord.
  - A short power-supply cord is used to reduce the risk of cord being grabbed or becoming entangled and to reduce the risk of people tripping over a longer cord.
- DO NOT USE IF DAMAGED**
- 18** Regularly inspect the appliance and power cord. If the appliance is damaged in any way (including the power cord or plug), DO NOT use. During operation, if the appliance malfunctions, immediately stop use and contact a service center.
- 19** If a Ninja glass container is dropped OR becomes chipped, cracked or deeply scratched, DO NOT use as container strength may be compromised and the container could break or shatter; discard immediately.

 
- PREPARING FOR OPERATION**
- 20** ALWAYS ensure the Ninja CleanCrisp glass container is properly installed in the Ninja CRISPI PRO Main Unit before operating.
- FILL TO APPROPRIATE LEVELS**
- 21** To prevent food contact with heating element that may cause injury or affect the safe use of the appliance, DO NOT overfill the Ninja glass container with food past the lip of the container.

- CHECK FOOD TEMPERATURE**
- 22** Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.


- CLEANING**
- 23** ALWAYS turn unit off and unplug from socket when not in use and before cleaning.
- 24** To protect against electric shock, DO NOT immerse cord, plugs, or main unit housing in water or other liquid.
- 25** DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 26** See Cleaning section.
- NO MODIFICATIONS OR UNAPPROVED ACCESSORIES**
- 27** Modifications or the use of accessories or parts not recommended by SharkNinja may result in fire, electric shock, or injuries. Use only cooking containers, accessories, attachments, or replacement parts that are recommended or sold by SharkNinja.

SAVE THESE INSTRUCTIONS.

PARTS & ACCESSORIES

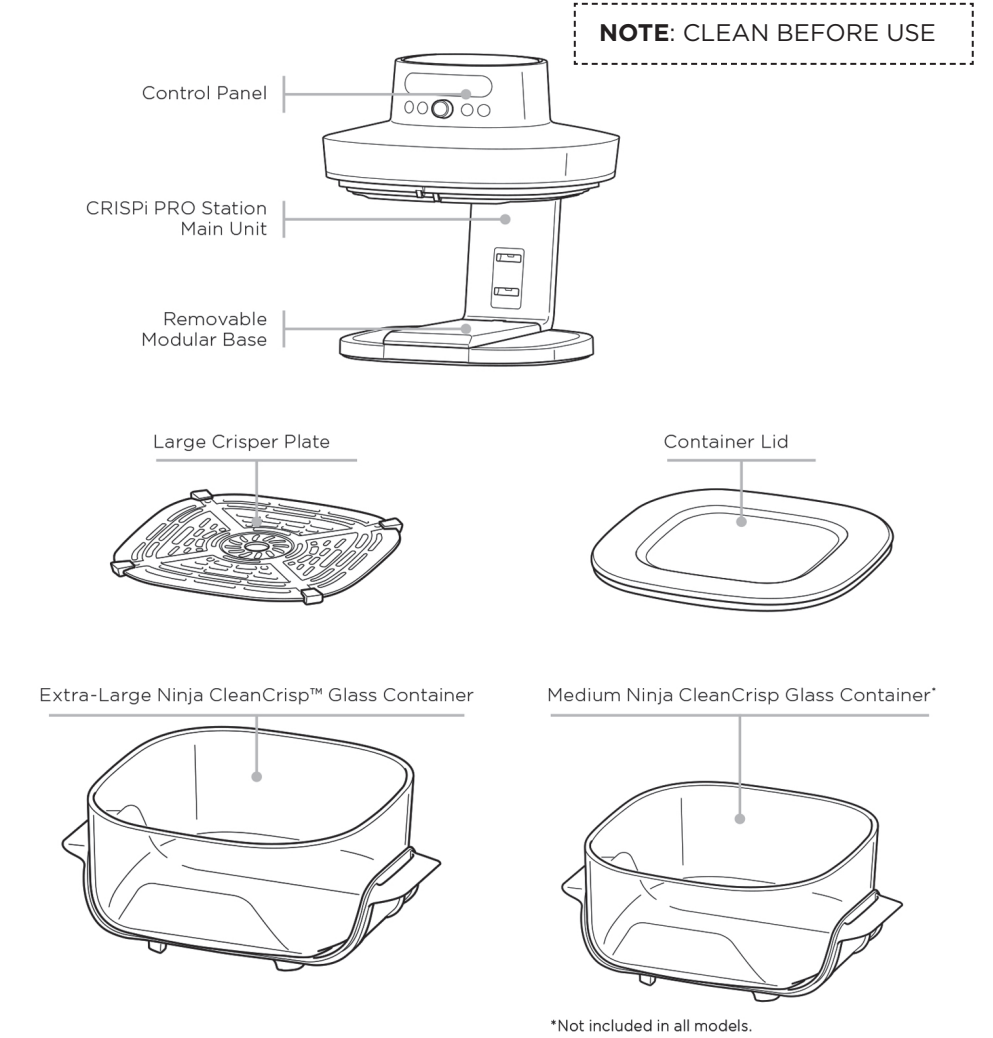

GETTING TO KNOW YOUR NINJA CRISPI® PRO

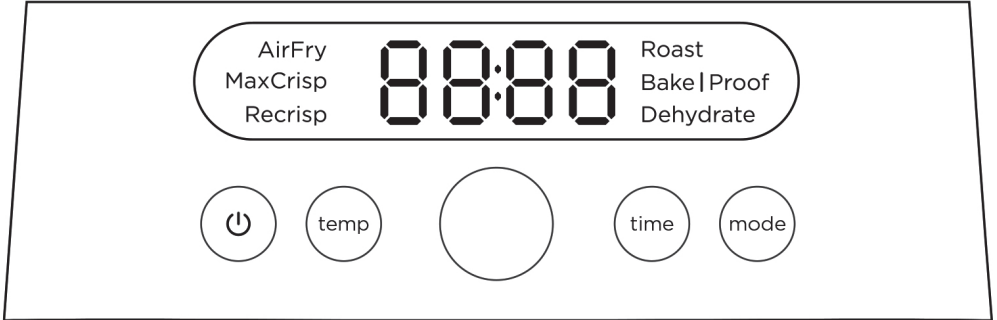 

- FUNCTIONS**
- Air Fry:** Use this function to give your food crispiness and crunch with little to no oil.
- Max Crisp:** Add the crispy finishing touch to meals or melt toppings to create the perfect finish.
- Recrisp:** Revive leftovers by gently warming them, leaving you with crispy results.
- Roast:** Roasts meats to tenderize and more.
- Bake/Proof:** Create decadent baked treats and desserts.
- Dehydrate:** Dehydrate meats, fruits, and vegetables for healthy snacks.
- OPERATING BUTTONS**
- Power:** Press to turn the unit on and off.
- Temp:** Press temp button and use dial to set temperature.
- Time:** Press time button and use dial to set time.
- Mode:** Press mode button and use dial to select cooking mode.
- DIAL**
- Function/Temperature/Time Select:** Turn the dial to select a cooking function or adjust time or temperature.
- Dial/Start:** Press dial to start or pause cooking.
- NOTE:** Functions may vary by model.
- NOTE:** Cooking will automatically pause when Ninja® glass container is removed from the CRISPI PRO Main Unit.

**NOTE:** The actual descriptions of control panel and their locations may vary depending on the model.

**NOTE:** Accessory type and quantity may vary depending on the model.

BEFORE FIRST USE

- 1 Remove and discard any packaging material, stickers, and tape from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 Wash the containers, crisper plates, and lids in hot, soapy water, then rinse and dry thoroughly. **NEVER** clean the main unit in the dishwasher.

**NOTE:** In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

***Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.***

USE & CARE GUIDE

NINJA® CleanCrisp™ GLASS CONTAINERS

- 1

Heat-protectant base and easy-grip handles are fixed permanently to the Ninja glass containers and should **NEVER** be removed.
- 2

Cease using Ninja glass container if easy-grip handles or heat-protectant base are broken or damaged.
- 3

Ninja glass containers are freezer safe, microwave safe, and dishwasher safe.
- 4

Ninja glass containers are **NOT** oven/stovetop/broiler safe.
- 5

Handle glass containers with care. They can break if dropped, hit hard against a surface, or struck with hard utensils. Discard immediately if any damage occurs.

- 6

If a Ninja glass container becomes chipped, cracked, or deeply scratched, **DO NOT** use, as container strength may be compromised and the container could break or shatter.
- 7

Avoid storing items in the Ninja glass containers that could scratch or cause damage to the interior.

**NOTE:** If a piece of a Ninja glass container chips or breaks off, use thick gloves and caution while cleaning up the glass, as pieces may be sharp. Dispose of glass in a standard waste bin; **DO NOT** recycle.

CONTAINER LIDS

- 1

Lids are freezer safe, microwave safe (ensure lid is **NOT** sealed on Ninja glass container when in the microwave), and dishwasher safe (top rack only).
- 2

**DO NOT** seal lid on Ninja glass container directly after cooking.
- 3

**NEVER** place Ninja glass container or crisper plate directly on lid after cooking.

CRISPER PLATES

- 1

Crisper plates are dishwasher safe, but they are **NOT** microwave or oven safe.

USING YOUR NINJA CRISPI® PRO

USING THE COOKING FUNCTIONS

To turn on the CRISPI PRO Main Unit, first plug the power cord into a wall outlet, then press the power button.



**NOTE:** For best results, **DO NOT** combine raw, frozen, and/or pre-cooked ingredients. Cook **ONLY** one type of food at a time.

 
- 1

Install a crisper plate in a Ninja® glass container. Handle with care to avoid bending the crisper plate. Add ingredients to the Ninja glass container.



- 2

Move the modular base to the correct position for the container you are using.

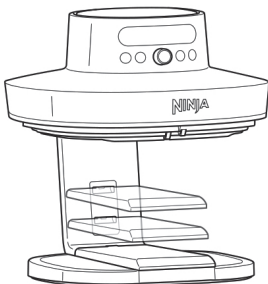


**2.5 QT** High position

**4 QT** Middle position

**6 QT** Low position

- 3

 Align container with modular base, and push container all the way back toward the spine until it clicks into place.

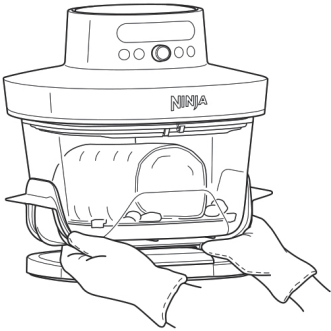

- 4

Use the dial to select your desired cooking mode.



- 4

Press mode button to return to mode select after pushing temp or time button.



- 5

Press the temp button and use the dial to set temperature.



- 6

Press the time button and use the dial to set time.



- 7

Press the dial to start cooking.

**NOTE:** “ADD POT” will display on the control panel if the container is not installed properly.

Add Pot

- 7

To toss or flip ingredients during cooking, pull the glass container out of the main unit or press the dial to pause cooking. Shake container using easy-grip handles or flip foods with a silicone-tipped utensil. Reinsert the glass container into the unit and press the dial to resume cooking.
- 8

When cooking is complete, the unit will beep and “DONE” will appear on the display. The container can be placed directly on any countertop surface.
- 9

Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or dump out using easy-grip handles.

CLEANING & MAINTENANCE

CLEANING YOUR NINJA CRISPI® PRO

**ALWAYS** let the appliance cool completely before cleaning.

| Part/Accessory         | Cleaning Method                                                                                                                                                                                                                                                                                            | Dishwasher Safe? |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Main Unit              | To clean the main unit and the control panel, wipe them clean with a damp cloth.<br><b>NOTE: NEVER</b> immerse the main unit in water or any other liquid. <b>NEVER</b> clean the main unit in a dishwasher.                                                                                               | No               |
| Ninja Glass Containers | The containers can be washed in the dishwasher or by hand with hot soapy water. If hand-washing, do not use abrasive cleaning tools and thoroughly air dry or towel-dry all parts after use. Be sure to allow glass to cool gradually to room temperature before placing it in water, sink, or dishwasher. | Yes              |
| Crisper Plates         | The crisper plates can be washed in the dishwasher or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.                                                                                                                                                                       | Yes              |
| Lids                   | The lids can be washed in the dishwasher (top rack only) or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.                                                                                                                                                                 | Yes              |
| Modular Base           | The modular base should be washed by hand or wiped with a clean damp cloth. Thoroughly air-dry or towel-dry part after use.                                                                                                                                                                                | No               |

HELPFUL TIPS

- Heat-protectant base on Ninja® glass containers allows you to safely place them on any countertop surface with no heat damage.
- Easy-grip handles on Ninja glass containers allow you to safely handle containers after cooking.
- For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the glass container with no overlapping. If ingredients are overlapping, make sure to shake them halfway through the set cook time.
- Temperature and time can be adjusted at any time during cooking. Press the Temp or Time button and use the dial to adjust.
- Check food frequently to avoid overcooking.
- Unit will pause automatically if the Ninja glass container is removed. To resume cooking, insert the Ninja glass container; unit will automatically resume cooking.
- The crisper plate elevates ingredients in the basket so air can circulate under and around them for consistent, crisp results.
- For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
- For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor internal temperature of proteins. After the cook time is complete, remove food immediately to avoid overcooking.

TROUBLESHOOTING GUIDE

- Does the unit need to preheat?**  
No, the unit does not need to be preheated.
- Why is ADD POT appearing on the display screen?**  
The Ninja® glass container is not installed properly. Ensure the modular base is in the correct position, and ensure the glass container clicks fully into place.
- How do I pause the countdown?**  
Pressing the dial button or removing the container from the base during cooking will pause the cooking function.
- Are the glass containers safe to put on my countertop?**  
Yes, the heat-protectant base on the Ninja glass containers allows them to be placed on any countertop during or after cooking.
- How do I know when to use the crisper plate?**  
Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under it to cook ingredients evenly.
- My food didn’t cook.**  
Make sure the Ninja glass container is properly installed during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Use easy-grip handles on glass containers to shake to toss loose ingredients for consistent crispiness. Cook time and temperature can be adjusted at any time during cooking. Simply press the Time or Temp button and use the dial to adjust.
- My food is burned.**  
For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- Why do some ingredients blow around when air frying?**  
Occasionally, the fan from the air fryer will blow lightweight foods around. Use toothpicks to secure loose lightweight food, like the top slice on a sandwich.
- Can I air fry fresh battered ingredients?**  
Yes, but use the proper breadng technique. It is important to coat foods first with flour, then with egg, and then with breadcrumbs. Be sure to press the breadcrumbs onto the food so they stick in place. Loose breadng may be blown off by the units powerful fan.
- Why is the unit beeping?**  
The unit beeps when the cooking function starts and again when the cooking function is complete.
- The screen went black.**  
The unit is in standby mode. Press the START/POWER button to turn it back on.
- An “E” message appears on display screen.**  
The unit is not functioning properly. Please contact a service center.

TECHNICAL SPECIFICATIONS

Voltage: 120V~ 60Hz  
Watts: 1800W

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA and NINJA CRISPI are registered trademarks of SharkNinja Operating LLC.

CLEANCRISP is a registered trademark of SharkNinja Operating LLC.

PRINTED IN MEXICO / SC: 25-08-2026 / Elbrd:J.M  
OBPN: AS100Series\_IB\_MP\_Mv11\_251215 / SHNMDL: AS100GN\_B  
Add: AS100WH\_AS100PK1\_B

8 1 4 1 0 0 8 0 6

