 


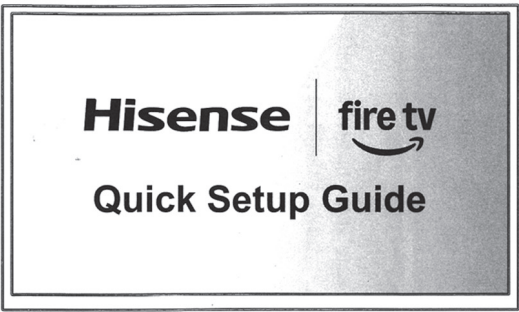

Before using the TV, please read this guide carefully and keep it for future reference.

Disclaimer

Disclaimer: Subscriptions or other payments may be required to access content through some applications. Some or all of the included or downloaded application services in this Hisense device may not function depending on the Internet connection, local limitations of included applications or other reasons outside of Hisense's control. HISENSE EXPRESSLY DISCLAIMS RESPONSIBILITY FOR ANY APPLICATION SERVICE FROM FUNCTIONING AT ANY TIME, FOR CONTENT IN ANY APPLICATION SERVICE, FOR DISRUPTIONS OF SERVICE, LOCAL OR REGIONAL LIMITATIONS, WARRANTIES OF TITLE, NO INFRINGEMENT, AND FOR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. By purchasing this device, you accept such Disclaimer without any claim on Hisense at any time.

This Quick Setup Guide supports the following models:

43Q6SF / 43QD6QF / 43QD6QFM / 43QD6SF / 43QD6SFB / 43QD6SFC / 43QD6SFD / 43QD6SFM / 43QD6SQFM / 43QD65SF / 43QD65SFB / 43QD65SFC / 43QD65SFD / 43QD65SFM / 43A7NF / 43QD5SF / 43E6SF / 43E60SF / 43E65SF

50Q6SF / 50QD6QF / 50QD6QFM / 50QD6SF / 50QD6SFB / 50QD6SFC / 50QD6SFD / 50QD6SFM / 50QD6SQFM / 50QD65SF / 50QD65SFB / 50QD65SFC / 50QD65SFD / 50QD65SFM / 50A7NF / 50QD5SF / 50E6SF / 50E60SF / 50E65SF

55Q6SF / 55QD6QF / 55QD6QFM / 55QD6SF / 55QD6SFB / 55QD6SFC / 55QD6SFD / 55QD6SFM / 55QD6SQFM / 55QD65SF / 55QD65SFB / 55QD65SFC / 55QD65SFD / 55QD65SFM / 55A7NF / 55QD5SF / 55E6SF / 55E60SF / 55E65SF

65Q6SF / 65QD6QF / 65QD6QFM / 65QD6SF / 65QD6SFB / 65QD6SFC / 65QD6SFD / 65QD6SFM / 65QD6SQFM / 65QD65SF / 65QD65SFB / 65QD65SFC / 65QD65SFD / 65QD65SFM / 65A7NF / 65QD5SF / 65E6SF / 65E60SF / 65E65SF

75Q6SF / 75QD6QF / 75QD6QFM / 75QD6SF / 75QD6SFB / 75QD6SFC / 75QD6SFD / 75QD6SFM / 75QD6SQFM / 75QD65SF / 75QD65SFB / 75QD65SFC / 75QD65SFD / 75QD65SFM / 75A7NF / 75QD5SF / 75E6SF / 75E60SF / 75E65SF

85Q6SF / 85QD6QF / 85QD6QFM / 85QD6SF / 85QD6SFB / 85QD6SFC / 85QD6SFD / 85QD6SFM / 85QD6SQFM / 85QD65SF / 85QD65SFB / 85QD65SFC / 85QD65SFD / 85QD65SFM / 85A7NF / 85QD5SF / 85E6SF / 85E60SF / 85E65SF

What's in the box

Your Hisense TV comes with the following items:

- TV
- base stands
- Power cord
- Remote control

Accessory type and quantity may vary depending on the model.

- Screws (43"/50"/55"/65"/75")(109.2cm/127.0cm/139.7cm/165.1cm/190.5cm) (85")(215.9cm)

NOTE:

The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.

IMPORTANT:

To prevent accidentally discarding items that came with your TV, be sure to **check ALL of the foam** in the carton box.

Disclaimer: This Quick Setup Guide is intended as a general guideline to help you set up your TV. Images throughout this document are for illustrative purposes only and may differ from the actual product.

Getting started

Step 1. Attach stand or mount

Before you start using your TV, attach your TV stand or mount it on the wall.

CAUTION:

 
- Disconnect the AC power cord before installing a stand or a wall mount bracket.
- The display on your TV is fragile. Make sure the TV screen is not scratched or damaged by hard objects or from pressure.
- After the installation is completed, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any.

Attach the TV stand


To attach the TV base stands to your TV:

- Carefully place your TV on a clean, soft, flat surface.
- Insert the TV base stands into the bottom slots on your TV.
- Use the screws provided to secure each stand tightly.


43"(109.2cm)

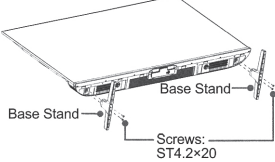


50"(127.0cm)

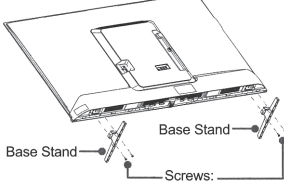 


55"(139.7cm)

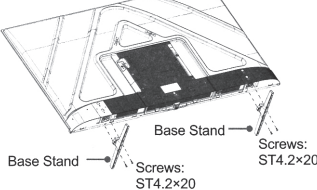 

65"/75"(165.1cm/190.5cm)

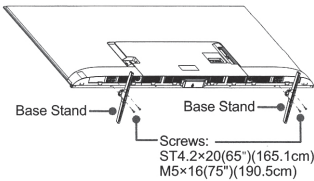 

85"(215.9cm)

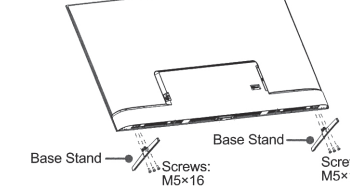 

The images shown in this Quick Setup Guide are for illustrative purposes only and may be subject to change.

 
NOTE: Wall mount kit not included

Attach the wall mount bracket (not included)

43"/75"/85"(109.2cm/190.5cm/215.9cm)

Before you begin the third-party manufacturer instructions, be sure to do the following things:

- Place the TV on a clean, safe and cushioned surface.
- Remove the TV stands if you have already attached them.
- Place spacers (not included) in the corresponding bracket holes.

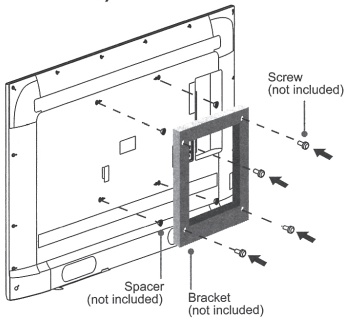

50"/55"(127.0cm/139.7cm)

Before you follow the third-party manufacturer instructions to attach the wall mount, be sure to do the following things:

- Place the TV on a clean, safe and cushioned surface.
- Remove the TV stands if you have already attached them.
- Tighten the nuts (not included) into the holes of the back cover (See Fig.1).
- Place spacers (not included) between the TV and the bracket (See Fig.2).

Fig.1


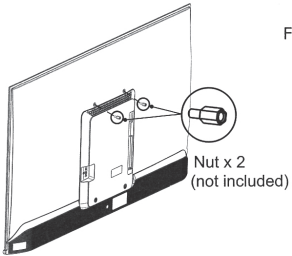 



Fig.2

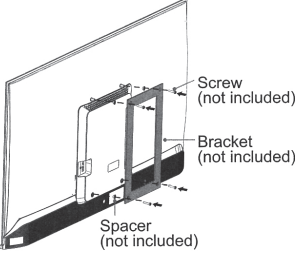 

65"(165.1cm)

Before you follow the third-party manufacturer instructions to attach the wall mount, be sure to do the following things:

 - Place the TV on a clean, safe and cushioned surface.
- Remove the TV stands if you have already attached them.
- Tighten the nuts (not included) into the holes of the back cover (See Fig.1).
- Place spacers (not included) between the TV and the bracket (See Fig.2).

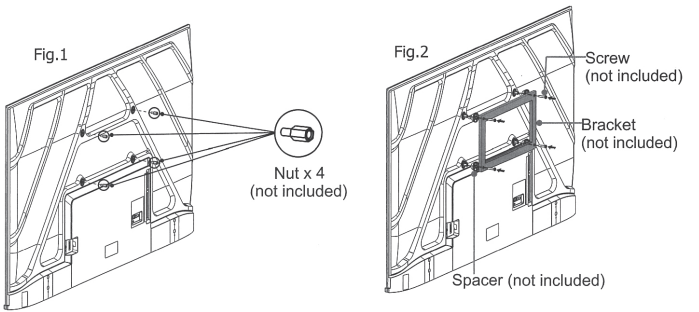


CAUTION:

- Follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.
- When you attach the mount, be sure to use spacers (provided by the third-party manufacturer) between the TV and the bracket.
- To prevent internal damage to the TV and to ensure it is mounted securely, be sure to use fixing screws (not included) that are 8.0 - 10.0 mm(43"/50"/55"/65"/75") (109.2cm/127.0cm/139.7cm/165.1cm/190.5cm) or 10.2 - 12.2 mm(85")(215.9cm) in length when measured from the attaching surface of the rear cover.

8.0 - 10.0 mm(43"/50"/55"/65"/75") (109.2cm/127.0cm/139.7cm/165.1cm/190.5cm) 10.2 - 12.2 mm(85")(215.9cm)	Wall mount hole pattern(mm)	200 × 300 (43/75")(109.2cm/190.5cm) 200 × 400 (50"/55")(127.0cm/139.7cm) 400 × 200 (65")(165.1cm) 500 × 400 (85")(215.9cm)
Wall mount screw size	M6	
Number of wall mount screw	4	

 - We do not recommend hanging the TV on a slanted wall, and when wall mounting make sure your television remains parallel to the wall and does not lean forward.




NOTE:

- If installed on a ceiling or slanted wall, or the television installed is not parallel to the wall, the television may fall and result in property damage or severe personal injury.
- If you have additional questions, please contact the wall mount manufacturer or contact a service center.
- The diameter and length of the screws differ depending on the wall mount bracket model.

Step 2. Connect devices to your TV

 Check to ensure that you have connected the right cables to the right ports securely. Loose connections can affect the quality of the picture image and color.

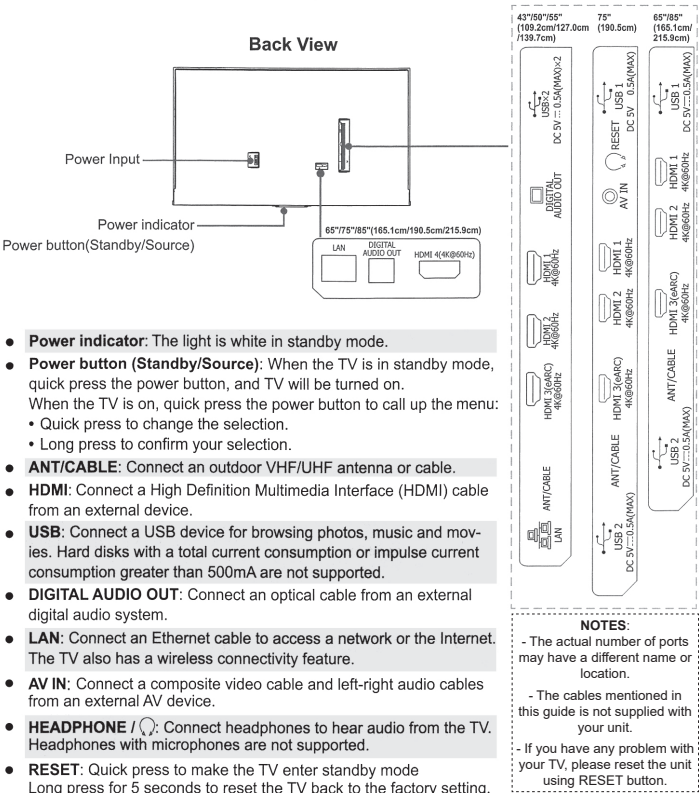

- Power indicator:** The light is white in standby mode.
- Power button (Standby/Source):** When the TV is in standby mode, quick press the power button, and TV will be turned on. When the TV is on, quick press the power button to call up the menu:
 - Quick press to change the selection.
 - Long press to confirm your selection.
- ANT/CABLE:** Connect an outdoor VHF/UHF antenna or cable.
- HDMI:** Connect a High Definition Multimedia Interface (HDMI) cable from an external device.
- USB:** Connect a USB device for browsing photos, music and movies. Hard disks with a total current consumption or impulse current consumption greater than 500mA are not supported.
- DIGITAL AUDIO OUT:** Connect an optical cable from an external digital audio system.
- LAN:** Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
- AV IN:** Connect a composite video cable and left-right audio cables from an external AV device.
- HEADPHONE / :** Connect headphones to hear audio from the TV. Headphones with microphones are not supported.
- RESET:** Quick press to make the TV enter standby mode. Long press for 5 seconds to reset the TV back to the factory setting.

NOTES:

- The actual number of ports may have a different name or location.
- The cables mentioned in this guide is not supplied with your unit.
- If you have any problem with your TV, please reset the unit using RESET button.

Step 3. Get to know controls

Control on the TV

Front view



Remote sensor

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.


Introduction

Unlock the power of your Hisense with Fire TV built-in with the included Voice Remote with Alexa. Use your voice to watch live TV, search for titles, play music, switch inputs, control compatible smart home devices, and more. Switch inputs and go from watching your favorite TV show to the big game. You can also ask Alexa to check the weather, set timers and reminders, and more. Here are a few things that you can do with your voice on your Hisense Fire TV:

To do this on your Hisense FireTV...	Say this...
Live TV Controls For supported apps that feature live TV access, you can use Alexa to change channels. You can also use Alexa to navigate to the Channel Guide and the Live tab.	"Alexa, go to [channel / network] on [app]." "Alexa, watch [channel / network]." "Alexa, go to Channel Guide." "Alexa, go to Live."
Search for movies and TV shows Alexa can find movies and TV shows.	"Alexa, show me new [tv shows / movies]." "Alexa, find [title / genre]."
Alexa Requests See the responses on Hisense with Fire TV when you make an Alexa request	"Alexa, show me the weather." "Alexa, add x to my shopping list." "Alexa, play songs by [artist]." "Alexa, show me restaurants nearby."

Get your remote ready

 The following table shows the buttons on your remote control and describes what they are for.

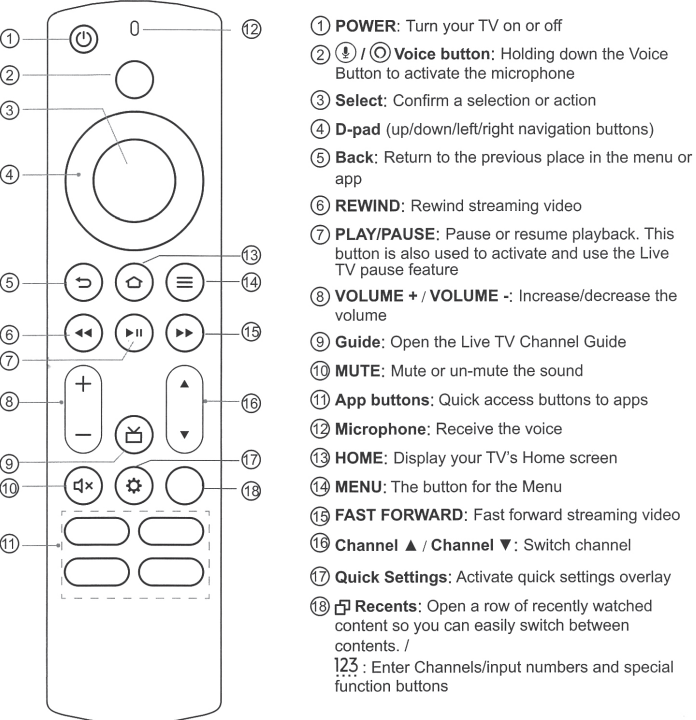

NOTE:

- The picture is only for reference. Check information according to the actual remote control.

Insert the batteries (not included)

Remove the battery door and insert the two AAA batteries into your Voice Remote with Alexa.

Important information about the remote and batteries

- Discard batteries in a designated disposal area. Do not throw them into a fire.
- Remove old batteries immediately to prevent them from leaking into the battery compartment.

- If you do not intend to use the remote control for a long time, then remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin then wash it immediately.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd, NiMH, etc.) batteries.
- Do not continue using the remote if it gets warm or hot.
- Contact a service center.

Using your cable set-top box or satellite receiver remote as a ‘universal’ remote

If you prefer to use your Cable Set-top Box or Satellite Receiver Remote as a ‘universal’ remote, then visit the Support page to view a list of the codes.

Step 4. Power on the TV

Connect your power cord to the TV and plug it into a power outlet. Press power button of the TV or the power button on the remote to turn on the TV. Your TV will display a launch screen showing the Hisense logo.

Step 5. Complete the first-time setup

The first time you turn on your TV, there is a guided setup to make it easy to connect your TV to the Internet and complete the setup of your TV. Your TV will automatically pair with your new Alexa Voice Remote.

1. If there are issues with the remote pairing, you will be prompted to pair your remote by pressing and holding the **HOME** button. If you continue to have issues, try re-inserting or replacing your batteries.
2. Select your Wi-Fi network from the list of Wi-Fi networks displayed on the screen.

NOTE:

- If your Wi-Fi network is password protected, please have your Wi-Fi network password handy to connect your TV to the Internet. If your network is hidden, select the **Join Other Network**. If required, enter your network password using the on-screen keyboard.

Step 6. Enjoy your TV!

Now that you've completed the first-time setup, your Home screen is your starting point for using your TV. Your Hisense TV provides a variety of entertainment options, so you'll always find something new. Use your TV to watch live channels, access video on demand to watch movies, and much more.

Troubleshooting

If you are having trouble with your TV, first try turning it off and on again. If this does not fix the problem, check the tips in the following table. If your problem is not listed in the following table, then contact a service center.

Issues	Possible solutions
No sound or picture	• Check if the power cord is plugged into a powered AC outlet. • Press the Power button on the remote control to activate the unit from 'Standby' mode. • Check to see if the LED light is on or not. If it is, then the TV is receiving power.
I have connected an external source to my TV and I get no picture and/or sound.	• Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my TV, there is a delay for a few seconds before the picture appears. Is this normal?	• Yes, this is normal. The TV is initializing and searching for previous setting information.
The picture is normal but there is no sound	• Check the volume settings. • Check if 'Mute' mode is set to On.
Sound but no picture or black and white picture	• If the picture is black and white, unplug the TV from the AC outlet and replug it after 60 seconds. • Check that the Color is set to 50 or higher. • Try different TV channels.
The sound and/or picture is distorted or appears wavy	• An electric appliance may be affecting the TV. Turn off any appliances that are nearby and move it farther away from the TV. • Insert the power plug of the TV set into another power outlet.
The sound and picture is blurry or cuts out	• If using an external antenna, check the direction, position and connection of the antenna. • Adjust the direction of your antenna or reset or fine tune the channel.
A horizontal or vertical stripe appears on the picture and/or the picture is shaking	• Check if there is an appliance or electric tool nearby that is causing interference.
The plastic cabinet makes a "clicking" type of sound	• The 'click' sound can occur when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.
The remote control does not work	• Confirm that TV still has power and is operational. • Change the batteries in the remote control. • Check if the batteries are correctly installed.

Product Specifications

Model Name		43Q6SF / 43QD6QF / 43QD-6QFM / 43QD6SF / 43QD6S-FB / 43QD6SFC / 43QD6SFD / 43QD6SFM / 43QD65QFM / 43QD65QFM / 43QD65SF / 43QD65SFB / 43QD65SFC / 43QD65SFD / 43QD65SFM / 43A7NF / 43QD5SF / 43E6SF / 43E60SF / 43E65SF	50Q6SF / 50QD6QF / 50QD6QFM / 50QD6SF / 50QD6SFB / 50QD6SFC / 50QD6SFD / 50QD6SFM / 50QD65QFM / 50QD65SF / 50QD65SFB / 50QD65SFC / 50QD65SFD / 50QD65SFM / 50A7NF / 50QD5SF / 50E6SF / 50E60SF / 50E65SF
Dimension (W × H × D)	Without Stand	37.9 × 22.1 × 3.1 inches (963 × 562 × 79 mm)	43.7 × 25.6 × 2.8 inches (1 111 × 650 × 71 mm)
	With Stand	37.9 × 24.1 × 9.4 inches (963 × 612 × 238 mm)	43.7 × 27.0 × 9.7 inches (1 111 × 687 × 247 mm)
Weight	Without Stand	13.0 lbs (5.9 kg)	17.6 lbs (8.0 kg)
	With Stand	13.5 lbs (6.1 kg)	18.1 lbs (8.2 kg)
TV Stand Width(W × D)		33.2 × 9.4 inches (844 × 238 mm)	35.2 × 9.7 inches (893 × 247 mm)
Active Screen Size (Diagonal)		42.5 inches (107.9 cm)	49.5 inches (125.7 cm)
Screen Resolution		3840 × 2160	3840 × 2160
Audio Power		7 W + 7 W	8 W + 8 W
Power consumption		100 W	120 W
Power Supply		100-240 V~ 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
	Standards	IEEE 802.11 a/b/g/n/ac	
	Version/Profiles	Bluetooth 5.3	
Bluetooth Module specifications	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz,Class1,6 dBm	
	Modulation Type	GFSK,π/4-DQPSK and 8-DPSK	
	Tuner Type	Frequency synthesized	
Receiving System		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T	
Operating Temperature		41 °F - 95 °F (5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F (-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

Model Name		55Q6SF / 55QD6QF / 55QD6QFM / 55QD6SF / 55QD6SFB / 55QD6SFC / 55QD6SFD / 55QD6SFM / 55QD65QFM / 55QD65SF / 55QD65SFB / 55QD65SFC / 55QD65SFD / 55QD65SFM / 55A7NF / 55QD5SF / 55E6SF / 55E60SF / 55E65SF	65Q6SF / 65QD6QF / 65QD6QFM / 65QD6SF / 65QD6SFB / 65QD6SFC / 65QD6SFD / 65QD6SFM / 65QD65QFM / 65QD65SF / 65QD65SFB / 65QD65SFC / 65QD65SFD / 65QD65SFM / 65A7NF / 65QD5SF / 65E6SF / 65E60SF / 65E65SF
Dimension (W × H × D)	Without Stand	48.6 × 28.1 × 2.9 inches (1 234 × 715 × 73 mm)	57.2 × 33.0 × 2.8 inches (1 453 × 837 × 72 mm)
	With Stand	48.6 × 29.6 × 11.7 inches (1 234 × 752 × 298 mm)	57.2 × 34.4 × 11.7 inches (1 453 × 875 × 298 mm)
Weight	Without Stand	20.5 lbs (9.3 kg)	29.1 lbs (13.2 kg)
	With Stand	20.9 lbs (9.5 kg)	29.5 lbs (13.4 kg)
TV Stand Width(W × D)		34.1 × 11.7 inches (866 × 298 mm)	39.7 × 11.7 inches (1 008 × 298 mm)
Active Screen Size (Diagonal)		54.6 inches (138.7 cm)	64.5 inches (163.8 cm)
Screen Resolution		3840 × 2160	3840 × 2160
Audio Power		8 W + 8 W	10 W + 10 W
Power consumption		130 W	200 W
Power Supply		100-240 V~ 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
	Standards	IEEE 802.11 a/b/g/n/ac	
	Version/Profiles	Bluetooth 5.3	
Bluetooth Module specifications	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz,Class1,6 dBm	
	Modulation Type	GFSK,π/4-DQPSK and 8-DPSK	
	Tuner Type	Frequency synthesized	
Receiving System		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T	
Operating Temperature		41 °F - 95 °F (5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F (-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

Model Name		75Q6SF / 75QD6QF / 75QD6QFM / 75QD6SF / 75QD6SFB / 75QD6SFC / 75QD6SFD / 75QD6SFM / 75QD65QFM / 75QD65SF / 75QD65SFB / 75QD65SFC / 75QD65SFD / 75QD65SFM / 75A7NF / 75QD5SF / 75E6SF / 75E60SF / 75E65SF	85Q6SF / 85QD6QF / 85QD6QFM / 85QD6SF / 85QD6SFB / 85QD6SFC / 85QD6SFD / 85QD6SFM / 85QD65QFM / 85QD65SF / 85QD65SFB / 85QD65SFC / 85QD65SFD / 85QD65SFM / 85A7NF / 85QD5SF / 85E6SF / 85E60SF / 85E65SF
Dimension (W × H × D)	Without Stand	66.0 × 38.0 × 3.1 inches (1 676 × 964 × 79 mm)	74.4 × 42.8 × 3.1 inches (1 890 × 1 087 × 79 mm)
	With Stand	66.0 × 39.5 × 14.2 inches (1 676 × 1 004 × 360 mm)	74.4 × 44.7 × 16.9 inches (1 890 × 1 135 × 430 mm)
Weight	Without Stand	40.8 lbs (18.5 kg)	59.3 lbs (26.9 kg)
	With Stand	41.4 lbs (18.8 kg)	60.2 lbs (27.3 kg)
TV Stand Width(W × D)		51.8 × 14.2 inches (1 315 × 360 mm)	63.4 × 16.9 inches (1 610 × 430 mm)
Active Screen Size (Diagonal)		74.5 inches (189.3 cm)	84.5 inches (214.7 cm)
Screen Resolution		3840 × 2160	3840 × 2160
Audio Power		15 W + 15 W	15 W + 15 W
Power consumption		250 W	330 W
Power Supply		AC 120 V, 60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
Bluetooth Module specifications	Standards	IEEE 802.11 a/b/g/n/ac/ax IEEE 802.11 a/b/g/n/ac	
	Version/Profiles	Bluetooth 5.3	
	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz,Class1,6 dBm	
Tuner Type	Modulation Type	GFSK,π/4-DQPSK and 8-DPSK	
	Frequency synthesized	Frequency synthesized	
Receiving System		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T	
Operating Temperature		41 °F - 95 °F (5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F (-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

NOTE: "Receiving Systems" may differ depending on your model/country/region.

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Certification and compliance

NOTE: The following warnings only apply to products with such certification.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of [20] cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with radio frequency exposure limits set forth by the Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Declaration of conformity

Trade Name: Hisense

Model: 43Q6SF / 43QD6QF / 43QD6QFM / 43QD6SF / 43QD6SFB / 43QD6SFC / 43QD6SFD / 43QD6SFM / 43A7NF / 43QD5SF / 43E6SF / 43E60SF / 43E65SF / 50Q6SF / 50QD6QF / 50QD6QFM / 50QD6SF / 50QD6SFB / 50QD6SFC / 50QD6SFD / 50QD6SFM / 50QD65QFM / 50QD65SF / 50QD65SFB / 50QD65SFC / 50QD65SFD / 50QD65SFM / 50A7NF / 50QD5SF / 50E6SF / 50E60SF / 50E65SF / 55Q6SF / 55QD6QF / 55QD6QFM / 55QD6SF / 55QD6SFB / 55QD6SFC / 55QD6SFD / 55QD6SFM / 55A7NF / 55QD5SF / 55E6SF / 55E60SF / 55E65SF / 65Q6SF / 65QD6QF / 65QD6QFM / 65QD6SF / 65QD6SFB / 65QD6SFC / 65QD6SFD / 65QD6SFM / 65QD65QFM / 65QD65SF / 65QD65SFB / 65QD65SFC / 65QD65SFD / 65QD65SFM / 65A7NF / 65QD5SF / 65E6SF / 65E60SF / 65E65SF / 75Q6SF / 75QD6QF / 75QD6QFM / 75QD6SF / 75QD6SFB / 75QD6SFC / 75QD6SFD / 75QD6SFM / 75A7NF / 75QD5SF / 75E6SF / 75E60SF / 75E65SF / 85Q6SF / 85QD6QF / 85QD6QFM / 85QD6SF / 85QD6SFB / 85QD6SFC / 85QD6SFD / 85QD6SFM / 85A7NF / 85QD5SF / 85E6SF / 85E60SF / 85E65SF



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, and the DTS:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Environmental Protection

This mark indicates that this product should not be disposed together with other domestic garbage, to avoid damage to the environment or human health due to the disposal of uncontrolled waste. Recycle it responsibly for promoting the sustainable reuse of material resources. To return your used device, please use the return systems available in your location or contact the vendor where you purchased your product they could take this product for recycling and protection of the environment.

©2026. All rights reserved.

Amazon, Fire, Alexa, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

This television is a product of Hisense and is not manufactured by Amazon.com or any Amazon affiliate. Certain services and features are subject to change or withdrawal at any time, may not be available in all countries, areas and languages, and may require separate subscriptions.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION to (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.MPEGLA.COM)

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

**PRINTED IN MEXICO / SC: 09-04-2026 / Elbrd:J.M
Shnmdl: 43QD65SFC_B / OBPN: 20196755**



8 1 4 1 0 0 8 0 9