



"Recipe book not included"

8 1 4 1 0 0 2 8 7



SLUSHI™ PROFESSIONAL FROZEN DRINK MAKER WITH RAPIDCHILL TECHNOLOGY

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	Combustible material. May burst if heated. (Indicated by a flame symbol with white background, surrounded by a red diamond.)
	Flammable material. (Indicated by a flame symbol with yellow background, surrounded by a black triangle.)
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	


⚠DANGER: Risk of fire or explosion. Flammable refrigerant used. **DO NOT** puncture refrigerant tubing. Dispose of product properly in accordance with the applicable federal or local regulations pertaining to flammable refrigerants.

⚠WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. **DO NOT** use appliance for other than intended use.

- Read all instructions prior to using the appliance and its accessories.
- Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damage in any manner. This appliance has no user-serviceable parts. If damaged, contact a **service center**.
- This appliance has important markings on the plug. The entire supply cord is not suitable for replacement. If damaged, please contact **a service center**.
- Extension cords should **NOT** be used with this appliance.
- To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- DO NOT** allow the cord to hand over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- DO NOT** allow the unit or the cord to contact hot surfaces, including stoves, and other heating appliances.
- ALWAYS** use the appliance on a dry and level surface.
- DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- Keep hands, hair, and clothing out of the container when loading and operating.
- During operation and handling of the appliance, avoid contact with moving parts.
- DO NOT** microwave the containers or accessories provided with the appliance.
- ALWAYS** keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- DO NOT** damage the refrigerant circuit. This warning is only applicable for appliances with refrigerating circuits which are accessible by the user.
- DO NOT** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- DO NOT** add frozen fruit, frozen vegetables, or ice to the unit.
- DO NOT** add hot ingredients to the unit.
- DO NOT** submerge the motor base or control panel in water or other liquids.
- DO NOT** fill vessel past the MAX FILL line.
- NEVER** leave the appliance unattended while in use.
- Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- DO NOT** carry the unit by the bail handle. Hold the unit by grasping both sides of the unit under the motor base.
- DO NOT** process hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, or ice cubes.
- ALWAYS** keep the unit upright.
- After unboxing the unit for the first time, ensure the unit is upright for at least 2 hours before operating to let the refrigerant oils settle in the air conditioning system for best performance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Keep rear and sides of the unit open in order for the compressor to operate properly and not over heat.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- DO NOT** damage the refrigerant circuit. This warning is applicable only for appliances with refrigerating circuits that are accessible by the user.
- When using appliance, make sure both sides and back of it are at least four inches away from walls.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

SAVE THESE INSTRUCTIONS

PARTS

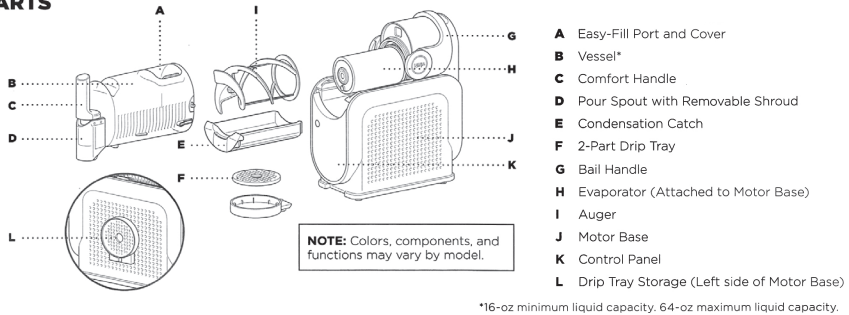

NOTE: CLEAN BEFORE USE

Accessory type and quantity may vary depending on the model.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's manual before proceeding.

- Remove all packaging materials from the unit.
- Wash all parts in warm, soapy water.
- Thoroughly rinse and air-dry all parts.
- Wipe control panel, motor base, and evaporator with a soft cloth. Allow to dry completely before using.
- Place the unit on countertop for at least 2 hours before operating. This allows the refrigerant to settle in the condenser for optimal and safe use.

NOTE: All attachments are BPA free. Accessories are dishwasher safe but should **NOT** be cleaned with a heated dry cycle.

USING THE CONTROL PANEL

POWER

- Press to power the unit on and off.

RINSE CYCLE

- This cycle agitates, without cooling, to rinse the unit.

PRESETS


- 5 unique presets use RapidChill Technology to determine the perfect temperature for the ideal frozen drink.

TEMPERATURE CONTROL SETTING

- Each preset will start at a default/optimal temperature for ideal texture. If desired, adjust the temperature for your perfect frozen drink texture.

- For sippable frozen drinks, decrease the temperature level by pressing the bottom arrow on the control panel.

- For thicker, colder frozen drinks, increase the temperature level by pressing the top arrow on the control panel.

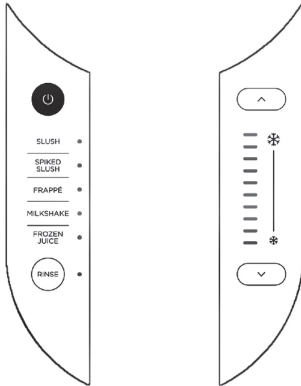

The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

TROUBLESHOOTING TIPS

- RECIPE NOT SLUSHING?** If your recipe has not reached desired texture after 60 minutes, increase the temperature by one level. Wait 10–15 minutes to test recipe texture. If still not desired, increase by one level again. Repeat until desired texture is achieved.

- SLUSH NOT DISPENSING?** For the best dispensing experience, fill the unit to the max fill line and ensure the unit is running. For a smoother dispense experience, decrease the temperature level by pressing the bottom arrow on the control panel. More sippable frozen drinks will dispense smoother.

PRESETS

Each preset will start at a default/optimal temperature for ideal texture. If desired, adjust the temperature for your perfect frozen drink texture.

PRESET	DEFAULT/OPTIMAL TEMPERATURE	DESIGNED FOR	RECIPE EXAMPLES
SLUSH		Transforming your everyday beverages	Soda, lemonade
SPIKED SLUSH		Beverages with alcohol content	Margarita, rosé
FRAPPE		Coffee shop lovers to make frozen treats	Store-bought frappé
MILKSHAKE		Dairy- and creamier-based beverages	Chocolate milk, blended milkshake
FROZEN JUICE		Naturally sweetened beverages	Orange juice, apple cider

REQUIRED SUGAR CONTENT

Too little sugar or too much alcohol will prevent proper freezing of a slush output. Follow guidelines below for a perfect slush every time.

All inputs must contain at least 4% sugar.

NOTE: Pre-frozen ingredients taste sweeter. Worried your drink might be too sweet? Don't worry, it won't taste as sweet after you freeze and slush it into a frozen drink.

SUGAR GUIDELINES

Refer to drink/liquid nutrition label to ensure sugar content meets the recommended minimums below:

SERVING SIZE	Minimum Total Sugar Amount
8 oz (240 ml)	8 g
12 oz (355 ml)	11 g
20 oz (591 ml)	18 g

EXAMPLE: Apple juice

Nutrition Facts	
8 Servings per container	
Serving size	8 fl oz (240 ml)
Amount per serving	
Calories	120
% Daily Value*	
Total Fat 0g	0%
Sodium 25mg	1%
Total Sugars 26g	11%
Potassium 251mg	8%
Vitamin C 108mg	120%
Not a significant source of saturated fat, trans fat, cholesterol, dietary fiber, added sugars, vitamin D, calcium and iron.	
* The % Daily Value (DV) tells you how much a nutrient in a serving of food contributes to a daily diet. 2,000 calories a day is used for general nutrition advice.	

Serving Size

Total Sugars
(26 g meets the minimum requirements)

TROUBLESHOOTING TIPS

Low-sugar alert: If the sugar content of the input is too low, the unit will detect it and provide an alert. Temperature Control LEDs will flash one at a time in descending order starting with the top LED, preset LEDS will flash, and the unit will beep every minute for 15 minutes.

If a drink does not meet minimum requirements of total sugar: Add 1–2 tablespoons flavored syrup, juice, sugar, date sugar, coconut sugar, maple syrup, agave, simple syrup, or honey per serving (8 oz). Combine additional sugar with the base prior to pouring in unit. Reset the unit by pressing the preset. Restart by pressing the preset again.

NOTE: Sugar-free substitutes or artificial sweeteners will not aid in meeting total minimum or maximum sugar requirements.

ALCOHOL GUIDELINES

The perfect balance for your favorite frozen cocktails at home. When using the SPIKED SLUSH preset, all premade inputs (wine, beer, etc.) must between 2.8% and 16% alcohol.

HARD ALCOHOL/SPIRIT GUIDELINES

To create frozen cocktails, see chart below for the maximum hard alcohol/spirit (vodka, tequila, etc.) content per total recipe size.

Total Recipe Size	Maximum Alcohol Amount
3 cups (24 oz)	1/2 cup (4 oz)
4 1/2 cups (36 oz)	3/4 cup (6 oz)
6 cups (48 oz)	1 cup (8 oz)
8 cups (64 oz)	1 1/4 cup (10 oz)

Chart above is a guide for incorporating hard alcohol/spirits (35% +) **ONLY**. When using other alcohols such as wine, beer, seltzer, or premade cocktails, refer to the Inspiration Guide.

TIPS

- When using LIGHT or LOWER SUGAR drink mixes**, omit water from the recipe and replace with additional light drink mix in the equal amount.
- When using premade mixes containing alcohol**, omit addition of alcohol from chart instructions and replace with additional drink mix in equal amount.
- When using full sugar premade mixes with blender instructions**, use 1/2 the amount of ice recommended on package instructions in the form of water (e.g. 1 cup ice = 1/2 cup water).
- When using light sugar premade mixes with blender instructions**, use 1/4 the amount of ice recommended on package instructions in the form of water (e.g. 1 cup ice = 1/4 cup water).

TROUBLESHOOTING TIPS

High-alcohol/high-sugar alert: If the alcohol and sugar content of the input is too high, the unit will detect it and provide an alert. Temperature Control LEDs will flash one at a time in ascending order starting with the bottom LED, preset LEDS will flash, and the unit will beep every minute for 15 minutes.

If a drink exceeds the maximum alcohol amount: Add 1/4 cup water per serving (8 oz) to dilute the input. Reset the unit by pressing the preset. Restart by pressing the preset again.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

TECHNICAL SPECIFICATIONS

Voltage: 120V-, 60Hz

