



USE AND CARE GUIDE

PORTABLE ROOM AIR CONDITIONER

Please read this manual carefully before operating your unit and retain for future reference

Safety Information

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury. Limit the use of this hazard statement to the most extreme situations.

WARNING: Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT: Indicates a reminder of the possible dangers associated with a hazardous situation.

NOTE: Is the preferred signal word to address practices not related to personal injury.

WARNING: How to Insert the Batteries in the Remote Control

- Remove the battery cover by sliding it according to the arrow direction.
- Insert new batteries, making sure that the (+) and (-) of battery are installed correctly.
- Reattach the cover by sliding it back into position.

WARNING:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Caution for Ingestion. The battery may cause suffocation if swallowed by children.

READ AND SAVE THESE INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using the air conditioner, follow basic precautions, including the following:

- Read all of the instructions before using this appliance.
- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Do not operate the air conditioner if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- The air conditioner should be serviced only by qualified service personnel. Contact a service center.
- Disconnect power before servicing.
- Disconnect power before cleaning.
- Do not install or use the air conditioner in any area where the atmosphere contains combustible gases or where the atmosphere is contaminated. Avoid any chemicals coming in contact with your air conditioner.
- Do not store anything directly on top of the air conditioner.
- Use two or more people to move and install air conditioner.
- Never operate the air conditioner without the filters in place.
- Do not use the air conditioner near a bathtub, shower or wash basin or other wet area.

WARNING: Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- Do not drill holes in the unit.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Vissani does not support any servicing of the air conditioner.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

NOTE: Turning off power by pressing the Power button does NOT disconnect the appliance from the power supply.

NOTE: Use 2 "AAA" (1.5 volt) alkaline batteries. Do not use rechargeable batteries

- Remove the batteries from the remote control if the system is not going to be used for a long time.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.

Pre-Installation

BEFORE YOU BEGIN

Read these instructions completely and carefully.

IMPORTANT: Save these instructions for local inspector's use. Observe all governing codes and ordinances.

- Note to Installer - Be sure to leave these instructions with the Consumer.
- Note to Consumer - Keep these instructions for future reference.
- Skill level - Installation of this appliance requires basic mechanical skills.

- Completion time - Approximately 1 hour
- We recommend that two people install this product.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.
- You MUST use all supplied parts and use proper installation procedures as described in these instructions when installing this air conditioner.

ELECTRICAL REQUIREMENTS




Some models require a 115/120-volt AC, 60-Hz grounded outlet protected with a 15-amp time-delay fuse or circuit breaker.

The 3-prong grounding plug minimizes the possibility of electric shock hazard. If the wall outlet you plan to use is only a 2-prong outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet.


CAUTION: Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Do not change the plug on the power cord of this air conditioner. Aluminium house wiring may present special problems - consult a qualified electrician.

 Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the TEST button and then the RESET button while plugged into the outlet. If the TEST button does not trip or if the RESET button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.



LOCATION REQUIREMENTS

- Place the air conditioner on a flat, level surface. For optimal performance place portable 20" from exterior wall. For all other sides a minimum distance of 30" should be maintained.
- Keep the air conditioner free of any obstructions such as drapes, curtains, blinds, etc.
- The exhaust hose should be free of an obstructions.
- Do not place the air conditioner on an unstable or raised surface because it could fall and cause damage or injury.
- Do not place the air conditioner in direct sunlight or near a heat source such as baseboard heaters, stoves, etc.
- The window panel can be installed in a window with a minimum 20" (50.80 cm) to a maximum 46" (116.84) opening.

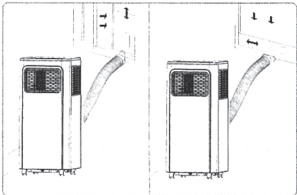

PACKAGE CONTENTS

NOTE: Appearance may vary.

NOTE: Accessory type and quantity may vary depending on the model.

A: Handle, B: Air inlet grille (up), C: Control panel, D: Casters, E: Air outlet grille, F: Air inlet grille (down), G: Drainage hole, H: Air exhaust duct assembly, I: Window sealing kit, J: Window panel

Part	Description
A	Handle
B	Air inlet grille (up)
C	Control panel
D	Casters
E	Air outlet grille

Part	Description
F	Air outlet grille
G	Drainage hole
H	Air inlet grille (down)
I	Air exhaust duct assembly
J	Window sealing kit

PLANNING INSTALLATION

1 Unpack air conditioner

- WARNING:** Excessive Weight Hazard. Use two or more people to move and install air conditioner. Failure to do so can result in back or other injury.

 - Remove packaging materials. Save the carton and the foam packaging for storing the air conditioner when not in use.

NOTE: There are NO packing materials inside the air conditioner to remove. Do Not open the cabinet.



 - Properly dispose of/recycle all packing material.
 - Handle the air conditioner gently.
 - Keep the air conditioner upright and level. Do not set the air conditioner on its side, front, back or upside down.

2 Install exhaust hose assembly to back of unit

- Install the exhaust hose assembly by screwing the hose counterclockwise into the exhaust port on the back of the Air Conditioner.
-

3 Install window panels



- Measure the window opening. For a 20" opening, use just the middle panel of the Window Kit with the opening for the Exhaust Hose Adapter. For openings from 20" to 33", insert one side panel to the middle panel, for openings from 33" to 46", insert both side panels.
- Cam lock**
- Place the Window Kit into the window opening (the Cam Locks should be towards you) and slide the side panels (if being used) outward to fill the opening. Lock the panels in place with the Cam Locks. Slide the window shut against the Window Kit.

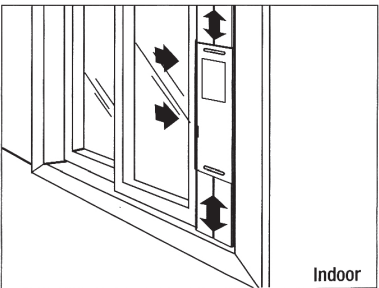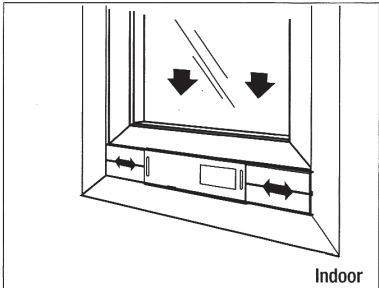

4 Connect exhaust hose to the 5 window panel

- Place the Air Conditioner 20" from the wall. Extend the hose so that it reaches the Window Kit. Insert the Exhaust Hose Adapter into the opening in the Window Kit and slide it into the locking position. Ensure that the hose runs straight to the window with no excess extension. Use the small screw to attach the exhaust hose assembly to the window sealing plate assembly.


IMPORTANT: The Air Conditioner must be vented to the outside. Do not use a longer hose or extend the hose included with the Air Conditioner or the unit will not cool properly and will overheat.

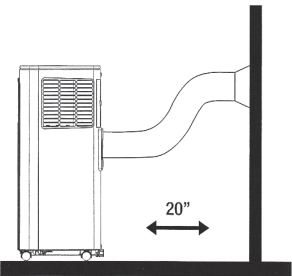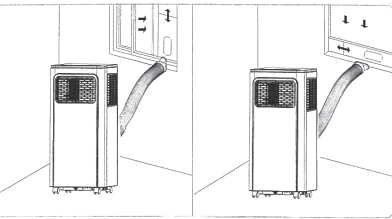

5 Complete Installation

- WARNING:** Electrical Shock Hazard

 - Plug into a grounded 3 prong outlet.
 - Do not remove the ground prong from the power cord plug.
 - Do not use an adapter.
 - Do not use an extension cord.
 - Failure to do so can result in death, fire or electrical shock.
 - Plug the power cord into a grounded 3 prong outlet.
 - Press the Reset button on the plug to ensure the safety plug is providing power to the air conditioner.
 - When removing the air conditioner, be sure to remove the Window Kit.

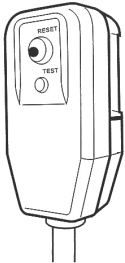

The images shown in this manual are for illustrative purposes only and may be subject to change.


Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

Operation


CONTROL PANEL

Features and appearance will vary.

Lights next to the touch pads on the air conditioner control panel indicate the selected settings.

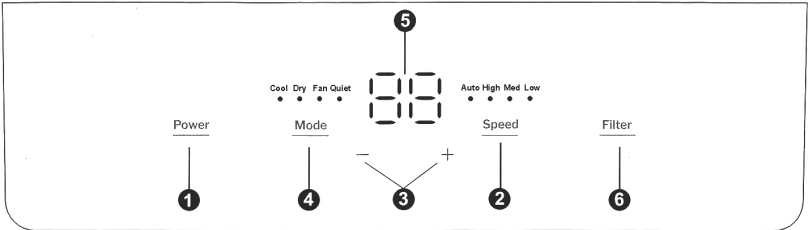

- Power Button**
Press the POWER button to turn unit ON/OFF.
- Fan Speed Button**
Press the Speed button to choose Low, Medium, High, or Auto speed.
- + / - Button for Temperature and Timer**
In Cooling, Dry, or Quiet modes, press the + or - button to increase or decrease the temperature setting.
- Mode Button**
Press the Mode button to choose Cool, Fan, Dry or Quiet.
- Temperature and Timer Display**
The window will indicate temperature and time.
- Filter Button**
This feature automatically notifies you that the air filter must be cleaned. The indicator light will come on after 250 hours of operation. Clean the air filter (refer to Care and Cleaning section), place it back in the back panel, and press the Filter Reset button. The light will turn off.

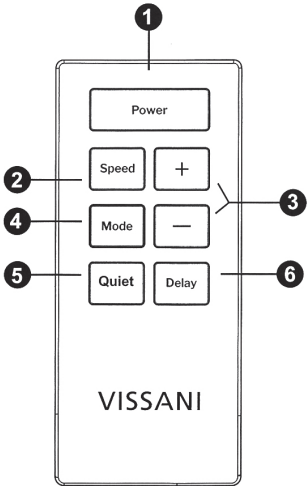

POWER OUTAGE RECOVERY FEATURE

In the case of a power outage or interruption, the unit will automatically re-start in the settings last used after the power is restored.

NOTE: If the TIMER was set before the power outage, it will need to be reset after power is restored.

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual. **(Batteries not included)**

Set Temperature will be shown when unit is in operation.

COOL MODE

Use the COOL mode for cooling.

To set the COOL mode:

- Press the **MODE** button until the COOL indicator light is lit.
- Press the **Speed** button to set Low, Medium, High, or Auto fan speed.
- Press + or - to set the desired temperature between 61°F and 86°F in 1°F increments.

After settings have been made, the display will not change back to show the room temperature.

The temperature control is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the set level of comfort. Set the temperature control at a lower number and the indoor air will become cooler. Set the temperature control at a higher number and the indoor air will become warmer.

NOTE: If the air conditioner is off and is then turned on while set to COOL, it will take approximately 3 minutes for the compressor to start and cooling to begin.

Cooling Descriptions

For Normal Cooling - Select the COOL mode and HIGH or LOW fan speed with a middle set temperature.

For Maximum Cooling - Select the COOL mode and HIGH fan speed with a lower set temperature.

For Quieter & Nighttime Cooling - Select the COOL mode and LOW fan speed with a middle set temperature.

NOTE: If you switch from COOL or DRY mode setting to OFF, wait 3 minutes before restarting.

DRY MODE--DEHUMIDIFICATION

Use the DRY mode to provide dehumidification only.

The fan will run at a fixed speed at this setting, so a fan speed cannot be set. Keep windows and doors closed for the best dehumidifying effects.

To set the DRY mode:

- Press the **MODE** button until the DRY indicator light is lit.

In the DRY mode, the display will always show set temperature.

NOTE: If you switch from a DRY setting to OFF or to a fan setting, wait at least 3 minutes before switching back to a DRY setting.

If using the unit in the DRY mode as a dehumidifier for an extended time.

- Unplug the power cord.
- Connect a ½" outer diameter flexible drain hose (not included) to the upper drain port and drain to floor drain.
- Reconnect the power cord and press the **MODE** button until the DRY indicator light is lit.

FAN MODE

Use the FAN mode to provide air circulation and filtering without cooling.

To set the FAN mode:

- Press the **Mode** button until the desired indicator light for HIGH or LOW fan speed is lit.

Since fan only settings do not provide cooling, a set temperature will not be displayed. After FAN speed has been set, the display will change back to show the room temperature. The exhaust hose and window kit do not need to be installed when operating in fan mode.

QUIET MODE

Use the Quiet mode to reduce the noise of the unit while cooling.

To set the Quiet mode:

- Press the **Mode** button until the Quiet indicator light is lit.
- Press + or - to set the desired temperature.

After settings have been made, the display will change back to show the set temperature. In Quiet mode the unit sets the fan speed automatically. Changing the fan speed while in Quiet mode will put the unit in Cool mode.

POWER OUTAGE RECOVERY FEATURE

In the case of a power outage or interruption, the unit will automatically re-start in the settings last used after the power is restored.

NOTE: If the Delay was set before the power outage, it will need to be reset after power is restored.

Care and Cleaning

CLEANING

WARNING: Electrical Shock Hazard
Disconnect power before cleaning. Failure to do so can result in death or electrical shock.

- Unplug or disconnect power.
- Use only a soft cloth dampened with water to clean the cabinet.

NOTE:
Do not use a liquid or spray cleaner to clean the air conditioner.
DO NOT use chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or scouring pads. Some of these chemicals/items may damage and/or discolor your air conditioner.

- Dry thoroughly with a soft cloth.
- Plug in or reconnect power.

AIR FILTER

The air filters should be cleaned at least every two weeks for your unit to operate at optimum efficiency.


CAUTION: DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.

To remove:

- Unplug or disconnect power.
- Pull to remove upper filter panel.
- Wash or vacuum the dust from the air filters.

NOTE: If washed, gently shake the filter to remove the excess water and dust particles trapped in the filter.

- Reinstall the filters.
- Plug in or reconnect power.

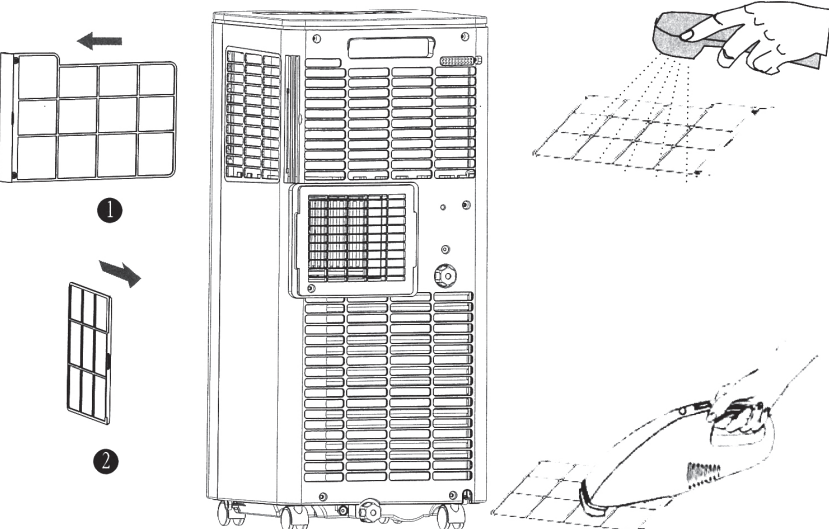


INTERNAL WATER TANK

The Water Full indicator ("FL" on the control panel display) illuminates when the internal water tank has filled with condensed water.

To Empty the Internal Water Tank:

- Unplug or disconnect power.
- Place a shallow 1 quart or larger pan (not included) below the lower drain located on the back (near the bottom) of the air conditioner.
- Remove the cap and the rubber plug and drain the water tank.
- Re-insert the drain plug and screw the cap snugly into place.
- Plug in or reconnect power.

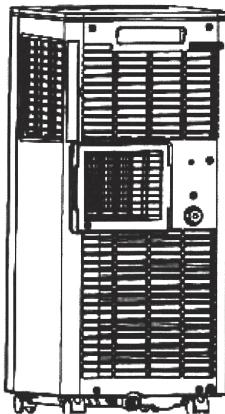

STORAGE

If the unit is not being used for a long period of time:

To Empty the Internal Water Tank:

- Unplug or disconnect power.
- Drain the water from the water tank.
(See "Internal Water Tank section" above.)
- Use the original packaging to repack the unit to avoid a buildup of dust or dirt.
- Store the air conditioner in a cool, dry location.

HOW TO INSERT THE BATTERIES IN THE REMOTE CONTROL

- Remove the battery cover by sliding it according to the arrow direction.
- Insert new batteries, making sure that the (+) and (-) of battery are installed correctly.
- Reattach the cover by sliding it back into position.

NOTE:
Use 2 "AAA" (1.5 volt) alkaline batteries. Do not use rechargeable batteries.
Remove the batteries from the remote control if the system is not going to be used for a long time.
Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.

The images shown in this manual are for illustrative purposes only and may be subject to change.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

Troubleshooting

Save time and money! Review the charts first and you may not need to call for service.

Problem	Possible Cause	Solution
Unit does not start or operate.	Power supply cord is not plugged into an outlet.	☐ Plug the power cord into a grounded 3 prong outlet.
	Power supply cord has tripped.	☐ Press and release the RESET button on the power supply cord.
	The Power button has not been pressed.	☐ Press the Power button on the Control Panel or Remote Control to turn ON the air conditioner.
	There is no power to the electrical outlet.	☐ Plug a working lamp into the outlet to check for power.
	A household fuse has blown or a circuit breaker has tripped.	☐ Replace the fuse or reset the circuit breaker.
	The control was programmed for a Time Delay.	☐ Cancel the Time Delay. See "Control Panel."
	The batteries in the remote control are dead.	☐ Replace the batteries.
Remote control is not working.	Batteries are dead.	☐ Replace the batteries.
	Batteries are installed incorrectly.	☐ Make sure the batteries are inserted in the correct position.
Air conditioner is working but the room is not cooling.	The room temperature is hot. NOTE: On extremely hot and humid days, the air conditioner will take longer to cool the room.	☐ Allow time for the room to cool when you first turn on the unit. ☐ Make sure the air conditioner has an adequate BTU rating for the size of the room being cooled.
	The control is set incorrectly to Fan or Dehum mode.	☐ Set the Mode to Cool and the Fan Speed to High.
	Airflow is restricted.	☐ Remove any obstacles to the airflow and redirect airflow for uniform cooling.
	Temperature set too high.	☐ Lower the set temperature.
	Air filters are dirty or restricted.	☐ Clean the air filter. See "Air Conditioner Care."
	Air conditioner installed incorrectly.	☐ Check the exhaust hose and window panel for proper installation.
	Doors and windows are open.	☐ Close the doors and windows to the room being cooled to prevent cooled air from escaping.

ERROR CODES

Code	Meaning
EP	Abnormal room temperature sensor.
E1	Abnormal tube temperature sensor.
FL	Float sensor error.

PRINTED IN MEXICO / Elbrd: J.M
SC: 09-15-2026
SHNMDL: VPQS05BWT_B
OBPN: 00105114279



8 1 4 1 0 0 8 1 9