


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

IDENTIFICATION OF PARTS

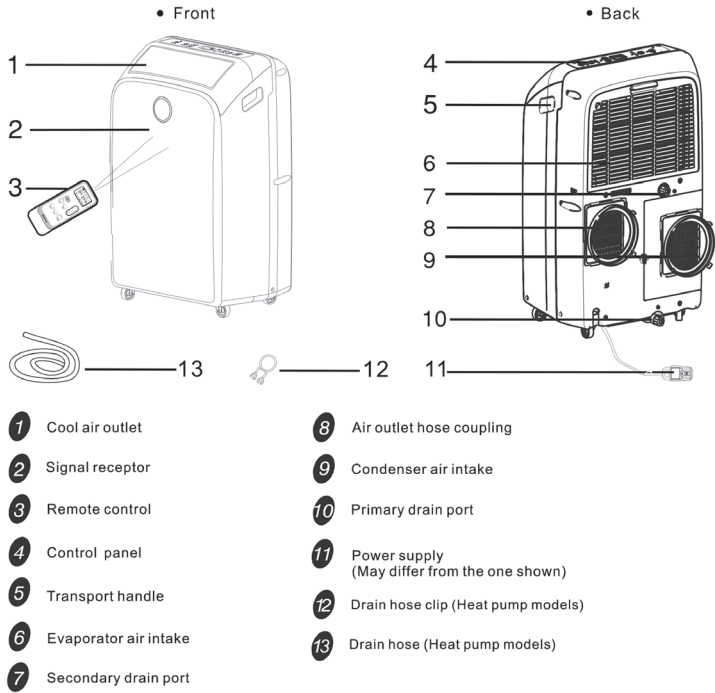

The figures in this manual are based on the external view of a standard model. They may differ from that of the air conditioner you have selected.

AIR CONDITIONER SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING". These words mean:

DANGER

A hazard that if not avoided will result in death or serious injury.

WARNING

A hazard that if not avoided could result in death or serious injury.

All safety messages will tell you what the potential hazard is and tell you how to reduce the chance of injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not use an extension cord.
- Do not remove ground prong.
- Unplug air conditioner before servicing.
- Do not use an electrical adapter.
- Use two or more people to move and install air conditioner.
- The appliance is not intended for use by young children or impaired persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

STORAGE AND DISPOSING OF THE UNIT

- Please recycle or dispose of the packaging material for product in an environmentally responsible manner.
- Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- Dispose of this appliance in accordance with Federal and Local regulations. Refrigerants must be evacuated before disposal.

WARNING Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources(for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- Do not drill holes in the unit.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

INSTALLATION REQUIREMENTS

Tools and Parts

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

Tools needed (Tools not included)

- Phillips screwdriver
- Scissors
- Pencil
- Cordless drill and 1/4" bit

Parts supplied

Check that all parts are included in parts package.

Part	Description	Part	Description
	A. Foam seal		I. Inner slider section-short
	B. Coupling		J. Inner slider section
	C. Flexible exhaust hose		K. Outer slider section
	D. Window exhaust adapter		L. Foam seal-long
	E. Rivets		M. Foam seal-short
	F. Screws		N. Drain hose (Heat pump models)
	G. Window-lock bracket		O. Drain hose clip(Heat pump models)
	H. Outer slider section with vent		P. Remote control

NOTE: Accessory type and quantity may vary depending on the model.

Electrical Requirements

WARNING

Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Recommended Grounding Method


This portable air conditioner must be grounded. This room air conditioner is equipped with a power supply cord with a three-prong grounding plug. The cord must be plugged into a mating, grounded three-prong outlet, grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded three-prong outlet installed by a qualified electrical installer.

It is the customer's responsibility:

To contact a qualified electrical installer. To assure that the electrical installation is adequate and conforms to the Nation Electrical Code,ANSI/NFPA 70-last edition,and all local codes and ordinances.

Copies of the standards listed may be obtained from: Nation Fire Protection Association
www.nfpa.org

Wiring requirement
115 V (103.5 min. to 126.5 max.)
15 A time-delay fuse or circuit breaker
Power Supply Cord

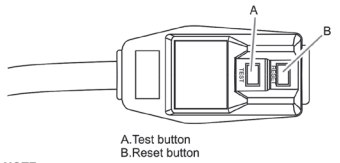

NOTE:

Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that sense leakage current. If the cord is crushed, the electronics detect leakage current and power will be disconnected in a fraction of a second.

To test your power supply cord:

1. Plug power supply cord into a grounded 3prong outlet.
2. Press RESET (on some devices, a green light will turn on).
3. Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn off).
4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn on). The power supply cord is ready for operation.

NOTE:

- The Reset button must be pushed in for proper operation.
- The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset.
- Do not use the power supply cord as an off/on switch. The power supply cord is designed as a protective device.
- A damaged power supply cord must be replaced with a new power supply cord. Contact a service center.
- The power supply cord contains no user serviceable parts. Opening the tamper-resistant case voids all warranty and performance claims.

Location Requirements


NOTE:

- The flexible exhaust hose allows placement of the air conditioner at least 20" from window or door.
- Confirm you are using the correct size air conditioner for the space to be cooled, per sizing recommendations, below:

Area to be cooled	DOE Capacity Needed(BTUs)
Up to 10-ft x 55-ft room; 550 sq. ft.	8, 000 BTU Dual Hose

WARNING

The length of the exhaust hose is specially designed according to the specification of the product. Do not replace or extend ,or otherwise modify the hose.

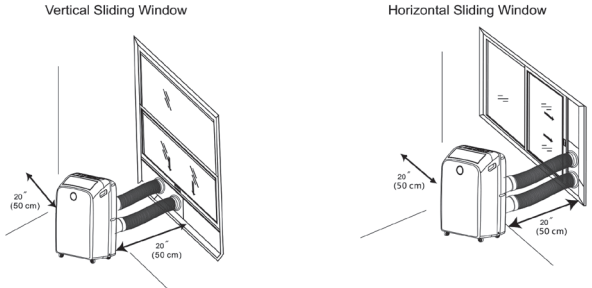

NOTE:

- For best performance, allow at least 20 in of air space on all sides of the unit for good air circulation.
- Do not block the air outlet.
- Provide easy access to the grounded 3 prong outlet.
- To ensure proper function, DO NOT overextend or bend the hose. Make sure that there is no obstacle around the air outlet of the exhaust hose in order for the exhaust system to work properly. All the illustrations in this manual are for explanation purpose only. Your air conditioner may be slightly different. The actual shape shall prevail.



INSTALLATION INSTRUCTIONS

Unpack the Air Conditioner

WARNING

Excessive Weight Hazard

Use two or more people to move and install air conditioner.

Failure to do so can result in back or other injury.

Remove packaging materials

- Remove and recycle packaging materials.
- Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your air conditioner.
- Handle the air conditioner gently.
- Keep unit upright at least 2 hours prior to use.

Caution: Installation accessories are stored in the top of the carton, and are required for proper cooling performance. Please remove all accessories from packing materials before use.


Window Vent Panel And Extensions

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 25" to 50" wide,or horizontal sliding windows from 25" to 50" tall.

Panel Length	H	I	J	K	Fig.
Window Length	25"	9 1/4"	18"	18"	
25"	✓				a
25"-33"	✓	✓			b
25"-42"	✓		✓		c
43"-50"	✓			✓	d


- 1.Please check your window size and choose the fit from the above table. For window openings shorter than 25", trim panel H to fit the opening.
- 2.If your window size requires more than 2 panels, after adjusting the length, please secure the panels with rivets. E.

Note: Slider cutting may be needed to fit the width or height of the window .

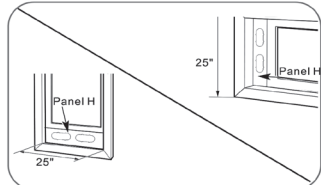



For an 25" window opening, use the window vent panel by itself.

Fig. "a"

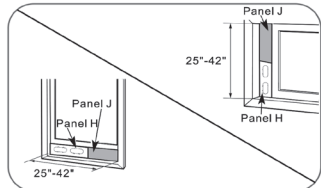


For window openings from 25" to 42", use the window vent panel(Panel H) and an extension panel (Panel J).

Fig. "c"

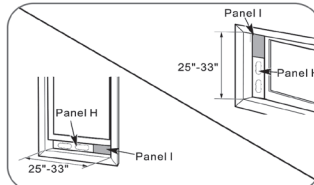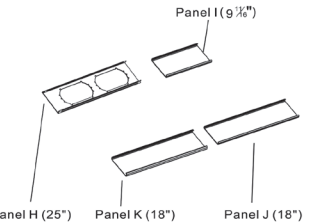

For window openings from 25" to 33", use the window vent panel(Panel H) and a extension panel (Panel I).

Fig. "b"

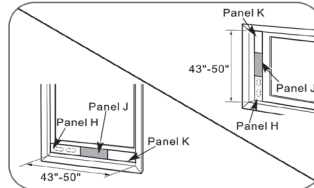



For window openings from 43" to 50", use the window vent panel and two extension panels (Panel K and Panel J).

Fig. "d"


Install The Portable Air Conditioner

Install Exhaust Hose and Adapter

1. Roll the air conditioner to selected location. see "Location Requirements."
2. Preparing the exhaust hose assembly:
Press the flexible exhaust hose into the coupling and the window exhaust adapter. Both the coupling and window exhaust adapter have integral clips that snap onto the hose.

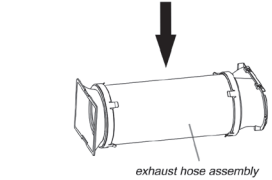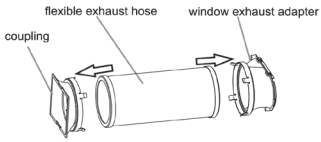

3. Insert the coupling into the slot on the back of the air conditioner.
4. Slide the hose into place.

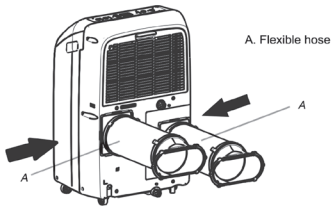

5. Confirm the hose is locked in place before operating.


CAUTION: Ensure the coupling is correctly locked in place by trying to move it up and down by hand. If there's any movement of the coupling, then it isn't locked, and won't provide normal cooling performance. Only extend the hose to the necessary length,keeping it as short as possible.We do not recommend extending the hose more than 9 feet long.

Window Installation

Your window installation kit has been designed to fit most standard vertical and horizontal window applications. Roll the air conditioner to selected location. see "Location Requirements."


1. Attach the window exhaust adapter to the outer slider section (the piece with the large exhaust hole).

NOTE: Product must be used with included Duct Window installation kit for effective cooling.

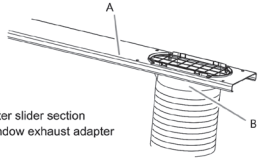


Installation In Vertical Sliding Windows


NOTE:The window installation kit can be used with vertical sliding windows between 25" and 50" wide.

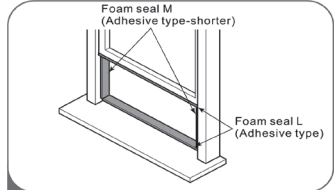


- 1 Cut the foam seal L(adhesive type) & M (adhesive type-shorter)to the proper length, and attach it to the window sash and frame.

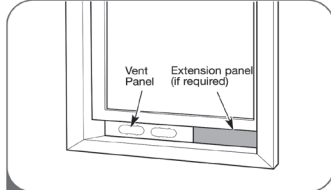


- 2 Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

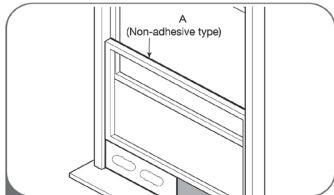


- 3 Cut the foam seal A(Non-adhesive type) to the window width. Stuff the foam seal A between the glass and the window to prevent air and foreign objects from getting into the room.

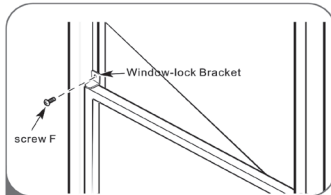


- 4 Install the Window-lock bracket with a type F screw as shown if you need.

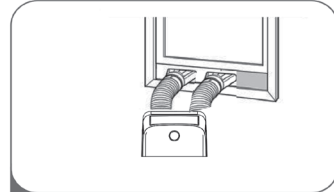

- 5 Insert the diffuser into the opening in the vent panel and slide it to lock it into place.

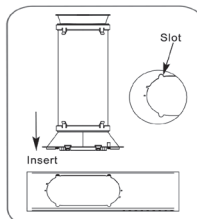


Align the tabs on the diffuser with the slots in the vent panel. Insert the diffuser into the opening in the vent panel.

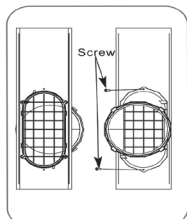


Insert the screw in the hole in the diffuser to prevent the diffuser from sliding out of the vent opening.

Installation In Horizontal Sliding Windows


NOTE: The window installation kit can be used with horizontal sliding windows between 25" and 50" wide.

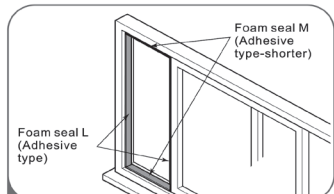

- 1 Cut the foam seal L(adhesive type) & M (adhesive type-shorter)to the proper length, and attach it to the window sash and frame.

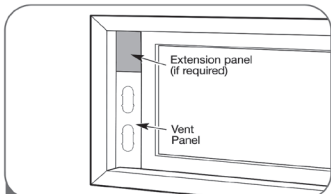

- 2 Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

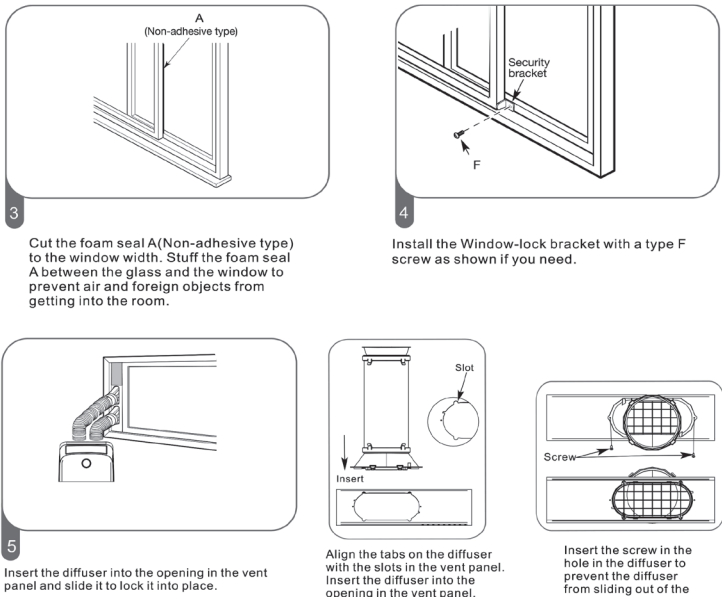

PORTABLE AIR CONDITIONER USE

Operating your portable air conditioner properly helps you to obtain the best possible results. This section explains proper air conditioner operation.

IMPORTANT:

- Do not stay in direct airflow from the air conditioner for extended periods of time.
- Never use in tightly enclosed spaces. Always ensure there is sufficient airflow of outside air entering the household especially when used in conjunction with combustible devices such as gas stoves, fireplaces, furnaces, hot water heaters etc. Do not place the power cord or air conditioner near a heater, radiator, stoves or other apparatus(including amplifiers) that produce heat.
- This air conditioner is intended for household use as a residential appliance. Do not use it as a precision climate control for commercial use, or for precision equipment, food, pets, plants, artwork, etc.
- Do not block or obstruct the exhaust vent hose as it may severely affect performance, or cause failure of the air conditioner.
- The air conditioner display shows the current room temperature.
- When changing modes while the air conditioner is in operation, the compressor will stop for 3 to 5 minutes before restarting. If a button is pressed during this time, the compressor will not restart for another 3 to 5 minutes.
- In Cooling or Dry mode, the compressor and condenser fan will stop when the room temperature reaches the set temperature.
- On Dry mode, the humidity level is automatically set, but is not able to be displayed.

NOTE: In the event of a power failure, your air conditioner will operate at the previous settings when the power is restored.

Starting Your Portable Air Conditioner

Control panel






NOTE:The symbols may be different from these models, but the functions are similar.

Power On or Off	Mode
 POWER	 MODE
NOTE: Keep upright at least 2 hours before use to prevent damaging the compressor.	1. Press and release MODE until you see the symbol for the desired setting. Operating modes:  COOL
At the first time when the air conditioner is plugged in and turned on after your purchase, it will be set in Cool Mode. When the air conditioner is turned on at all other times, it will run according to the previous setting.	2. Choose Cool , Dry, Fan or Heat. Cool-Cools the room. Press FAN to select High, Mid or Low speeds. Press the Plus or Minus button to adjust the temperature. Dry-Dries the room. The air conditioner automatically selects the temperature. The fan runs on Low speed only. Dehumidification ranges between 2 to 3 pints per hour, by model. NOTE: Dry mode should not be used to cool the room.
NOTE: The actual descriptions of control panel and their locations may vary depending on the model. The images shown in this manual are for illustrative purposes only and may be subject to change.	Fan Only mode. Press FAN to select High, Mid or Low.  FAN
	Heat-heats the room. Press FAN to select high, Mid or Low speeds. Press the PLUS or MINUS button to adjust the temperature. NOTE: Heating is NOT available for cooling only models.
	 HEAT (Optional)
	WiFi control is available for connected models with this logo on control panel.  WiFi (Optional)

Fan Speed	Temperature
1. Press and release FAN to choose the desired fan speed.  FAN	Press the PLUS button to raise the temperature. Press the PLUS button once to increase the set temperature by 1°F (1°C). 
2. Choose High, Medium or Low. High-for maximum fan speed  Medium-for normal fan speed  Low-for minimum fan speed 	Press the MINUS button to lower the temperature. Press the MINUS button once to decrease the set temperature by 1°F (1°C).  NOTE: - In the Cooling mode, the temperature can be set between 61°F and 86°F (16°C and 30°C). - In Fan Only mode, the temperature can not be set. - The unit LED shows the target temperature for 5 seconds and then displays the room temperature.
	Change display between °F and °C 

Using the Remote Control

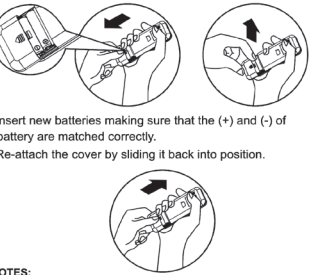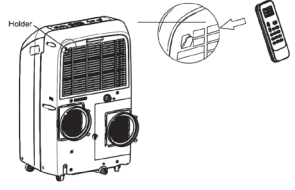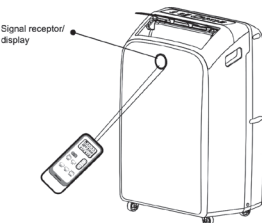Insert the Batteries	Storage Tip
1. Remove the battery cover along the arrowed direction. 2. Insert new batteries making sure that the (+) and (-) of battery are matched correctly. 3. Re-attach the cover by sliding it back into position.	The holder on the back of the unit can be used to store the remote control.
	
NOTES: - Use 2 standard AAA(1.5volt) batteries. Do not use rechargeable batteries. - When replacing batteries, always replace both batteries with new batteries. Do not mix old and new batteries. Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cd, ni-mh, etc) batteries. - If the air conditioner will not be used for an extended period of time, remove the batteries from the remote.	How to Use To operate the room air conditioner, aim the remote control at the signal receptor. The remote control will operate the air conditioner at a distance of up to 23 feet (7m) when pointing at the signal receptor of the air conditioner. 

CAUTION


- Do not use the remote if the batteries have leaked. The chemicals in batteries could cause burns or other health hazards.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

NOTE: Batteries not included

Note
MERCURY FREE SUPER HEAVY DUTY R03 UM-4 SIZE AAA 1.5V BEST USED BEFORE DATE CODE (MONTH-YEAR) ON THE BOTTOM Do Not Mix Old And New Batteries. Do Not Mix Alkaline, Standard (Carbon - Zinc), Or Rechargeable (Nickel - Cadmium) Batteries DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK

Remote control

NOTE:
Remote control may differ in appearance.

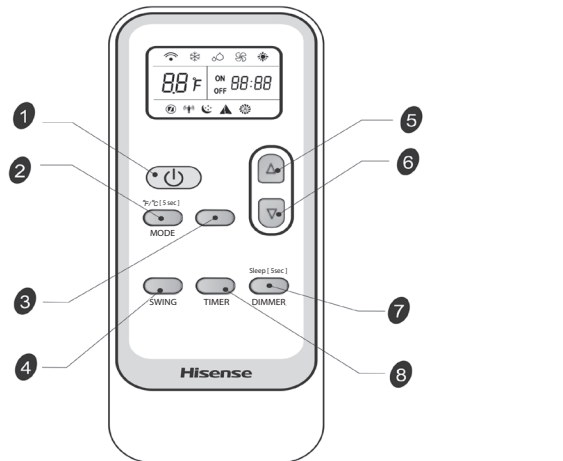

NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual (Batteries not included).

Button and Function	
 ON/OFF	 UP
 MODE	 DOWN
 FAN	 DIMMER or Sleep
 SWING	 Timer On/Off

NOTE: Press and hold the MODE button on the remote for 5 seconds to switch the temperature display from degrees Fahrenheit(°F) to degrees Celsius(°C).

Indication symbols	
 Cooling indicator	 Auto fan speed
 Dry indicator	 High fan speed
 Fan only indicator	 Medium fan speed
 Heating indicator	 Low fan speed

Sleep indicator
 Sleep indicator

Signal transmit.
 Signal transmit.

88°F Display set temperature

DIMMER

Press the DIMMER button to turn off the control panel display.

Sleep mode
 Sleep [5 sec] DIMMER
NOTE: When in DIMMER mode, new control inputs will return display to normal.

SLEEP mode can only be set in Cooling, Heating or Drying modes. When in sleep mode the unit will utilize lower, quieter fanspeeds and automatic temperature adjustments offering 8 hours of optimal sleeping conditions before shutting off.


- NOTE:**
- The appliance will stop operation automatically after operating for 8 hours.
 - Fan speed is automatically set at low speed.
 - In the Cooling mode, if the current room temperature is below 79°F(26°C), the temperature will automatically increase 1°F(1°C) during the first hour after Sleep control is activated, and continue running at that temperature. If the room temperature is 79°F(26°C) or above, set temperature will not change.
 - In Heating mode, the set temperature will decrease by 6°F(3°C) at most, during 3 hours, and continues running at that temperature until auto shut off.

1. Press MODE to select COOL, Heating or DRY.

NOTE: Sleep control cannot be selected in Fan mode.

PORTABLE AIR CONDITIONER CARE

Draining the Air Conditioner(non-Heating models)

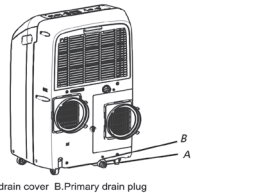

WARNING
Excessive Weight Hazard Use two or more people to move and install the air conditioner. Failure to do so can result in back or other injury.

- Unplug the air conditioner or disconnect power.
- Move the air conditioner to a drain location or outside.
- Remove the primary drain cover and plug.
- Drain water completely through the drain hole.
- Reinstall the primary drain cover to the drain hole.
- Reposition the air conditioner.
- Plug in the air conditioner or reconnect power.

Sleep mode (continue)
2. Press the UP or DOWN button to set the temperature.
3. Press and hold the DIMMER button on the remote for 5 seconds to switch the DIMMER mode to the Sleep mode.
4. After 5 seconds, the lights on the control panel display will dim.
NOTE: The temperature and airflow direction may be adjusted during Sleep control. The fan speed is automatically set to Low speed. After 5 seconds, the lights on the control panel display will dim again.
5. To turn off Sleep control, press MODE, FAN, Sleep or wait 8 hours for Sleep control to turn off automatically.
NOTE: The air conditioner will return to previous settings after Sleep mode is turned off.

TIMER
Use the TIMER function to turn the air conditioner ON/OFF automatically.

Setting the Air Conditioner to Turn On:
1. Plug in the air conditioner and use the remote to power it ON.
2. Use the remote to set the desired mode, temperature, fan speed, etc.
3. Use the remote to power OFF the air conditioner.
4. Press TIMER on the remote and use the UP, DOWN buttons to set the desired delay time until the air conditioner turns ON. The delay time can be set from 0 to 24 hours in one-hour increments.
5. Press TIMER again to confirm the delay time. The TIMER light on the unit will be on.

Setting the Air Conditioner to Turn Off:
1. Plug in the air conditioner and use the remote to power it ON.
2. Use the remote to set the desired mode, temperature, fan speed, etc.
3. Press TIMER on the remote and use the UP, DOWN buttons to set the desired delay time until the air conditioner turns OFF. The delay time can be set from 0 to 24 hours in one-hour increments.
4. Press TIMER again to confirm the delay time. The TIMER light on the unit will be on.

To cancel TIMER :
Press the TIMER button again. Once a "beep" is heard and the indicator disappears, the TIMER mode has been canceled.

NOTE:

- The TIMER function can only be set by the remote control.

SWING


Press SWING once to change the vertical airflow direction. Press again to hold the louver in a desired position.

Normal Sounds
When your air conditioner is operating normally, you may hear sounds such as: - Air movement from the fan. - Clicks from the thermostat cycling. - Vibration or noise due to poor wall or window construction. - A high-pitched hum or pulsating noise caused by the high-efficiency compressor cycling on and off.

Cleaning the Outside

- Press ON/OFF to turn off the air conditioner.
- Unplug the air conditioner or disconnect power.
- Remove the air filter and clean separately. See "cleaning the Air Filter".
- Wipe the outside of the air conditioner with a soft, damp cloth.
- Plug in the air conditioner or reconnect power.
- Press ON/OFF to start the air conditioner.

Cleaning the Air Filter

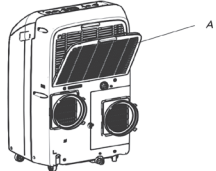

- A. Evaporator air intake filter panel door
- Press ON/OFF to turn off the air conditioner.
 - Open the filter panel door on the back of the air conditioner and remove.
 - Remove the tapping screw from the condenser air intake filter panel door and remove.
 - Use a vacuum cleaner to clean the filter. If the filter is very dirty, wash the filter in warm water with a mild detergent. NOTE: Do not wash the filter in the dishwasher or use any chemical cleaners.
 - Air dry the filter completely before replacing to ensure maximum efficiency.
 - Reattach the air filter to the filter panel door.
 - Reinstall the filter panel door and tapping screw.
 - Press ON/OFF to start the air conditioner.

Storing After Use

If the air conditioner will not be used for an extended period of time:

- Drain the water completely. See "draining the Air Conditioner".
- Run the air conditioner set to Fan Only for approximately 12 hours to dry the air conditioner.
- Unplug the air conditioner.
- Remove the flexible exhaust hose and store with the air conditioner in a clean, dry area. See "Installation Instructions".
- Remove the window kit and store with the air conditioner in a clean, dry area. See "Installation Instructions".
- Remove the filter and clean. See "Cleaning the Air Filter".
- Clean the outside of the air conditioner. See "Cleaning the Outside".
- Reinstall the filter.
- Remove the batteries and store the remote control with the air conditioner in a clean, dry area.

Before using the air conditioner again:

- Make sure the filter and drain cap are in place.
- Check the power cord to make sure it is in good condition, with no cracks or damage.
- Place new batteries in the remote.
- Install the air conditioner. See "Installation Instructions".

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

TROUBLESHOOTING

Before calling for service, please try the suggestions below.

Air conditioner will not operate
WARNING Electrical Shock Hazard Plug into a grounded 3 prong outlet. Do not remove ground prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock.
The power supply cord is unplugged. Plug into a grounded 3 prong outlet. See "electrical Requirements."
Time-delay fuse or circuit breaker of the wrong capacity is being used. Replace with a time-delay fuse or circuit breaker of the correct capacity. See "electrical Requirements".
The power supply cord has tripped (Reset button has popped out). Press and release RESET (listen for click; Reset button will latch and remain in) to resume operation.
A household fuse has blown, or a circuit breaker has tripped. Replace the fuse, or reset the circuit breaker. See "Electrical Requirements".
The On/Off button has not been pressed. Press ON/OFF.
The local power has failed. Wait for power to be restored.

Air conditioner blows fuses or trips circuit breakers
Too many appliances are being used on the same circuit. Unplug or relocate appliances that share the same circuit.
You are trying to restart the air conditioner too soon after turning off air conditioner. Wait at least 3 minutes after turning off air conditioner before trying to restart the air conditioner.
Disturbances in your electrical current can trip (Reset button will pop out) the power supply cord. Press and release RESET (listen for click; Reset button will latch and remain in) to resume operation.
Electrical overloading, overheating, cord pinching or aging can trip (Reset button will pop out) the power supply cord. After correcting the problem, press and release RESET (listen for click; Reset button will latch and remain in) to resume operation. If the power cord fails to reset, contact a service center.

NOTE: A damaged power supply cord must be replaced with a new power supply cord, contact a service center.

PRINTED IN MEXICO / Elbrd: J.M / SC: 08-20 2026
OBPN: 4260755-01 / SHNMDL: AP55023HR1GD_EOB

8 1 4 1 0 0 8 1 2

QUICKSTART

Hisense

8 1 4 0 0 0 8 1 2

Portable Air Conditioner


Caution: Installation accessories are stored in the top of the carton, and are required for proper cooling performance. Please remove all accessories from packing materials before use.



Keep unit upright at least 2 hours prior to use.


Parts Package

Before beginning, check that all parts are included in the parts package.

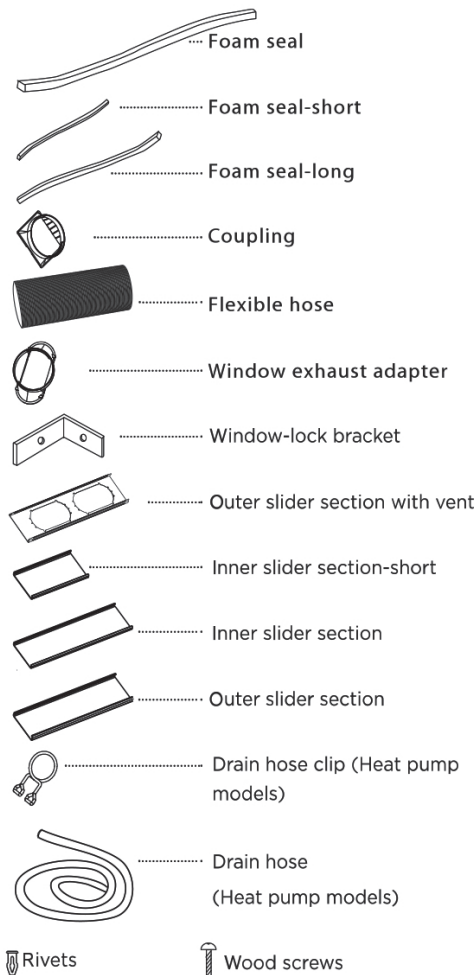

NOTE: Accessory type and quantity may vary depending on the model.


Tools needed (Tools not included)

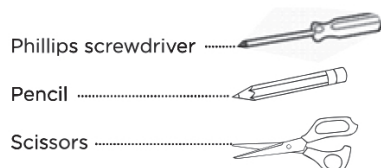

step 1


Suitable Windows

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 25" to 50" wide, or horizontal-sliding windows from 25" to 50" high.

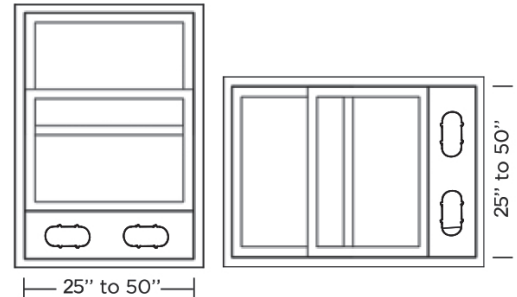

Choose the right panel

Panel window	H 25"	I 9 1/8"	J 18"	K 18"
25"	✓			
25" 33"	✓	✓		
25" 42"	✓		✓	
43" 50"	✓		✓	✓

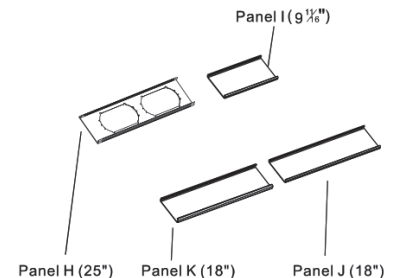


step 2

Window Installation


1

Cut the adhesive foam seal to the proper length, and attach it to the window sash and frame.

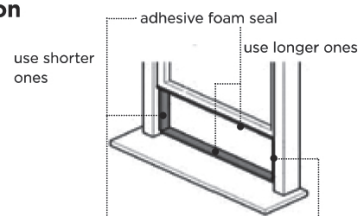


2

Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

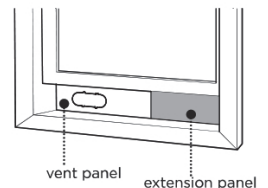


3

Cut the Non-adhesive foam seal to the window width. Stuff the foam seal between the glass and the window to prevent air and insects from getting into the room.

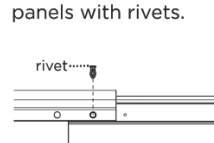


4

Install the Window-lock bracket with wood screws as shown, if you need.

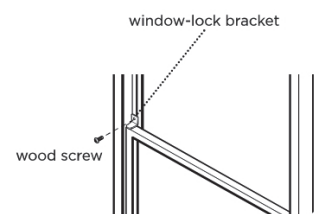

step 3

Connect it together

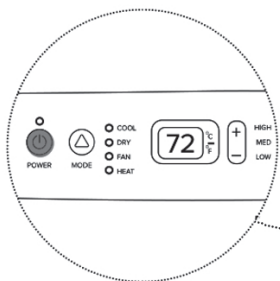


5 Turn The Unit On

Turn the air conditioner on, and set the desired mode and temperature.



4 Plug In the Unit

 
Be sure to use a grounded 3 prong outlet. Do not use an extension cord. Plug in the unit.



1

Preparing the exhaust hose assembly:


Press the flexible exhaust hose into the coupling and the window exhaust adapter. Both the coupling and window exhaust adapter have integral clips that snap onto the hose.

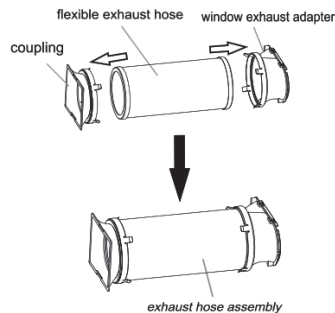

2

Connect The Hose To The Air Conditioner


Slide the coupling into the slot on the back of the air conditioner to lock the hose on the unit.

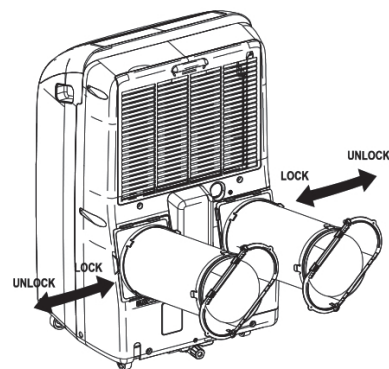


3

Connect The Hose To The Window

Roll the air conditioner to selected location. Attach the window exhaust adapter to the outer slider section (the piece with the large exhaust hole).

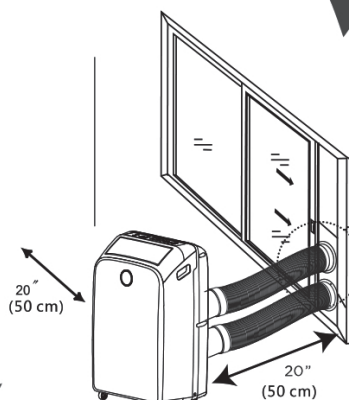

To ensure proper ventilation, keep a distance of least 20in (50 CM) between the Portable AC and the window.

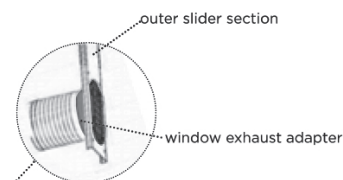


Waterless Design

1. Waterless Design doesn't require routine draining in cooling mode due to internal evaporation of condensate water.
2. Code "E5" alerts you the internal tank has become full. Please drain the air conditioner according to the instructions in User Manual.
3. Before moving the unit, place a pan on the floor beneath the drain cover and remove the drain cover to drain the water.
4. Be sure to replace the drain cover when draining is complete.

Draining the Air Conditioner (Heat Pump models only)

1. Uncover the drain port.
2. Connect the drain hose to the drain port. Make sure the connector does not have a water leak.
3. Place the other end of drain hose into a drain. Check to see that the hose lies flat and is in the drain. Make sure the hose end that goes to the drain is on a lower level than the hole end that connects to the unit. The hose should not be kinked or pinched.

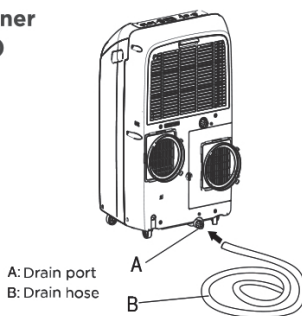

Follow these four easy steps to set up your appliance

1. Install the appliance and turn it on.
2. Open Android Play Store or iOS App Store in your smart phone, then enter "ConnectLife" in the Search bar to find the latest version. Download and install it.
3. Follow WiFi instruction to pair with your appliance.
4. Manage and enjoy complete control over your appliance.



ConnectLife



QR Code for Android



QR Code for iOS

The figures in this guide are based on the external view of a standard model. They may differ from that of the air conditioner you have selected.

See the user manual for detailed instruction on installation and using the features and settings of the air conditioner and remote control.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of FCC RF Rules. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION:

To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device is compliant with Class B limits. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION:

To assure continued compliance, Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Label Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE:

To satisfy FCC exterior labeling requirements, the following text must be placed on the exterior of the end product. "Contains Transmitter module FCC ID: 2AGCCAHEH-W0G1/2AGCCAHEH-W4G1/2AGCCAHEH-W0G2/2AGCCAHEH-W4G2".

To satisfy IESD exterior labeling requirements, the following text must be placed on the exterior of the end product. Transmitter module IC: 20778-AEHW0G1/20778-AEHW4G1/20778-AEHW0G2/20778-AEHW4G2".