



- Crisper plates are dishwasher safe, but they are **NOT** microwave or oven safe.

USING YOUR NINJA CRISPI® DUALZONE™

 
USING THE COOKING FUNCTIONS

To turn on the CRISPI DualZone Main Unit, first plug the power cord into a wall outlet, then press the power button.




- 1 Install a crisper plate in a Ninja® glass container. Handle with care to avoid bending the crisper plate. Add ingredients to the Ninja glass container.

NOTE: For best results, **DO NOT** combine raw, frozen, and/or pre-cooked ingredients. Cook **ONLY** one type of food at a time.

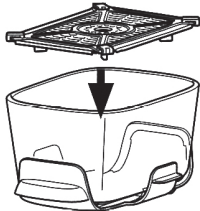

 
- 2 Align the container with the base guide, and push container all the way back toward the spine until it clicks into place.

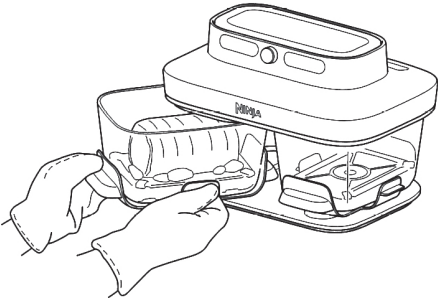


- 3 Use the dial to select your desired function.



 - 4 Press the temp button then use the dial to set the temperature.



 - 5 Press the time button then use the dial to set the time.




- 6 Press the dial to start cooking.

NOTE: “ADD POT” will display on the control panel if the container is not installed properly. To correct, ensure the glass container is completely pushed toward the back of the unit and has clicked into place.

Add Pot

 - 7 To toss or flip ingredients during cooking, pull the glass container out of the main unit or press the dial to pause cooking. Shake container using the easy-grip handles or flip foods with a silicone-tipped utensil. Reinsert the glass container into the unit and press the dial to resume cooking.

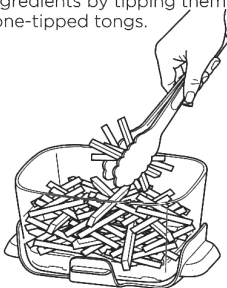


- 8 When cooking is complete, the unit will beep and “END” will appear on the display. The container can be placed directly on any countertop surface.
- 9 Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or serve using easy-grip handles.

USING MATCH COOK®

To cook a larger amount of the same food, or cook different foods using the same function, temperature, and time:

 - 1 Place ingredients in the glass container, then insert container in unit.
- 2 Select the desired cooking function. (Air Broil is not available with this function.) Press the temp button then use the dial to set the temperature, and press the time button then use the dial to set the time.
- 3 Press the Match Cook button to copy one side to the other. Then press Start/Pause dial to begin cooking in both zones.

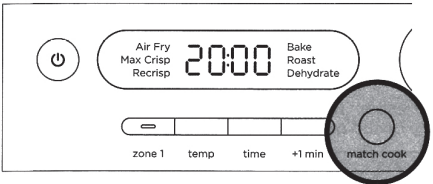


- 4 “End” will appear on both screens when cooking ends at the same time.

USING SMART FINISH®

To finish cooking at the same time when foods have different cook times, temps, or even functions:

 - 1 Place ingredients in the baskets, then insert glass containers in the unit.
- 2 Select the desired cooking function by pressing zone on either side. Press the temp button then use the dial to set the temperature, and press the time button then use the dial to set the time.
- 3 Select the second zone and use the dial to select the desired cooking function. Press the temp button then use the dial to set the temperature, and press the time button then use the dial to set the time.
- 4 Smart Finish, then press the dial button to begin cooking in the zone with the longest time. The other zone will display Hold. The unit will beep and activate the second zone when both zones have the same time remaining.

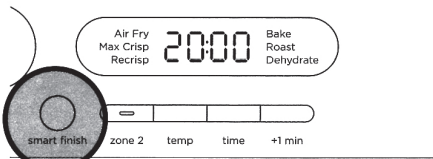

- 5 When cooking is complete, the unit will beep and “End” will appear on the display.
- 6 Remove ingredients by tipping them out or using silicone-tipped tongs.

CLEANING & MAINTENANCE

CLEANING YOUR NINJA CRISPI® DUALZONE™

ALWAYS let the appliance cool completely before cleaning.

Part/Accessory	Cleaning Method	Dishwasher Safe?
Main Unit	To clean the main unit and the control panel, wipe them clean with a damp cloth. NOTE: NEVER immerse the main unit in water or any other liquid. NEVER clean the main unit in a dishwasher.	No
Ninja® Glass Containers	The containers can be washed in the dishwasher or by hand with hot soapy water. If hand-washing, do not use abrasive cleaning tools and thoroughly air dry or towel-dry all parts after use. Be sure to allow glass to cool gradually to room temperature before placing it in water, sink, or dishwasher.	Yes
Crisper Plates	The crisper plates can be washed in the dishwasher or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	Yes
Lids	The lids can be washed in the dishwasher (top rack only) or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	Yes

HELPFUL TIPS

- Heat-protectant base on Ninja® glass containers allows you to safely place them on any countertop surface with no heat damage.
- Easy-grip handles on Ninja glass containers allow you to safely handle containers after cooking.
- For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the glass container with no overlapping. If ingredients are overlapping, make sure to shake them halfway through the set cook time.
- Temperature and time can be adjusted at any time during cooking. Press the temp or time button and use the dial to adjust, or press +1 min to add a minute to the current cook time.
- Check food frequently to avoid overcooking.
- Unit will pause automatically if the Ninja glass container is removed. To resume cooking, insert the Ninja glass container; unit will automatically resume cooking.
- The crisper plate elevates ingredients in the basket so air can circulate under and around them for consistent, crisp results.
- For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
- For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor internal temperature of proteins. After the cook time is complete, remove food immediately to avoid overcooking.

TECHNICAL SPECIFICATIONS

Voltage: 120V- 60Hz

Watts: 1785W

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

MATCH COOK, NINJA, NINJA CRISPI, and SMART FINISH are registered trademarks of SharkNinja Operating LLC.

CLEANCRISP is a registered trademark of SharkNinja Operating LLC.

© 2026 SharkNinja Operating LLC

TROUBLESHOOTING GUIDE

- Does the unit need to preheat?**
No, the unit does not need to be preheated.
- How do I pause the countdown?**
Pressing the dial button or removing the container from the base during cooking will pause the cooking function.
- Are the glass containers safe to put on my countertop?**
Yes, the heat-protectant base on the Ninja® glass containers allows them to be placed on any countertop during or after cooking.
- How do I know when to use the crisper plate?**
Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under it to cook ingredients evenly.
- My food didn't cook.**
Make sure the Ninja glass container is properly installed during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Use easy-grip handles on glass containers to shake to toss loose ingredients for consistent crispiness. Cook time and temperature can be adjusted at any time during cooking. Simply press the time or temp button and use the dial to adjust.
- My food is burned.**
For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- Why do some ingredients blow around when air frying?**
Occasionally, the fan from the air fryer will blow lightweight foods around. Use toothpicks to secure loose lightweight food, like the top slice on a sandwich.
- Can I air fry fresh battered ingredients?**
Yes, but use the proper breading technique. It is important to coat foods first with flour, then with egg, and then with breadcrumbs. Be sure to press the breadcrumbs onto the food so they stick in place. Loose breading may be blown off by the units powerful fan.
- Why is the unit beeping?**
The unit beeps when the cooking function starts and again when the cooking function is complete.
- The screen went black.**
The unit is in standby mode. Press the START/POWER button to turn it back on.
- An “E” message appears on display screen.**
The unit is not functioning properly. Please contact a service center.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

The images shown in this manual are for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO

OBPN: DD100Series_IB-NonRemoveableHandles_MP_Mv23_260331 / Elbrd: J.M.

SC: 10-20-2026 / SHNMDL: DD101BL1_EGB

8 1 4 1 0 0 8 4 2

