

IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NUTRI NINJA® WITH AUTO-iQ™.

POLARIZED PLUG

⚠ WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

⚠ WARNING: Extension cords are not recommended for use with this product.

⚠ WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- ⚠ WARNING:** Remove utensils prior to processing. Failure to remove may cause the jar to be damaged or to shatter which may cause personal injury.
- ⚠ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure build-up, resulting in risk of the user being burned.
- ⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® Cups.
- ⚠ CAUTION:** Remove the Pro Extractor Blades Assembly™ from the Nutri Ninja cup upon completion of blending. Do not store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Sip & Seal Lid to cover.
- To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children. This is not a toy.
- Never leave an appliance unattended when in use.
- Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

- Remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts.
- DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- Always use appliance on a dry, level surface.
- Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- Avoid contact with moving parts.
- DO NOT** attempt to sharpen blades.
- DO NOT** use the appliance if blade assembly is bent or damaged.
- To reduce risk of injury, never place the blade assembly on base without the Nutri Ninja® Cup properly attached.
- DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- DO NOT** remove the cup from the motor base while the appliance is in operation.
- To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- DO NOT** expose cups to extreme temperature changes.
- DO NOT** overfill.
- DO NOT** operate the appliance empty.
- If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
- THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.

SAVE THESE INSTRUCTIONS

804107994

NUTRI NINJA

OWNER'S GUIDE


"Recipe book is not included"

IMPORTANT: Read this owner's manual before using this product for the first time.

CAUTION:



BE CAREFUL Contains loose, SHARP blades

Getting To Know Your Nutri Ninja® with AUTO-iQ™

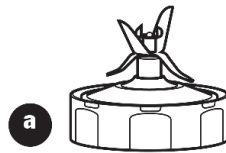


a Pro Extractor Blades® Assembly

b Sip & Seal® Lid

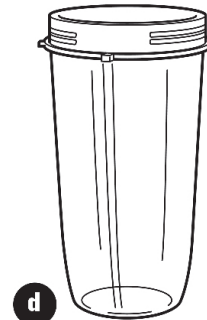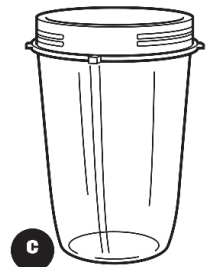

c Small 18 oz. Nutri Ninja® Cup

d Regular 24 oz. Nutri Ninja® Cup

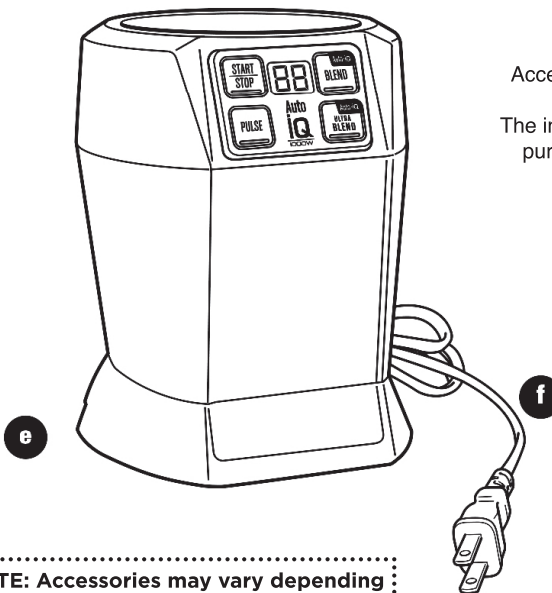

Accessory type and quantity may vary depending on the model. The image shown here is for illustrative purposes only and may be subject to change.


e Motor Base

f Power Cord

NOTE: Accessories may vary depending on the model.

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.

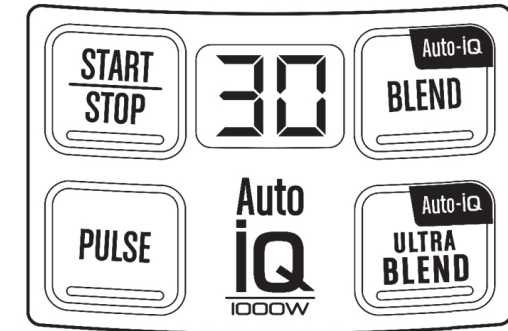

FEATURES:

- **Nutrient & Vitamin Extraction***

- **1000 Watt Motor**

- **User Interface:**

START | STOP

Press once to start continuous running, press again to stop. Timer counts up by seconds, up to 60 seconds.

PULSE

Runs only while pressed down. Short presses make short pulses. Timer counts up by seconds as long as pressed down.

AUTO-iQ™ BLEND

Pulses and blends fresh or softer ingredients to create smooth consistent results. Timer counts down.

AUTO-iQ™ ULTRA BLEND

Pulses and blends frozen, fibrous or hard ingredients to create smooth consistent results. Timer counts down.

- **Personalized, healthy drinks and juices**

- **Sip & Seal® lids for drinks on the go**

- **Nutri Ninja® Cups, BPA free**

- **Cord storage**

* Extract a drink containing vitamins & nutrients from fruits and vegetables.

Before First Use

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

⚠ IMPORTANT: Attachments are interchangeable.

⚠ CAUTION: Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the base of the blade assembly.

⚠ IMPORTANT: Never run the appliance empty.

⚠ CAUTION: DO NOT PROCESS HOT FOODS OR HOT LIQUIDS.

⚠ CAUTION: Never attempt to remove the cup while the appliance is still running.

⚠ WARNING: Never leave the appliance unattended while in use.

⚠ CAUTION: Do not immerse the motor base into water or any other liquid.

1 Remove all packaging material and labels from the appliance. Separate/remove all parts from each other.

2 Wash the lids, cups and Pro Extractor Blades® Assembly in warm, soapy water. When washing the Pro Extractor Blades Assembly, use a dish-washing utensil with a handle to avoid direct hand contact with blades.

⚠ WARNING: Handle the Pro Extractor Blade Assembly with care when washing, as the blades are sharp.

3 Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.

4 The containers, lids, blade assembly and attachments are all dishwasher safe. The lids and blade assembly are top rack dishwasher safe. Ensure that the blade assembly is removed from the containers before placing in the dishwasher..

5 Wipe the motor base clean with a damp cloth.


Use

- ▲ **WARNING:** Handle the Pro Extractor Blades™ Assembly with care, as the blades are sharp.
- ▲ **WARNING:** Never leave the appliance unattended while in use.
- ▲ **WARNING:** Remove utensils prior to processing. Failure to remove may cause the bowl to be damaged or to shatter, which may cause personal injury.
- ▲ **CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- ▲ **CAUTION:** Remove the Pro Extractor Blades Assembly from the cup upon completion of blending. Do not store ingredients before or after blending in the Nutri Ninja cup with the blade assembly attached. Some foods may contain active ingredients or release gases which will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only spout lid to cover.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

ASSEMBLY

USE

REMOVAL

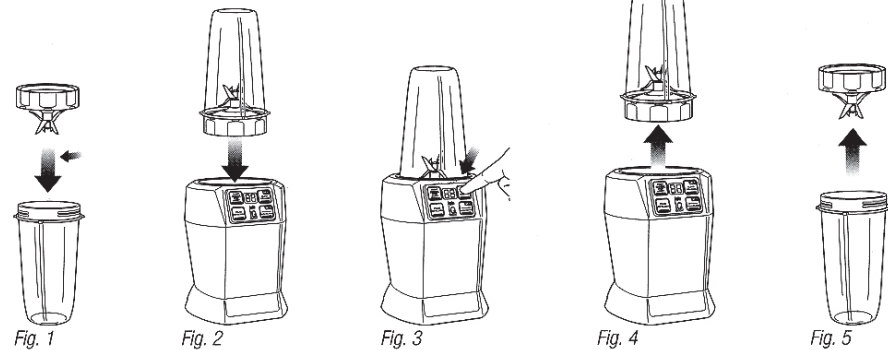

- 1 Review warning and caution statements above before proceeding to number 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 3 Make sure that the motor base is plugged in for use. Display will read "--".
- 4 Add ingredients to the Nutri Ninja™ cup.
 - NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the "MAX" fill line.
- 5 Place the Pro Extractor Blades Assembly onto the cup and twist it on tightly until you have a good seal. (Fig. 1)
- 6 Turn the cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Once cup is correctly placed onto base, display will read "0". (Fig. 2)
- 7 Press one of the buttons to activate. (Fig. 3)
 - NOTE:** When using the AUTO-iQ™ presets, the unit will operate using pulses, pauses and continuous runs. The pauses allow the contents of the cup to settle. When the timer reaches "0", it will stop by itself.
- 8 To remove the cup, ensure that the motor has stopped running. Pull straight up to remove. (Fig. 4)
- 9 Turn the cup upright and remove the Pro Extractor Blades Assembly by twisting the Pro Extractor Blades Assembly counter clockwise. (Fig. 5)
- 10 Do not store blended contents with the Pro Extractor Blades Assembly attached.
- 11 Twist the spout lid onto the cup to enjoy your drink on the go. Press flip top cap firmly into the opening to get the best seal. The flip top cap locks open when pressed backward.
- 12 For storage, only use spout lid to cover.
- 13 Be sure to store the Pro Extractor Blades Assembly attached to an empty cup when not in use.
- 14 Make sure that the motor base is unplugged when not in use.
- 15 To remove the motor base unit, tip the unit forward from the rear to easily disengage the suction cups.

Suggested Uses

PURPOSE / FUNCTION	SUGGESTED CUP	TYPE OF FOOD
Chopping / Pulsing	18 oz 24 oz	Salsa / Leafy Herbs
Mixing	24 oz	Batters / Dips
Sauces	24 oz	Vinaigrettes / Salad Dressings / Simple Sauces*
Frozen Blending	18 oz 24 oz	Ice Frozen Fruit Ice Cream
Nutrient Juices/Smoothies	18 oz 24 oz	Fruits Vegetables Leafy Greens


▲ **CAUTION:** DO NOT process dry ingredients without adding liquid to the cup. This product is not intended for dry blending.

*When blending sauces, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

FILLING YOUR NUTRI NINJA™

For best results, always follow recipe directions when filling your Nutri Ninja cups. When you're not using a recipe, use the following guidelines:

Start with your fresh fruit or veggies. Then add any nuts, seeds or powder followed by any liquids like juice or milk. More liquid can help to integrate powder. Then add your frozen fruit and ice. Remember to securely tighten the blade and don't overfill the cups. (Fig. 7)

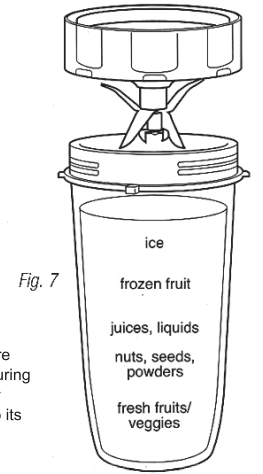

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so, you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Care & Maintenance

HOW TO CLEAN

- ▲ **CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.
- ▲ **CAUTION:** DO NOT immerse the motor base into water or any other liquid.

- 1 Separate/remove all parts from each other.
- 2 **Hand Washing:** Wash the lids, Nutri Ninja® cups and Pro Extractor Blades® Assembly in warm, soapy water. When washing the Pro Extractor Blades Assembly, use a dish-washing utensil with a handle to avoid direct hand contact with blades. Handle Pro Extractor Blades Assembly with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
 - Dishwasher:** The Nutri Ninja cups, lids, and Pro Extractor Blades Assembly are all dishwasher safe. The lids and Pro Extractor Blades Assembly are top rack dishwasher safe. Ensure the Pro Extractor Blades Assembly is removed from the cup before placing in the dishwasher.
- ▲ **WARNING:** Handle the Pro Extractor Blades Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.
- 3 Wipe the motor base clean with a damp cloth

HOW TO STORE

- 1 Store the Nutri Ninja® with AUTO-iQ™ upright with the blade assembly inside the corresponding container with the lid secured on top. Do not place anything on top. Store the rest of the attachments in a safe place where they will not be damaged and won't cause harm. Loosely wrap the power cord around the motor base.

RESETTING THE MOTOR THERMOSTAT

The Nutri Ninja with AUTO-iQ features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the cup and ensure that no food is jamming the Pro Extractor Blades Assembly.
- 3 Allow the appliance to cool for approximately 30 minutes.
- 4 Re-install the cup onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before while making sure not to exceed the recommended maximum capacities.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Unit doesn't turn on	<ul style="list-style-type: none"> • Make sure the unit is plugged in • Insert and rotate cup clockwise in the base until it "clicks". Display should turn on.
Unit doesn't turn off	<ul style="list-style-type: none"> • Remove cup from base by rotating cup counter clockwise and lifting out. Display should turn off. Unplug the power cord from the outlet.
Lid/Pro Extractor Blades Assembly hard to assemble	<ul style="list-style-type: none"> • Set the cup on a level surface. Place the lid or Pro Extractor Blades Assembly on the top of the cup and align the threads so that the lid/blades sit flat on the cup. Twist clockwise so that the lid/blades evenly align to the cup until you have a tight seal.
Food is not evenly chopped	<ul style="list-style-type: none"> • For best results when chopping, make sure all ingredients are as dry as possible. Cut pieces down to even sizes, and reduce the amount of food in the cup. Use very short pulses by quickly pressing the "PULSE" button.
Doesn't mix well, food gets stuck.	<ul style="list-style-type: none"> • Using the AUTO-iQ™ programs is the easiest way to achieve great results. The pulses and pauses allow the food to settle towards the blade. If food is routinely getting stuck adding some liquid will usually help. • When packing the cups, start with fresh items, then powders/nuts. Add liquids, and finally frozen items or ice.
Unit moves on counter while blending	<ul style="list-style-type: none"> • Make sure the surface as well as the feet of the unit are clean and dry.
Unit is difficult to remove from counter for storage	<ul style="list-style-type: none"> • Tip unit forward from the back to easily disengage the suction feet.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The *Refurbished Product Service Center* offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the *Refurbished Product Service Center* will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the *Refurbished Product Service Center* at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____

STATE: _____ ZIP CODE: _____

PHONE: _____

E-MAIL: _____

MODEL: _____

SERIAL NO.: _____

Copyright / Derechos reservados © SharkNinja Operating LLC 2016

Ninja, Nutri Ninja, Pro Extractor Blades and Sip & Seal are registered trademarks of SharkNinja Operating LLC. **Auto-iQ** is a trademark of SharkNinja Operating LLC.
Ninja, Nutri Ninja, Pro Extractor Blades y Sip & Seal son marcas registradas de SharkNinja Operating LLC. **Auto-iQ** es una marca comercial de SharkNinja Operating LLC.

Printed in Mexico
Sc:03.05.2020 Pgs.
TAB / 03.05.2020SRmrz
Obpn:BL480DOB_E_IB_170322
shnmdl: generic_106327_107691_elbrd:i.a.

804107994

