

NINJA®

OWNER'S GUIDE

"Recipe book is not included"

CAUTION:

BE CAREFUL Contains loose, SHARP blades

IMPORTANT: Read this owner's manual before using this product for the first time.

IMPORTANT SAFETY INSTRUCTIONS For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER WITH NUTRI NINJA® CUPS.

POLARIZED PLUG

▲ WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**


▲ WARNING: Extension cords are not recommended for use with this product.

▲ WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:


- ▲ WARNING:** Remove utensils prior to processing. Failure to remove may cause the jar to be damaged or to shatter which may cause personal injury.
- ▲ WARNING:** Stacked Blade Assembly is sharp, not locked in place and removable, handle with care. When handling the Stacked Blade Assembly, always hold it by the shaft. Failure to do so will result in a risk of laceration.
- ▲ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the pitcher. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.
- ▲ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure build-up, resulting in risk of the user being burned.
- ▲ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® cups.
- ▲ CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.
- To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children. This is not a toy.
- Never leave an appliance unattended when in use.
- Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

- Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts.
- DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- Always use appliance on a dry, level surface.
- Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- Avoid contact with moving parts.
- DO NOT** attempt to sharpen blades.
- DO NOT** use the appliance if blade assemblies are bent or damaged.
- To reduce risk of injury, never place the blade assemblies on the base without the pitcher or Nutri Ninja® cup properly attached.
- DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- DO NOT** remove the container from the motor base while the appliance is in operation.
- To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- DO NOT** expose containers to extreme temperature changes.
- DO NOT** overfill.
- DO NOT** operate the appliance empty.
- If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
- THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- The maximum rating is based on the Stacked Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

Getting To Know Your Ninja® Professional Blender with Nutri Ninja® Cups

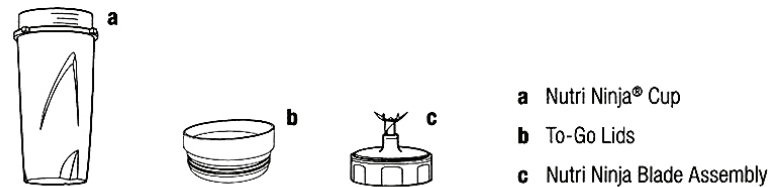

- a Nutri Ninja® Cup
- b To-Go Lids
- c Nutri Ninja Blade Assembly

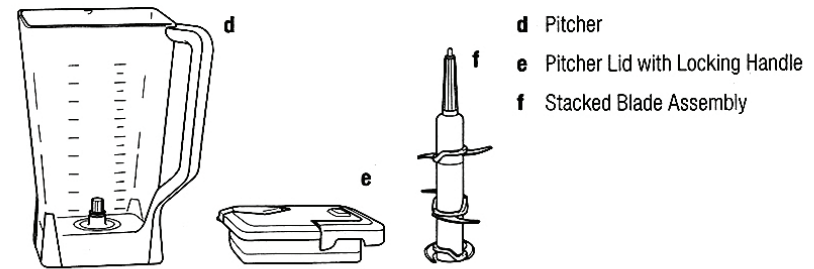

- d Pitcher
- e Pitcher Lid with Locking Handle
- f Stacked Blade Assembly



- g Motor Base
- h Power Cord (not shown)

NOTE: Accessories may vary depending on the model. The images shown here are for illustrative purposes only and may be subject to change.

The Ninja® Professional Blender with Nutri Ninja® Cups is a high powered innovative tool with a compact design and outstanding performance. It is perfect for ice crushing, chopping, blending, and Nutrient and Vitamin Extraction*.

FEATURES:

- Ninja® Blade Technology
- 72 oz. Pitcher (MAX Liquid Capacity: 64 oz.) - BPA Free
- Nutri Ninja® Cups - BPA Free
- Cord Storage
- Lock-On Lid, Featuring Pour Spout
- Easy-to-Clean Electronic Control Panel

* Extract a drink containing vitamins and nutrients from fruits and vegetables

Before First Use

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

IMPORTANT: Make sure that the motor base is plugged in for use.

IMPORTANT: Never add ingredients into the container before placing the attachment in first.


IMPORTANT: Attachments are not interchangeable.

IMPORTANT: DO NOT attempt to operate the appliance without the lid on.


IMPORTANT: Never run the appliance empty.

IMPORTANT: Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

▲ WARNING: Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. Failure to do so will result in a risk of laceration.

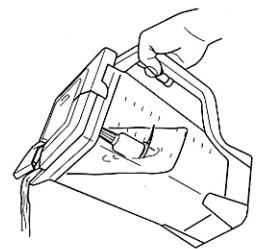

▲ WARNING: Stacked Blade Assembly is sharp and not locked in place. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.

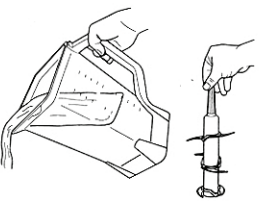

▲ CAUTION: Do not immerse the motor base into water or any other liquid.

- Remove all packaging material and labels from the appliance. Separate/remove all parts from each other.
- Wash the lids, pitcher, Nutri Ninja cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades.
- ▲ WARNING:** Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp.
- Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
- The pitcher, Nutri Ninja cups, lids, **Stacked Blade Assembly** and **Nutri Ninja Blade Assembly** are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.
- Wipe the motor base clean with a damp cloth.

NOTE: The images shown here are for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Assembly & Use of the Pitcher

- ▲ WARNING:** Handle the Stacked Blade Assembly with care, as the blades are sharp.
- ▲ WARNING:** Remove utensils prior to processing. Failure to remove may cause the pitcher to be damaged or to shatter, which may cause personal injury.
- ▲ WARNING:** Never leave the appliance unattended while in use.
- ▲ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

SAVE THESE INSTRUCTIONS

THIS BOOK COVERS MODEL NUMBER:
BL660

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.
Power: 1100 Watts
Pitcher Capacity: 72 oz (2.15 L, 9 cups)
MAX Liquid Capacity: 64 oz. (1.9 L, 8 cups)
Nutri Ninja® Cup Capacity: 16 oz (470 ml, 2 cups)

ASSEMBLY

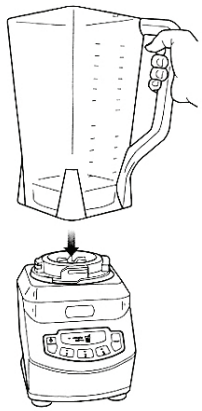


Fig. 1



Fig. 2

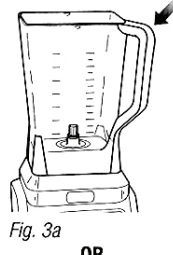


Fig. 3a

OR



Fig. 3b

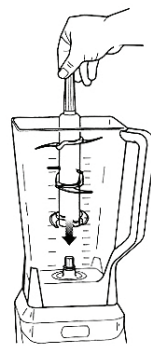


Fig. 4



Fig. 5

💡 It's best to add the liquid ingredients first and then the dry ingredients.

- Review warning and caution statements above before proceeding to number 2.
 - Place the motor base on a clean, dry, level surface such as a counter or table top.
 - Align and lower the pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
 - Rotate the blender pitcher clockwise until it clicks in place. As the pitcher rotates, it will lower and the safety tabs on the bottom of the pitcher will slide under the safety tabs on the top of the motor base. (Fig. 2)
 - The pitcher can be placed on the motor base two ways: the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
 - Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright. (Fig. 4)
- NOTE:** The Stacked Blade Assembly will fit loosely on the drive gear.
- Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.
- NOTE:** If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.
- NOTE:** When blending any kind of liquids, such as mixtures of any drinks or smoothies, do not exceed the "Max liquid" mark (64 oz.) on the pitcher.
- Plug the power cord into the electrical outlet and press the power button (⏻).

IMPORTANT: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.
- Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (▼) located on the lid with the arrow (▲) located on the pitcher's handle. (Fig. 5)

USE

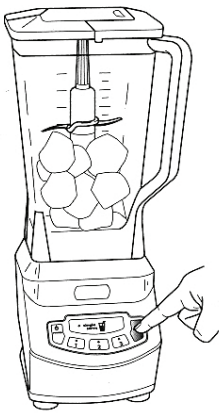


Fig. 6

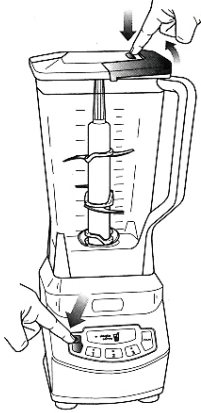


Fig. 7

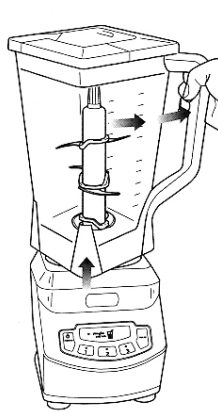


Fig. 8

NOTE: The images shown here are for illustrative purposes only and may be subject to change.

- Select the speed that best suits your needs. (Fig. 6)
- NOTE:** Pulse ingredients for even chopping by pressing down in short intervals.
- When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Stacked Blade Assembly to stop turning. (Fig. 7)
 - To remove the lid, pull the lid handle up to a 90° angle. Turn the blender pitcher counter-clockwise to lift off the base. (Fig. 7, Fig. 8)

WARNING: Never insert your hands in the pitcher as the Stacked Blade Assembly is sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

Assembly & Use of the Nutri Ninja® Cup

- WARNING:** Handle the Nutri Ninja Blade Assembly with care, as the blades are sharp.
- WARNING:** Remove utensils prior to processing. Failure to remove may cause the Nutri Ninja cup to be damaged or to shatter, which may cause personal injury.
- WARNING:** Never leave the appliance unattended while in use.
- CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.

ASSEMBLY




Fig. 1




Fig. 2



Fig. 3




Fig. 4



Fig. 5

💡 For best results, use short "PULSES"... Practice makes perfect!!

REMOVAL

- Open the pour spout cap and use the spout to empty liquid contents.
- For thicker consistencies, first remove the lid by pressing the release button and pulling the lid handle up to a 90 degree angle to lift lid off the pitcher. Then, carefully remove the Stacked Blade Assembly by the top of the shaft. Place Stacked Blade Assembly away from the work area to avoid accidental contact. Finally, empty contents from the pitcher.
- Make sure that the unit is unplugged when not in use.

- Review warning and caution statements above before proceeding to number 2.
- Place the motor base on a clean, dry, level surface such as a counter or table top.
- Add ingredients to the Nutri Ninja cup.
- Place the Nutri Ninja Blade Assembly onto the cup and screw it tightly until you have a good seal. (Fig. 1)
- Turn the Nutri Ninja cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the Nutri Ninja cup clockwise to lock into place. You will hear a click when the lock is engaged. (Fig. 2)
- Press down on the Single Serve button in short intervals to activate. (Fig. 3)


Care & Maintenance

HOW TO CLEAN

- CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.
 - CAUTION:** DO NOT immerse the motor base into water or any other liquid.
- Separate/remove all parts from each other.
 - Hand Washing: Wash the lids, pitcher, Nutri Ninja® cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
- WARNING:** Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.
- Dishwasher: The pitcher, Nutri Ninja cups, lids, Stacked Blade Assembly and Nutri Ninja Blade Assembly are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.
 - Wipe the motor base clean with a damp cloth.

HOW TO STORE

- Store the Ninja® Professional Blender upright with the pitcher on the motor base, Stacked Blade Assembly inside the pitcher and lid locked on the pitcher. Do not place anything on top. Store the Nutri Ninja Blade Assembly attached to the Nutri Ninja cup and the rest of the attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard. Insert the power cord into the cord storage area located in the back of the motor base.

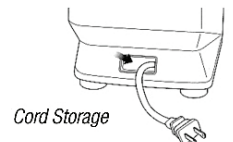

RESETTING THE MOTOR THERMOSTAT

The Ninja Professional Blender features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop. Allow the appliance to cool for approximately 15 minutes. To reset the appliance, follow the resetting procedure below:

- Unplug the appliance from the electrical outlet.
- Remove and empty the container and ensure that no food is jamming the blade assemblies.
- Allow the appliance to cool for approximately 15 minutes.
- Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

Speed Chart

BUTTON	FUNCTION	USE
POWER ⏻	On/Off	Always turn appliance 'Off' when not in use.
1	Processing & Mixing	Use to mix thin batters, gravies and marinades, scramble eggs, puree cooked foods and uncooked fruits and chop vegetables for dips and salsa.
2	Blending	Use to grate hard cheeses, cream soups*, beat dips, grind nuts, thorough chopping, blend sauces* and spreads. Blend mixed drinks, powdered drinks or milk shakes.
3	Pureeing, Liquefying & Ice Crushing	Use to mix smoothies, frappes, liquefy thick mixtures and blend whole fruits and vegetables. Crush ice cubes for snow cones, chilled beverages or frozen slushes
PULSE	Controlled Processing & Bursts of Power	Use to control chopping and processing.

IMPORTANT: Do not run the appliance over 4 minutes at a time to prevent overheating of the appliance.

* When blending sauces and soups, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Control Panel Lights Are Blinking, Motor Doesn't Start or Blade Assembly Doesn't Rotate.	Make sure the pitcher is securely placed on motor base. Make sure the lid is securely on pitcher in the correct position (align arrows). The blender is turned 'Off'. Press the power button (⏻) to turn 'On'. Check that the plug is securely inserted into the electrical outlet. Check the fuse or circuit breaker. The unit has overheated. Unplug and wait approximately 15 minutes before using again.
Food is Unevenly Chopped.	Either you are chopping too much food at one time, you are chopping food with different textures or the pieces are not of even size. Process smaller amounts per batch.
Food is Chopped Too Fine or is Too Watery.	The food has been over processed. Use pulse button for controlled processing.
Food Collects on the Lid or on the Sides of the Pitcher.	The mixture is too thick. Add more liquid.
You Cannot Achieve Snow From Solid Ice.	Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The Refurbished Product Service Center offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished. This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the Refurbished Product Service Center will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Attn: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____ ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

804107753



Printed in Mexico
Sc:08.03.2017 / 11.23.2018
re-design from 6 to Pgs.TAB
Obpn: BL660_30_IB_151102_3
Shnmld: BL660_B