

## REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

**Refurbished Product Service Center**  
13225 Marquardt Avenue Santa Fe Springs, CA 90670.  
**WARRANTY REPAIR INFORMATION**

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to [www.ConsumerServiceRefurbish.com](http://www.ConsumerServiceRefurbish.com) or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

**Refurbished Product Service Center,**  
**Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670**

Your unit will be promptly repaired and returned to you.  
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

### Owner's Information

(Keep for your permanent records)

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP CODE: \_\_\_\_\_

PHONE: \_\_\_\_\_ E-MAIL: \_\_\_\_\_

MODEL: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

SharkNinja Operating LLC  
US: Newton, MA 02459  
CAN: Ville St-Laurent, QC H4S 1A7

Mega Kitchen System, Ninja Nutri Ninja and  
SharkNinja are registered trademarks of sharkNinja  
Operating LLC.

Illustrations may differ from actual product.

Printed in Mexico  
SC: 08.10.2017 Pags. 8  
OBPN: BL773CO\_IB\_E\_150730\_3  
SohnenModel: BL773CO\_30\_BP

804106334



# NINJA®

## Mega Kitchen System®

BL773CO

## OWNER'S GUIDE



### CAUTION:

BE CAREFUL Contains loose, SHARP blades

IMPORTANT: Read this owner's manual before using this product for the first time.

# IMPORTANT SAFETY INSTRUCTIONS

## For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® MEGA KITCHEN SYSTEM®.

### POLARIZED PLUG

**WARNING:** To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

**⚠ CAUTION: Blade assemblies are sharp, handle with care. When handling the blade assemblies, always hold by the shaft.**

**⚠ WARNING:**  
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. **⚠ CAUTION: Blade assemblies are sharp, handle with care. When handling the blade assemblies, always hold by the shaft.**
2. **⚠ CAUTION: Do not blend hot liquids.**
3. **⚠ CAUTION: We do not recommend grinding in any of our Nutri Ninja® Cups.**
4. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
5. **DO NOT** allow children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
6. Never leave an appliance unattended when in use.
7. Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
8. **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
9. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts.
10. **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.

## NOTES:

## Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
<b>Motor doesn't start or blade assembly doesn't rotate.</b>	<p>Make sure the container is securely placed on motor base.</p> <p>Make sure the lid is securely on container in the correct position (align arrows).</p> <p>The appliance is turned "Off". Press the power button (⏻) to turn "On".</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overloaded or overheated. Unplug and wait approximately 15 minutes before using again.</p>
<b>Food is unevenly chopped.</b>	<p>Either you are chopping too much food at one time, or the pieces are not of an even size. Try processing smaller amounts per batch.</p>
<b>Food is chopped too fine or is too watery.</b>	<p>The food has been over processed. Use pulse button for controlled processing.</p>
<b>Food collects on lid or on the sides of the container.</b>	<p>The mixture is too thick. Add more liquid.</p>
<b>You cannot achieve snow from solid ice.</b>	<p>Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.</p>
<b>Motor base won't stick to counter or table top.</b>	<p>Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces. Suction feet WILL NOT stick on some surfaces such as, wood, tile and non-polished finishes.</p> <p>DO NOT attempt to use appliance when the motor base is stuck to a surface that is not secure, (cutting board, platter, plates, etc.).</p>
<b>Leaking is occurring when using the Nutri Ninja® cup.</b>	<p>Ensure the blade is properly twisted into the cup and sealed tightly into place. Check to see that the lid gasket is properly in place.</p> <p>Do not overfill the cup. Never add ingredients past the "Max" fill line.</p>
<b>Ingredients are stuck and not fully blending.</b>	<p>You may have overloaded the Nutri Ninja® cup. Try pulsing 3-5 times and then resume blending. You may also add liquid to make blending easier.</p>
<b>The Nutri Ninja® button does not work.</b>	<p>The Nutri Ninja® button will only operate when you have the Nutri Ninja® cup assembled to the motor base. This function was designed specifically for the Nutri Ninja Cups to operate at the ideal speed.</p>

11. Always use appliance on a dry, level surface.
12. Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
13. Avoid contact with moving parts.
14. **DO NOT attempt to sharpen blades.**
15. **DO NOT** use the appliance if blade assembly is bent or damaged.
16. To reduce risk of injury, never place the blade assembly on base without pitcher or bowl properly attached.
17. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
18. The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
19. **DO NOT** remove the container from the motor base while the appliance is in operation.
20. To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the blade assembly is properly installed before operating the appliance.
21. **DO NOT** expose containers to extreme temperature changes.
22. **DO NOT** overfill. Never fill past the "Max" line.
23. Never feed food by hand when using the food processor. Always use the food pusher.
24. **DO NOT** operate the appliance empty.
25. To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
26. In the event that the unit overheats the unit will shut down. Unplug the unit and wait 15 minutes to reset.
27. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
28. The maximum rating is based on the Stacked Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.
29. Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

**⚠ WARNING:** Extension cords are not recommended for use with this product.

# SAVE THESE INSTRUCTIONS

### TECHNICAL SPECIFICATIONS

Voltage:	120V., 60Hz.
Power:	1500 Watts
Pitcher Capacity:	72 oz. (9 cups, 2.1 L)
Bowl Capacity:	64 oz. (8 cups, 1.8 L)
Nutri Ninja® Capacity:	16 oz. (2 cups, 470 mL)

## Contents

### Thank you for purchasing the Ninja® Mega Kitchen System®.

Getting to Know Your Ninja® Mega Kitchen System® .....	3
Using the Ninja® Mega Kitchen System® .....	4
Assembly and Use for the 72 oz. Pitcher.....	5
Assembly and Use for the Nutri Ninja® Cup.....	7
Assembly and Use for the 64 oz. Bowl.....	8
Assembly and Use for the Cutting Discs .....	10
Speed Setting & Uses.....	11
Care & Maintenance .....	12
Troubleshooting Guide.....	13

## Getting To Know Your Ninja® Mega Kitchen System®



Nutri Ninja®



To-Go Lid



Nutri Ninja®  
Blade Assembly



Food Processor Bowl



Dough Blade  
Assembly



Chopping Blade  
Assembly



Spindle  
for Discs




Feed Chute Lid with  
Two Part Pusher



Grating  
Disc



Reversible Slicing/  
Shredding Disc

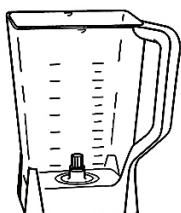

72 oz. Pitcher



Pitcher Lid



Stacked Blade  
Assembly (Pitcher)



Motor Base

**NOTE:** All jars, lids, discs and blade assemblies are dishwasher safe. Place the lids and blade assemblies on the top rack only. All jars, lids and plastic components of blade and disc assemblies are BPA free.

**CAUTION:** Blade assemblies are sharp, handle with care. When handling the blade assemblies, always hold by the shaft.

• Accessory type and quantity may vary depending on the model.

## Care & Maintenance

### HOW TO CLEAN

**CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any blade assembly and before cleaning.

**CAUTION:** DO NOT immerse the motor base into water or any other liquid.

**CAUTION:** Handle the blade assemblies with care, as the blades are very sharp.

**NOTE:** All jars, lids, discs and blade assemblies are dishwasher safe. Place the lids and blade assemblies on the top rack only. All jars, lids and plastic components of blade and disc assemblies are BPA free.

- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.
- 3 Place the pitcher, Nutri Ninja® cup and bowl in the dishwasher. Place the lids and blade assemblies on the top rack.

### OR

- 4 Carefully hand wash the lids, pitcher, Nutri Ninja® cups and blade assemblies in warm, soapy water with a soft cloth.

### HOW TO STORE

- 1 Store the Ninja® Mega Kitchen System® upright with the pitcher on the motor base, **Stacked Blade Assembly inside the pitcher and the lid locked on the pitcher.** Do not place anything on top. Store the bowl with the Chopping Blade Assembly inside and the lid locked onto the bowl. Store the Nutri Ninja® cup with the Nutri Ninja® Blade Assembly attached to the cup and all other attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard.

### RESETTING THE MOTOR THERMOSTAT

The Ninja® Mega Kitchen System® features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the container and ensure that no food is jamming the blade assembly.
- 3 Allow the appliance to cool for approximately 15 minutes.
- 4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

## Speed Setting & Uses

**TIP:** Be sure to add seeds or protein powder after you've added your liquids and before adding your ice for optimal breakdown.

FUNCTION	CONTAINER	BLADE ASSEMBLY	SPEED BUTTON	TYPE OF FOOD
Small Batch Blending	Nutri Ninja® Cup	Nutri Ninja® Blade Assembly	Nutri Ninja® - Hold Down	Ultra Smooth Nutrient Extractions* Smoothies/Protein Shakes Smooth Purees Sauces** Soups**
Small Batch Chopping	Nutri Ninja® Cup	Nutri Ninja® Blade Assembly	Nutri Ninja® - Pulse Short Intervals	Chopped Nuts
Dough Making	Bowl	Dough Blade Assembly	1	Bread Dough Pie Dough Pizza Dough Pretzel Dough Cookie Dough Pasta Dough
Batters	Bowl	Chopping Blade Assembly	2 PULSE	Cakes Muffins Pancake Batter Cheesecake Brownies
Dressings and Sauces	Bowl	Chopping Blade Assembly	2	Vinaigrettes Alois Marinades Sauces**
Purees and Dips	Bowl	Chopping Blade Assembly	3	Pesto Hummus Vegetable Purees Fruit Purees Cream Cheese Dips
Grating	Bowl	Grating Disc	1	Grated cheese Bread crumbs
Large Batch Chopping/ Grinding	Bowl	Chopping Blade Assembly	PULSE	Salsa Vegetables Nuts Chopped Salads Burgers Meatballs Taco Meat
Slicing/Shredding	Bowl	Slicing/Shredding Disc	1	Vegetables Cheese
Eggs	Pitcher	Stacked Blade Assembly	1	Omelets Scrambled Eggs Stratas Frittatas
Nut Butters	Pitcher	Stacked Blade Assembly	2	Almond Butter Peanut Butter
Soups and Sauces**	Pitcher	Stacked Blade Assembly	2	Tomato Soup** Tomato Sauce** Root Vegetable Soup**
Large Batch Drink Making	Pitcher	Stacked Blade Assembly	3	Smoothies/Protein Shakes Frozen Cocktails Milkshakes Frappes

\* Extract a Drink Containing Vitamins & Nutrients From Fruits & Veggies


\*\* When blending soups or sauces, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

## Using the Ninja® Mega Kitchen System®


### PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **CAUTION:** Blade Assemblies are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the shaft.
  - ⚠ **CAUTION:** Do not blend hot liquids.
  - ⚠ **CAUTION:** Never remove the container while the appliance is still running.
- IMPORTANT:** Never add ingredients into the container before placing the attachment in first.
- IMPORTANT:** Attachments are not interchangeable.
- IMPORTANT:** DO NOT attempt to operate the appliance without the lid on.
- IMPORTANT:** Never run the appliance empty.
- IMPORTANT:** Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

⚠ **CAUTION:** Blade assemblies are not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher.

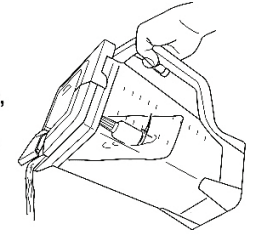

⚠ **CAUTION:** Blade assemblies are not locked in place. If pouring with the lid removed, ALWAYS remove the blade assembly first.

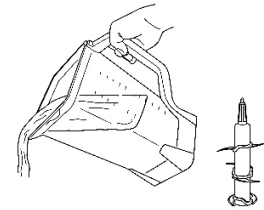

### BEFORE FIRST USE

- ⚠ **CAUTION:** Blade assemblies are sharp, not locked in place and removable, handle with care. When handling the blade assembly, always hold it by the shaft.
- 1 Remove all packaging material and labels from the appliance.
  - 2 Wash the lids, pitcher, bowl, Nutri Ninja® cups and blade assemblies in warm, soapy water with a soft cloth.
- ⚠ **CAUTION:** Handle the blade assemblies with care when washing, as the blades are very sharp.
- 3 Rinse and dry thoroughly.
  - 4 The pitcher, bowl, Nutri Ninja® cups, lids and blade assemblies are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure that the blade assemblies are removed from the containers before placing in the dishwasher.
  - 5 Wipe the motor base clean with a damp cloth.

## Assembly and Use for the 72 oz. Pitcher

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Handle the Stacked Blade Assembly with care, as the blades are very sharp.
  - ⚠ **CAUTION:** Do not blend hot liquids.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

### ASSEMBLY



Fig. 1



Fig. 2



Fig. 3a



Fig. 3b

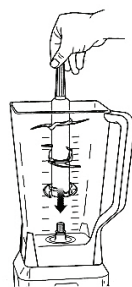


Fig. 4

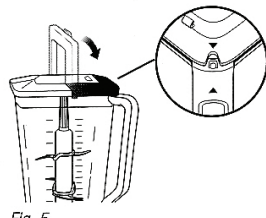


Fig. 5

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
  - 2 Align and lower the pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
  - 3 Rotate the pitcher clockwise as far as it will go to lock in place. (Fig. 2)
  - 4 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
  - 5 Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright. (Fig. 4)  
**NOTE:** The Stacked Blade Assembly will fit loosely on the drive gear.
  - 6 Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.
  - 7 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (▼) located on the lid with the arrow (▲) located on the pitcher's handle. (Fig. 5) Press the handle down until you hear a click.
  - 8 Plug the power cord into the electrical outlet and press the power button (⏻).
- NOTE:** As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.

## Assembly and Use for the Cutting Discs

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Handle the Cutting Discs with care, as the discs are very sharp.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

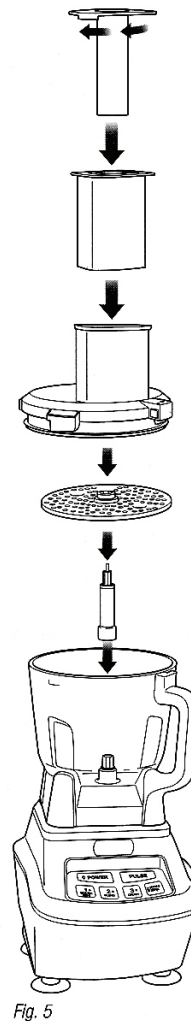


Fig. 5


**NOTE:** The feed chute lid features a two part pusher to guide food through the chute. Use the full pusher for larger items such as cucumbers. Twist and pull to remove the smaller pusher and use the narrow chute for smaller items such as carrots.

### USING THE DISCS

**IMPORTANT:** Only use Speed 1 DOUGH/DISC when using either disc attachment.

**NOTE:** The Slicing/Shredding Disc is reversible. Use the side labeled "Slicer" for Slicing. Carefully flip the disc over to the side labeled "Shredder" for shredding.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top. (Fig. 5)
- 2 Secure the bowl onto the motor base.
- 3 Place the spindle inside the bowl.
- 4 Use the finger holes to grasp the selected disc and place it over the spindle.
- 5 Place the feed chute lid on the bowl and turn clockwise until you here a click indicating the lid is locked in place. (Fig. 5)
- 6 Plug the power cord into the electrical outlet and press the power button (⏻) to turn the unit "On".
- 7 **Select Speed 1 DOUGH/DISC on the control panel.** The disc will begin spinning.
- 8 Add the food that you want to slice, shred or grate through the feed chute on the lid. (Fig. 5) Use the two-part food pusher to help guide the food through the feed chute. The middle piece of the food pusher is removable to use for smaller ingredients.
- 9 When finished, stop the appliance by pressing the power button (⏻) and wait for the disc to stop turning. Press the button on the feed chute lid located near the handle to unlock and turn the lid counterclockwise. Lift to remove from the processor bowl. Using the finger holes, carefully lift the disc out of the bowl and remove the spindle.
- 10 To release the motor base from the counter or table top, lift the base up from underneath the sides of the unit. Release paddles on both sides will help to disengage the suction feet from the surface.

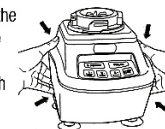

## Assembly and Use for the 64 oz. Bowl - cont.

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **WARNING:** Remove utensils prior to processing.
- ⚠ **CAUTION:** Handle the Chopping Blade Assembly with care, as the blades are very sharp.
- ⚠ **CAUTION:** Do not blend hot liquids.
- IMPORTANT:** Make sure that the motor base is plugged in for use.




Fig. 1

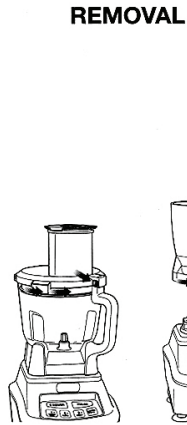


Fig. 2



Fig. 3




Fig. 4

## USE

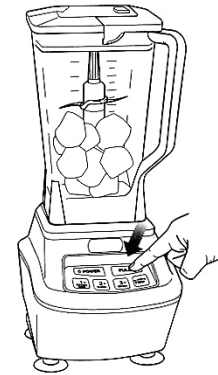


Fig. 6

## REMOVAL

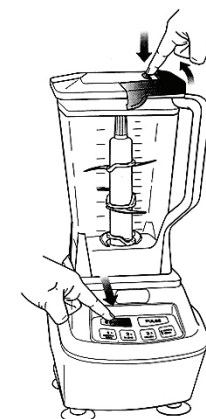


Fig. 7

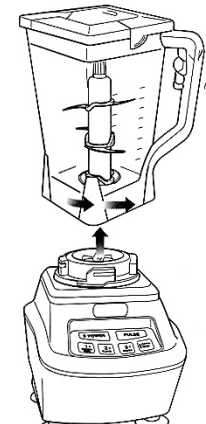


Fig. 8

**AVAILABLE SETTINGS:** Speeds 1-3 and Pulse.

### USING THE CHOPPING BLADE ASSEMBLY

- 1 Holding the chopping blade assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the blade assembly fits around the gear shaft and that it is standing straight.
- 2 Add the ingredients and secure the bowl lid onto the bowl. **(Fig. 1)**
- 3 Plug the power cord into the electrical outlet and press the power button (⏻).
- 4 Select the speed that best suits your needs. Pulse ingredients for even chopping by pressing down in short intervals.
- 5 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the blade assembly to stop turning.

**NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.

- 6 To remove the lid, press the release button and turn the lid counterclockwise and lift the lid off. Turn the bowl counterclockwise and then lift off the base. **(Fig. 2, Fig. 3)**

- 7 To release the motor base from the counter or table top, lift the base up from underneath the sides of the unit. Release paddles on both sides will help to disengage the suction feet from the surface.



- ⚠ **CAUTION:** Chopping Blade Assembly is not locked in place. If pouring from the bowl, **ALWAYS** remove the blade assembly first before pouring.

### USING THE DOUGH BLADE ASSEMBLY

**IMPORTANT:** Only use Speed 1 Dough/Disc when making dough.

- 1 Holding the Dough Blade Assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the blade assembly fits around the gear shaft and that it is standing straight. **(Fig. 4)**
- 2 Add the ingredients and secure the bowl lid onto the bowl.
- 3 Plug the power cord into the electrical outlet and press on the power button (⏻). Select **Speed 1 DOUGH/DISC** on the control panel and process until ingredients come together to form a mass.
- 4 Once finished making dough, stop the appliance by pressing the power button (⏻) and wait for the blade assembly to stop turning.
- 5 To remove the lid, press the release button and turn the lid counterclockwise. **(Fig. 2)**
- 6 Turn the bowl counterclockwise and lift it to remove it from the motor base. **(Fig. 3)**
- 7 To release the motor base from the counter or table top, lift the base up from underneath the sides of the unit. Release paddles on both sides will help to disengage the suction feet from the surface.



**NOTE:** The suction feet provide added stability.

- 9 Select the speed that best suits your needs. **(Fig. 6)**

**NOTE:** Pulse ingredients for even chopping by pressing down in short intervals.


- 10 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Stacked Blade Assembly to stop turning. **(Fig. 7)**

- 11 To remove the lid, press the release button on the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the pitcher counter clockwise and then lift off the base. **(Fig. 7, Fig. 8)**


- ⚠ **CAUTION:** Never insert your hands in the pitcher as the Stacked Blade Assembly is sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

- 12 Depending on the consistency of the contents in the container, open the pour spout cap and use the spout to empty liquid contents. For thicker consistencies, remove the lid and Stacked Blade Assembly carefully (by its shaft), then empty contents from the container.
- 13 Make sure that the unit is unplugged when not in use.


- 14 To release the motor base from the counter or table top, lift the base up from underneath the sides of the unit. Release paddles on both sides will help to disengage the suction feet from the surface.

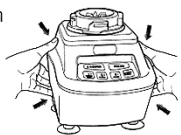

- ⚠ **CAUTION:** Stacked Blade Assembly is not locked in place. If using the pour spout, ensure that the lid is fully locked onto the blender pitcher.

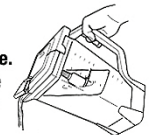

- ⚠ **CAUTION:** Stacked Blade Assembly is not locked in place. If pouring with the lid removed, **ALWAYS** remove the Stacked Blade Assembly first before pouring.

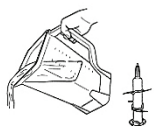

## Assembly and Use for the Nutri Ninja® Cup

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Handle the Nutri Ninja Blade Assembly with care, as the blades are very sharp.
  - ⚠ **CAUTION:** Do not blend hot liquids.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

### ASSEMBLY

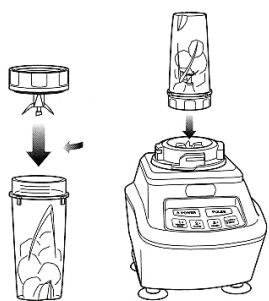


Fig. 1

### PULSE



Fig. 3

### REMOVAL



Fig. 4



Fig. 5

**AVAILABLE SETTINGS:** Nutri Ninja.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Add ingredients to the Nutri Ninja® cup.
- 3 Place the Nutri Ninja® Blade Assembly onto the cup and screw it tightly until you have a good seal. **(Fig. 1)**
- 4 Turn the Nutri Ninja® cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the Nutri Ninja® cup clockwise until you hear a click. **(Fig. 2)** Turn the power button on, the Nutri Ninja® button will illuminate.
- 5 Press down on the Nutri Ninja® button in short intervals to pulse or hold down to blend continuously. **(Fig. 3)**
- 6 Once you have reached your desired consistency, turn the power button off. Turn the Nutri Ninja® cup counterclockwise and pull straight up to remove. **(Fig. 4) (Fig. 5)**

**NOTE: Do not overfill! To avoid spilling, do not add ingredients past the "Max" fill line.**

- 7 Turn the cup upright and remove the Nutri Ninja® Blade Assembly by twisting it counterclockwise.
- 8 Place the To-Go lid onto the Nutri Ninja® cup, twist clockwise to seal and enjoy!
- 9 Make sure that the motor base is unplugged when not in use.
- 10 To release the motor base from the counter or table top, lift the base up from underneath the sides of the unit. Release paddles on both sides will help to disengage the suction feet from the surface.



## Assembly and Use for the 64 oz. Bowl

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Handle the Chopping Blade Assembly with care, as the blades are very sharp.
  - ⚠ **CAUTION:** Do not blend hot liquids.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

### ASSEMBLY

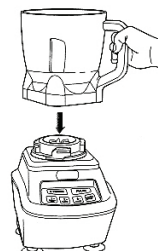


Fig. 1



Fig. 2



Fig. 3a



Fig. 3b

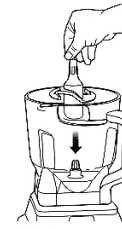


Fig. 4



Fig. 5

**AVAILABLE SETTINGS:** Speeds 1-3 and Pulse.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
  - 2 Align and lower the bowl onto the motor base. **(Fig. 1)** Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
  - 3 Rotate the bowl clockwise as far as it will go to lock in place. **(Fig. 2)**
  - 4 The bowl can be placed on the motor base two ways: the handle can be on the front right corner or the front left corner. **(Fig. 3a, Fig. 3b)**
  - 5 Holding the desired blade assembly by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the blade assembly is seated properly and is standing upright. **(Fig. 4)**
- NOTE:** The blade assembly will fit loosely on the drive gear.
- 6 Add the ingredients to the bowl, **making sure that they do not exceed the highest measured marking line on the side of the bowl.**

- 7 Holding the lid from the feed chute, place it on top of the bowl and turn clockwise aligning the arrow (▼) located on the lid with the arrow (▲) located on the bowl's handle. You will hear a click when the lid is locked in place. **(Fig. 5)**
- 8 Plug the power cord into the electrical outlet and press the power button (⏻).

**NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.**

**NOTE: The 64 oz. bowl is not intended for blending drinks. Do not overfill. To add liquids during processing, remove the food pusher from the feed chute to drizzle in liquids. Do not remove the lid while in use.**