

LED TV*

* LG LED TV applies LCD screen with LED backlights.

43QNED80TUA	55QNED85TUA	65QNED90TUA	75QNED99TUA	43UT7590PUA	50UT9000PUA	65UT8050AUA	75UT8000AUA
43QNED80TUC	65QNED80TUA	75QNED80TUC	86QNED80TUC	43UT8000AUA	55UT8000AUA	65UT9000PUA	75UT8050AUA
50QNED80TUC	65QNED80TUC	75QNED85TAA	86QNED85TUA	43UT9000PUA	55UT8050AUA	70UT8000AUA	75UT9000PUA
55QNED85TUA	65QNED85TAA	75QNED85TUA	86QNED90TAA	50UT8000AUA	55UT9000PUA	70UT8050AUA	86UT7590PUA
55QNED80TUC	65QNED85TUA	75QNED90TAA	86QNED90TUA	50UT8050AUA	65UT8000AUA	75UT7590PUA	86UT8000AUA
55QNED85TAA	65QNED90TAA	75QNED90TUA	86QNED99TUA				

814100243

Please read this manual carefully before operating your set and retain it for future reference.

Important Safety Instruction

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

By using this product, you agree that all disputes between you and LG arising out of or relating in any way to this product (including but not limited to warranty disputes) shall be resolved exclusively through binding arbitration on an individual basis. The terms of the arbitration agreement (including details on the procedure for resolving disputes) is available at www.lg.com/us/arbitration (USA) or www.lg.com/ca_en/arbitration (Canada).



Before reading this manual

- Read this manual thoroughly before operating your TV, and keep it for future reference.
- On the website you can download the manual including installation, using, troubleshooting, specifications, license etc and view its contents on your PC or mobile device.
- User Guide:** For more information about this TV, read the USER GUIDE embedded in the product. (Depending upon model)
 - To open the USER GUIDE (Ⓢ) → (Ⓢ) → [Support] → [User Guide]

Optional Extras

- Optional extras can be changed or modified for quality improvement without any notification. Contact a service center. These devices work only with certain models.
- The model name or design may be changed due to the manufacturer's circumstances or policies.
- Magic Remote Control:
 - Check whether your TV model supports Bluetooth in the Wireless Module Specification to verify whether it can be used with the Magic Remote.
- A cable to connect antennas and external devices must be purchased separately. (Not included)

Note

- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- The items supplied with your product may vary depending upon the model.
- Image shown may differ from your TV.

Warning! Safety instructions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

The symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this apparatus.

WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

Do not place the TV and/or remote control in the following environments:

- Keep the product away from direct sunlight.
- An area with high humidity such as a bathroom.
- Near any heat source such as stoves and other devices that produce heat.
- Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
- An area exposed to rain or wind.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
- Do not install in excessively dusty places.
- Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.
- Ventilation**
 - Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase.

OWNER'S MANUAL Safety and Reference

- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials while unit is plugged in.

Take care not to touch the ventilation openings. When watching the TV for a long period, the ventilation openings may become hot.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, dented in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

Do not move the TV whilst the Power cord is plugged in.

Do not use a damaged or loosely fitting power cord.

Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.

Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.

Disconnecting the Device from the Main Power

The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.

Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.

Outdoor Antenna Grounding (Can differ by country):

- If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur. Be sure the antenna system is grounded to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code (NEC) in the U.S.A. provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.

Make sure the power cord is connected securely to the TV and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.

Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact a service center.

Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

If any of the following occur, unplug the product immediately and contact a service center..

- The product has been damaged.
- If water or another substance enters the product (like an AC adapter, power cord, or TV).
- If you smell smoke or other odors coming from the TV
- When lightning storms or when unused for long periods of time. Even the TV is turned off by remote control or button, AC power source is connected to the unit if not unplugged in.

Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.

Do not attempt to modify this product in any way without written authorization from LG Electronics. Accidental fire or electric shock can occur. Contact a service center. Unauthorized modification could void the user's authority to operate this product.

Use only an authorized attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.

Never disassemble the AC adapter or power cord. This may result in fire or electric shock.

Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.

To reduce the risk of fire or electrical shock, do not touch the TV with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.

Batteries (Not Included)

- Store the accessories (battery, etc.) in a safe location out of the reach of children.
- Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.
- Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.

Moving

When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV. Otherwise, this may result in product damage, fire hazard or injury.

Keep the packing anti-moisture material or vinyl packing out of the reach of children.

Do not allow an impact shock, any objects to fall into the product, and do not drop anything onto the screen.

Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.

Cleaning

- When cleaning, unplug the power cord and wipe gently with a soft/dry cloth. Do not spray water or other liquids directly on the TV. Do not clean your TV with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

Installation

Lifting and moving the TV

When moving or lifting the TV, read the following to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.
- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grille area.
- Use at least two people to move a large TV.
- When transporting the TV, do not expose the TV to jolts or excessive vibration.

When transporting the TV, keep the TV upright; never turn the TV on its side or tilt towards the left or right.

When handling the TV, be careful not to damage the protruding buttons.



- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not place the product on the floor with its front facing down without padding. Failure to do so may result in damage to the screen.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

Mounting on the Table

- Lift and tilt the TV into its upright position on a table.
 - Leave a minimum of 10 cm (4 inches) space from the wall for proper ventilation.
- Connect the power cord to a wall outlet.



- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Do not use any unapproved items to ensure the safety and lifespan of the product.
- Any damages or injuries by using unapproved items are not covered by the warranty.
- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.
- When assembling the stand, ensure that all of the provided screws are attached. If the screws are not fully tightened, the product may tilt or tip over, resulting in damage. Tightening the screws with excessive force may cause them to come off due to abrasion of the screw joint.

Securing TV to the Wall

- Insert and tighten the eye-bolts or TV brackets and bolts on the back of the TV.
 - If there are bolts inserted at the eye-bolts position, remove the bolts first.
- Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.

Connect the eye-bolts and wall brackets tightly with a sturdy rope or cable. Make sure to keep the rope parallel to the flat surface.

- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts, and ropes are optional.

Mounting to the Wall (KIT NOT INCLUDED)


An optional wall mount can be used with your LG Television. Consult with your local dealer for a wall mount that supports the VESA standard used by your TV model. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. We recommend that you use an LG brand wall mount. The LG wall mount is easy to adjust or to connect the cables. When you do not use LG's wall mount bracket, use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. If you are using a non-adjustable mount, attach the mount to the wall. Attach the cables to the TV first, then attach the TV to the mount.



- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- For more information of screws and wall mount bracket, refer to manual included in the separately purchased wall mount.
- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.
- When installing the wall mounting bracket, it is recommended to cover the stand hole using tape, in order to prevent the influx of dust and insects. (Depending upon model).

Antenna/Cable

Connect an antenna, cable, or cable box to watch TV while referring to the following. The illustrations may differ from the actual items and an RF cable is optional.



- Make sure not to bend the copper wire of the RF cable.
- Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your TV.
- Use a signal splitter to use 2 TVs or more.
- DTV Audio Supported Codec: MPEG, Dolby Digital
- This TV cannot receive Ultra HD (3840 x 2160 pixels) broadcasts directly because the related standards have not been confirmed (Depending upon country).

Starting TV

Turning on the TV

You can simply operate the TV functions, using the button.



The images shown here are for illustrative purposes only and may be subject to change.



Power On (Press)
Power Off* (Press and Hold)
Menu Control (Press*)
Menu Selection (Press and Hold*)

1) All running apps will close.

2) You can access and adjust the menu by pressing the button when TV is on.

3) You can use the function when you access menu control.

Note

- When the TV is turned on for the first time after being shipped from the factory, initialization of the TV may take approximately one minute.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual (Depending upon model).
- The device must be easily accessed to a location outlet near the access. Some devices are not made by turning on / off button, turning off the device and unplugging the power cord (Depending upon model).

Connections

You can connect various external devices to the TV.

HDMI

- When connecting the HDMI cable, the product and external devices should be turned off and unplugged.
- Supported HDMI Audio format (Depending upon model):
 - True HD (48 kHz),
 - Dolby Digital / Dolby Digital Plus (32 kHz / 44.1 kHz / 48 kHz),
 - PCM (32 kHz / 44.1 kHz / 48 kHz / 96 kHz / 192 kHz),
 - DTS (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz),
 - DTS-HD (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz / 176.4 kHz / 192 kHz)

Note

- If the device connected to Input Port also supports HDMI Deep Color, your picture may be clearer. However, if the device doesn't support it, it may not work properly. In that case, change the TV's [HDMI Deep Color] setting to off (Depending upon model).
- Ⓢ → (Ⓢ) → [General] → [External Devices] → [HDMI Settings] → [HDMI Deep Color] (Depending upon model).
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types (3 m (9.84 feet) or less)
 - Ultra High Speed HDMI™ cable

USB

Some USB Hubs may not work. If a USB device connected through a USB Hub is not detected, connect it directly to the USB port on the TV. (Depending upon model)

Note

- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm (0.39 inches) thick and 18 mm (0.7 inches) width. (Depending upon model)
- Use an extension cable that supports USB 2.0 if the USB cable or USB flash drive does not fit into your TV's USB port.

IR Blaster

Control the set-top box (cable/satellite/PT/OTT), Blu-ray/DVD player, soundbar, game consoles, etc., using the IR Blaster (Depending upon country) (Depending upon model).

Note

- Connect the IR Blaster cable to the TV's IR Blaster port.
- Use universal control settings to control the device.
- Secure the IR Blaster with the 3M tape provided.
- In order to control external devices through "Room to Room Share" and "Hands-free Voice Control", an IR blaster connection is required.

External Devices

Supported external devices are: Blu-ray player, HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices. For more information on external device's connection, refer to the manual.

Note

- The external device connections shown may differ slightly from illustrations in a manual.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the [Picture] menu until the picture is clear. Depending upon the graphics card, some resolution settings may not allow the image to be positioned on the screen properly.
- When connecting to a wired LAN, use a CAT 7 cable with high-speed Internet transmission. (Only when LAN port is provided.)
- The TV may be capable of operating without a set-top-box from a multichannel video programming distributor (MVPD).

Remote RS-232C setup

To obtain the RS-232C external control setup information, contact a service center. Download and read the manual. (Depending upon model).



- Do not drop the product or let it fall over when connecting external devices. Otherwise, this may result in injury or damage to the product.
- When connecting external devices such as video game consoles, make sure the connecting cables are long enough. Otherwise, the product may fall over, which may cause injury or damage the product.

Specifications

Product specifications may be changed without prior notice due to upgrade of product functions.

Estimated yearly energy consumption indicated on the FTC label is measured in accordance with the Test Procedures for Television Sets (USA only).

The actual energy consumption depends on the usage environment (The content watched, TV settings, etc.).

- For information of the power supply and power consumption, refer to the label attached to the product.
 - The typical power consumption is measured in accordance with IEC 62087 or each country's energy regulations.
 - * On some models, the label is inside the external device connection terminal cover.
 - * Depending upon the model or country, the typical power consumption may not be on label.

Power requirement	AC 120 V ~ 50/60 Hz
-------------------	---------------------

(Depending upon country)

Broadcasting Specifications	
Television system	Terrestrial / Cable / Satellites Digital TV
External antenna impedance	75 Ω

- Certain 8K input/decoding standards may not be supported. An additional device may be necessary to support certain 8K standards. Upscaled and enhanced 8K images will vary depending upon the source content (Depending upon model).

Environment Condition			
Operating Temperature	0 °C to 40 °C (32 °F to 104 °F)	Storage Temperature	-20 °C to 60 °C (-4 °F to 140 °F)
Operating Humidity	Less than 80 %	Storage Humidity	Less than 85 %

Conditions for Wall Mount Installation	
Tilt Angle	0° ~ 15°

* This specification range applies to TV wall mounts when adjusting for proper viewing angle.


PRINTED IN MEXICO
Elbrd: J.M. SC: 05-31-2024
OBNP: *MFL720617602401REV00*
SHDML: 43UT8000AUA_B
ADD:50UT8000AUA_
55UT8000AUA_ 65UT8000AUA

814100243






43UT80*_50UT80*_55UT80*_65UT80*_70UT80*
75UT80*_86UT80*_43UT75*_75UT75*_86UT75*

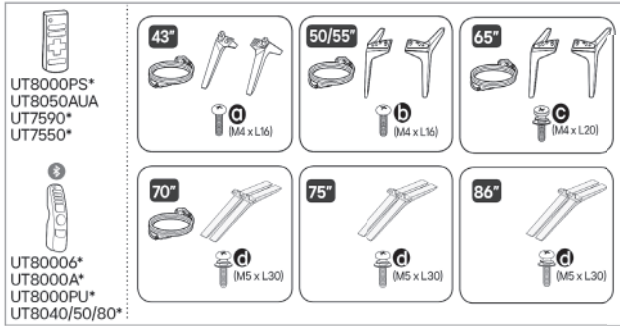


43/50/55/65/70/75/86"



Accessory type and quantity may vary depending on the model.

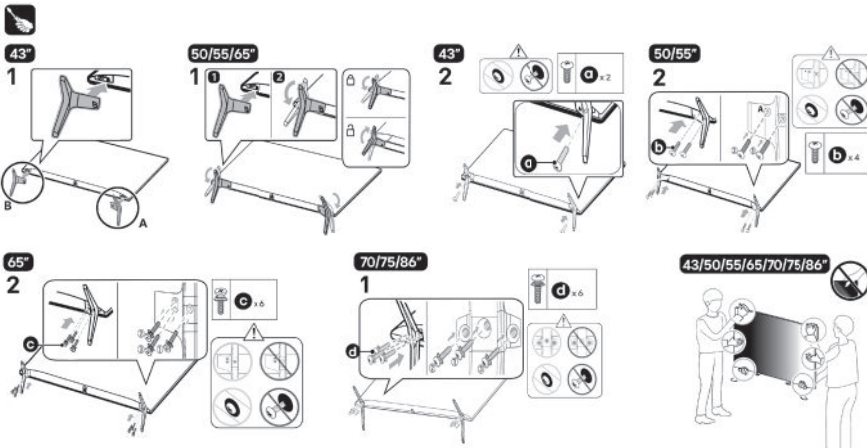


The image shown here is for illustrative purposes only and may be subject to change.

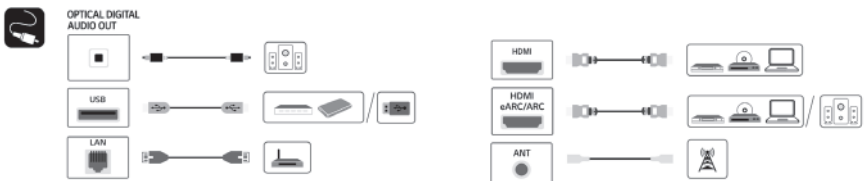


The cables mentioned in this guide is not supplied with your unit.




The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

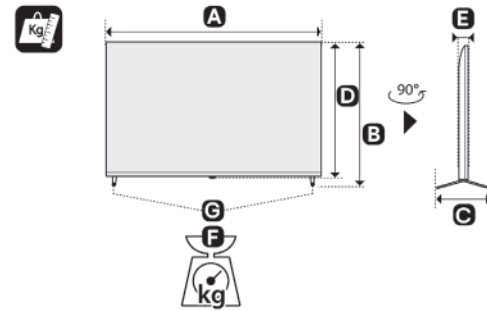

	A	B	C	D	E	F	F G	H I
43UT75*	967 mm	621 mm	216 mm	564 mm	571 mm	89 kg	8.8 kg	115 W
43UT80*	(38.0) inches	(24.4) inches	(8.5) inches	(22.2) inches	(2.2) inches	(19.6) lbs	(19.4) lbs	
50UT75*	1121 mm	713 mm	231 mm	651 mm	571 mm	119 kg	117 kg	135 W
50UT80*	(44.1) inches	(28.0) inches	(9.0) inches	(25.6) inches	(2.2) inches	(26.2) lbs	(25.7) lbs	
55UT75*	1235 mm	776 mm	231 mm	715 mm	575 mm	142 kg	14.0 kg	150 W
55UT80*	(48.6) inches	(30.5) inches	(9.0) inches	(28.1) inches	(2.2) inches	(31.3) lbs	(30.8) lbs	
65UT75*	1454 mm	906 mm	269 mm	838 mm	577 mm	217 kg	214 kg	190 W
65UT80*	(57.2) inches	(35.6) inches	(10.5) inches	(32.9) inches	(2.2) inches	(47.8) lbs	(47.1) lbs	
70UT75*	1562 mm	972 mm	361 mm	907 mm	599 mm	281 kg	277 kg	205 W
70UT80*	(61.4) inches	(38.2) inches	(14.2) inches	(35.7) inches	(2.3) inches	(61.9) lbs	(61.0) lbs	
75UT75*	1678 mm	1027 mm	361 mm	964 mm	599 mm	318 kg	314 kg	230 W
75UT80*	(66.0) inches	(40.4) inches	(14.2) inches	(37.9) inches	(2.3) inches	(70.1) lbs	(69.2) lbs	
86UT75*	1927 mm	1167 mm	362 mm	1104 mm	599 mm	459 kg	45.2 kg	305 W
86UT80*	(75.8) inches	(45.9) inches	(14.2) inches	(43.4) inches	(2.3) inches	(101.1) lbs	(99.6) lbs	

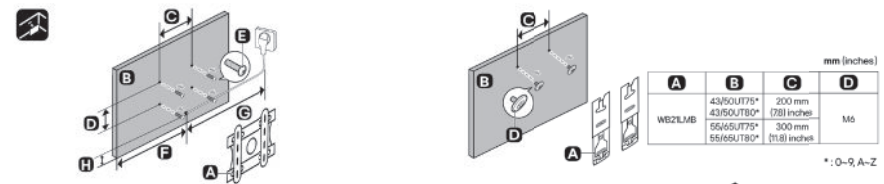

	A	B	C D	E	F	G	H
LSW2406	43UT75*	200 x 200 mm	306 mm	214 mm	306 mm	214 mm	214 mm
MSW2400	43UT80*	(7.8 x 7.8) inches	(12.0) inches	(8.4) inches	(12.0) inches	(8.4) inches	(8.4) inches
WB24GCB	50UT75*	300 x 300 mm	384 mm	254 mm	384 mm	254 mm	254 mm
MSW2400	50UT80*	(11.8 x 11.8) inches	(15.1) inches	(10.0) inches	(15.1) inches	(10.0) inches	(10.0) inches
WB24GCB	55UT75*	300 x 300 mm	371 mm	230 mm	371 mm	230 mm	230 mm
MSW2400	55UT80*	(11.8 x 11.8) inches	(14.6) inches	(9.0) inches	(14.6) inches	(9.0) inches	(9.0) inches
WB24GCB	65UT75*	300 x 300 mm	480 mm	340 mm	480 mm	340 mm	340 mm
MSW2400	65UT80*	(11.8 x 11.8) inches	(18.8) inches	(13.4) inches	(18.8) inches	(13.4) inches	(13.4) inches
WB24GCB	70UT75*	400 x 400 mm	485 mm	275 mm	485 mm	275 mm	275 mm
MSW2400	70UT80*	(15.7 x 15.7) inches	(19.0) inches	(10.8) inches	(19.0) inches	(10.8) inches	(10.8) inches
WB24GCB	75UT75*	600 x 600 mm	569 mm	272 mm	569 mm	272 mm	272 mm
MSW2400	75UT80*	(23.6 x 23.6) inches	(22.3) inches	(10.7) inches	(22.3) inches	(10.7) inches	(10.7) inches
WB24GCB	86UT75*	600 x 400 mm	599 mm	215 mm	599 mm	215 mm	215 mm
MSW2400	86UT80*	(23.6 x 15.7) inches	(23.5) inches	(8.4) inches	(23.5) inches	(8.4) inches	(8.4) inches

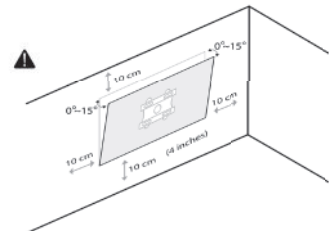

PRINTED IN MEXICO / SC: 05-30-2024 / ELBRD: J.E.

8 1 4 0 0 0 2 4 3

SHNMDL: 55UT8000AUA_B / OBP: *MFL720637562402REV04*



Add: 43UT80*_50UT80*_55UT80*_65UT80*_70UT80*_75UT80*_86UT80*_43UT75*_75UT75*_86UT75*