

NINJA[®]

COFFEE

BREWER

OWNER’S GUIDE

804109332

Recipe book is not included.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA[®] COFFEE BREWER.

⚠WARNING:

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- DO NOT** allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other) As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit, contact a qualified electrician **DO NOT** force into outlet or try to modify to fit.
- To protect against fire, electric shock, and injury to persons, **DO NOT** immerse cord, plugs, or body of machine in water or other liquid.
- NEVER** carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- DO NOT** let the power cord hang over the edges of tables or counters or touch hot surfaces such as the stovetop.
- The use of a vessel other than the provided 12-cup carafe may create an overflow condition and scalding hazard, or result in fire, electric shock, or personal injury.
- DO NOT** place carafe in microwave.
- The carafe is designed for use with this appliance **ONLY. NEVER** use on a stovetop.
- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- DO NOT** use extension cords with this product.
- Appliance creates hot liquid. Handle with care.

Operating Notice

- DO NOT** use this appliance for anything other than its intended use. **DO NOT** use outdoors.
- Clogging and backing up of water and/or coffee in the brewer can occur under any of the following conditions: the use of coffee that is too finely ground or decaffeinated, using two or more paper filters, using the permanent filter in conjunction with a paper filter, not cleaning coffee grounds from the permanent filter, or allowing coffee grounds to spill over the filter.
- ALWAYS** use appliance on a clean, dry, level surface.
- DO NOT** place on or near a hot gas or electric burner or in a heated oven.

- DO NOT** touch hot surfaces. Use handles or knobs.
- DO NOT** touch warming plate while the brewer is in use. Wait until it has completely cooled after use before touching.
- DO NOT** run the appliance without water.
- DO NOT** use well water; use filtered tap water.
- To prevent overflow, **DO NOT** add water to the reservoir if the STAY WARM button is on.
- ALWAYS** place the 12-cup carafe with the lid on beneath the brew basket to receive the brewed coffee.
- DO NOT** reach across top of unit when brewing. Steam released from vent on top of brewer may cause burns.
- DO NOT** set a hot carafe on a wet or cold surface.
- DO NOT** use a cracked or scratched carafe or a carafe with a loose or weakened handle.
- DO NOT** drink directly from the carafe. Liquid from the carafe may be very hot.
- If carafe is removed during brewing cycle, return it to unit as soon as possible to prevent spills.
- NEVER** open the brew basket while the unit is in use.
- DO NOT** remove the carafe at any time throughout the clean cycle.
- Ensure the carafe is completely empty before starting a cleaning or brewing cycle. Starting a cycle with water or coffee in the carafe will cause it to overflow.
- DO NOT** brew without the carafe in place.
- Scalding may occur if the lid is removed during the brewing cycles.

Care & Maintenance

- Remove the power cord from the electrical outlet and allow unit to cool before surface cleaning or removing brew, water reservoir, or filters.
- Clean the glass carafe with a soft brush or sponge. **DO NOT** clean carafe with abrasive cleansers, steel wool pads, or other abrasive material.
- To prevent illness from bacterial growth in the appliance, follow all cleaning instructions in the Care & Maintenance section of this Owner’s Guide.
- Clean the system on a weekly basis by wiping down the machine exterior.
- DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Scalding may occur if the lid is removed during the brewing cycles.

TECHNICAL SPECIFICATIONS

Voltage: 120V, 60Hz

SAVE THESE INSTRUCTIONS

WHAT’S IN THE BOX

NOTE: CLEAN BEFORE USE




- a Brew-Through lid with Flavor Straw
- b Glass Carafe
- c Removable Filter Holder
- d Brew Basket
- e Brewer
- f Control Panel
- g Warming Plate
- h Water Reservoir Lid
- i Removable Water Reservoir
- j Power Cord & Storage (not shown)

NOTE: Accessories may vary depending on the model.

The images shown here are for illustrative purposes only and may be subject to change.

GETTING TO KNOW YOUR NINJA[®] COFFEE BREWER

CONTROL PANEL

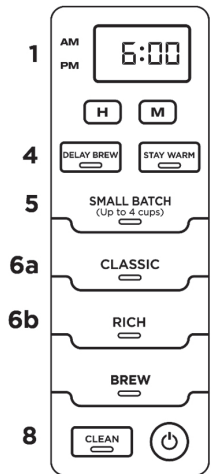

- Programmable Digital Clock
- Clock Hour and Minute Buttons
- STAY WARM Button
- DELAY BREW Button
- SMALL BATCH Button
- Brew Types
 - a CLASSIC Brew Button
 - b RICH Brew Button
- BREW Button
- Clean Cycle Button
- Power Button

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.


FEATURES OF THE NINJA COFFEE BREWER

- Thermal Flavor Extraction[®] Technology** – Blends automated controls for calibrated temperature, pre-infusion, coffee saturation, and flavor richness to unlock the full flavor potential of your coffee.
- SMALL BATCH** – When brewing 4 cups or less, add your desired amount of water to the reservoir and press this button to ensure the same great flavor as a Full Carafe brew.
- Brew Types** – Control the strength and style of your coffee:
 - a. CLASSIC Brew for smooth, balanced hot coffee.
 - b. RICH Brew for a richer-than-Classic but still smooth coffee flavor that stands up to milk, cream, or flavoring.
- Removable Water Reservoir with Easy Access** – For quick and easy filling.
- LED Control Panel with Programmable Digital Clock**
- 24-Hour Programmable DELAY BREW Button** – Set it to automatically brew at a desired time. The brewer will remain pre-heated and ready to brew at the time you programmed.
- Mid-Brew Pause** – Automatically stops the flow of coffee from the brew basket, allowing you to pour a cup mid-brew.
- CLEAN Function** – The clean function allows you to clean your unit whenever you would like. As a guideline, we suggest running a clean cycle when it takes longer than 12-15 minutes to brew a full carafe of coffee.
- STAY WARM Button with Automatic Shutoff** – Keeps your brew at the ideal temperature for up to 4 hours. The warming plate will activate during the brew and will automatically shut off after 2 hours by default. You can also program the warming plate to stay on for more or less time.
- Paper Filter Kit** – Use a #4 paper filter (Not supplied) or a permanent filter (Not supplied) to brew (Do not use both).

BEFORE FIRST USE

- Remove all packaging material from the brewer.
- Hand-wash all removable parts in warm water.
- Wipe the warming plate with a damp cloth.
- Run two Full Carafe, Classic Brew cycles without coffee grounds, using water only. Discard the water after each cycle is complete.


SETTING THE CLOCK

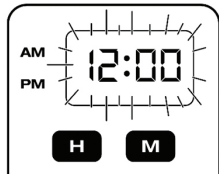

- Plug the power cord into an electrical outlet and press the Power button (⏻).
- Press either the **H** (hour) button or **M** (minute) button and the display will flash. Use the **H** and **M** buttons to set the clock to the current time. The AM or PM indicator will illuminate on the left side of the display as you are setting the time.
- When the desired time is reached, allow 5 seconds for it to set.

NOTE: If you unplug the brewer or experience a power loss, you will need to reset the clock the next time the brewer is powered on.

HOW TO BREW

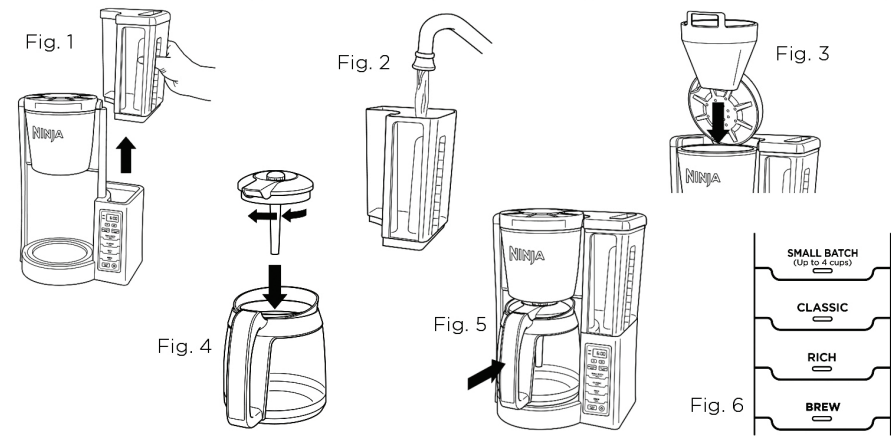

- Place the brewer on a dry, clean, and level surface. Plug your brewer in and power it on.
- Remove the water reservoir from the unit by lifting it straight up (Fig. 1). Remove the lid entirely and fill the water reservoir to the desired level (Fig. 2).

NOTE: **DO NOT** fill past the 12-Cup Line. If overfilled, remove the water reservoir from the brewer and pour out water until the level is no higher than the 12-Cup Line.

- Place a #4 paper cone filter (Not supplied) in the removable filter holder. Fold the paper filter along the seams, open it fully, and press it firmly into the removable filter holder, making sure it is fully seated.
- Place the filter holder into the brew basket (Fig. 3). Then add desired amount of coffee grounds.

- Place the brew-through lid on the carafe and turn clockwise to lock into place (Fig. 4). Then place carafe under the brew basket (Fig. 5).
- Select either CLASSIC or RICH brew. If you are brewing 4-cups or less, also select SMALL BATCH. (Fig. 6).

Classic Brew for smooth, balanced hot coffee.

Rich Brew for a richer-than-Classic but still smooth coffee flavor that stands up to milk, cream, or flavoring

- Press BREW to start brewing. When the brewing is complete, the unit will beep.

NOTE: Each brew has a pre-infusion cycle with varying times. The brew will begin, pause for a short period of time, and then continue brewing. This pre-infusion cycle is used to evenly saturate the coffee grounds.

PREPARING & USING YOUR NINJA® COFFEE BREWER

COFFEE MEASUREMENT CHART

BATCH SIZE	CUPS OF COFFEE	GROUND	WATER
Small Batch (SMALL BATCH button on)	2 cups	2 tbsp.	2-cup line
	4 cups	4 tbsp.	4-cup line
Full Carafe (SMALL BATCH button off)	6 cups	6 tbsp.	6-cup line
	8 cups	8 tbsp.	8-cup line
	10 cups	10 tbsp.	10-cup line
	12 cups	12 tbsp.	12-cup line

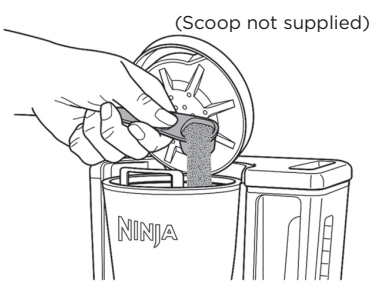


Fig. 7




Fig. 8



Fig. 9

PROGRAMMING THE DELAY BREW TIME

- With Power on, press DELAY BREW. The DELAY BREW button will illuminate and the clock will flash “12:00” or the last Delay Brew time that was set (**Fig. 7**).
- While the clock is flashing, use the H and M buttons to set the time you would like the Delay Brew to begin. The AM or PM indicator will illuminate on the left side of the display as you are setting the desired time.
- Select desired brew style and selection will illuminate (**Fig. 8**).
- Once the time, brew size, and brew type have been set, press the DELAY BREW button again to activate, or wait five seconds for the brew time to lock in automatically. The unit will beep to indicate the brew time has been set, and the DELAY BREW button will remain illuminated.

NOTE: To deactivate the Delay Brew cycle, press the DELAY BREW button once more and the light on the button will turn off. Any change to the selected brew size or starting any other brew will cancel the programmed Delay Brew. Turning off the unit will also cancel the Delay Brew.

- Place the carafe under brew basket.

NOTE: The Ninja® Coffee Brewer must remain on for the Delay Brew function to work. **DO NOT** power off after setting the Delay Brew time.

PRECISION TEMP WARMING PLATE

The warming plate will turn on once the brew has started. Press the STAY WARM button after the brew to turn off the warming plate (**Fig. 9**). You can turn the warming plate back on by pressing the STAY WARM button again. Wait until surface has cooled completely before touching.

NOTE: DO NOT add additional water to the reservoir when using the STAY WARM function.

You can program the warming plate to stay on for up to 4 hours.

- Press and hold STAY WARM button until the clock flashes, displaying the time at which the warming plate is currently set to turn off.
- Quickly press the hour (H) or minute (M) button to adjust the time up to 4 hours. The warming plate is automatically programmed to stay on for 2:00 hours.
- To lock in the new duration, press the STAY WARM button again, or wait 5 seconds for it to lock in automatically.

CARE & MAINTENANCE

CLEANING AFTER A BREW

- After each brew is complete and the coffee grounds have cooled, discard the paper filter. Take out the removable filter holder, rinse, and wash with soap and warm water. If using a permanent filter, dump the grounds into the trash and wash the filter by hand with warm, soapy water or place on the top rack of the dishwasher.

NOTE: If coffee grounds spill over into the filter holder, remove the filter holder and rinse it.

- We recommend cleaning your carafe with warm, soapy water, or placing it on the top rack of your dishwasher. If you want to clean the carafe more thoroughly, we recommend using a soft foam brush such as the one shown to the right.
 - Empty the water reservoir.
 - Hand-wash with dish soap and rinse or place on the top rack of your dishwasher.
- Unplug your unit and let the warming plate cool before cleaning. Wipe down with a soft cloth and warm water. **DO NOT** immerse the base in water.



DESCALING YOUR NINJA® COFFEE BREWER

- Use a descaling solution specifically formulated for coffeemaker cleaning and follow the directions on the package. Fill the water reservoir up to, but not exceeding, the 12-Cup Line (60 fl. oz.).

OR

- Add 16 oz. of white vinegar to the water reservoir, then fill the rest of the reservoir with water up to, but not exceeding, the 12-Cup Line (60 fl. oz.).
- Once the water reservoir is filled with your cleaning solution or vinegar mixture, press the CLEAN button. The clean cycle takes approximately 25–35 minutes. To cancel the clean cycle, either press the CLEAN button again or press the Power button.
- The unit will beep when the clean cycle successfully completes. Refill the reservoir with fresh water up to, but not exceeding, the 12-Cup Line, and set the empty carafe beneath the brew basket. Run a full Classic Brew cycle with water only to remove any cleaning solution that could affect the flavor of your coffee.

NOTE: Make sure the SMALL BATCH button is not selected/illuminated and set the empty carafe beneath the brew basket.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA and THERMAL FLAVOR EXTRACTION are registered trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. Patent information, visit sharkninja.com/uspatents.

© 2018 SharkNinja Operating LLC



8 0 4 1 0 9 3 3 2

PRINTED IN MEXICO Elbrd: Y.T.
OBPN: CE200_Series_IB_E_MP_180427
SC: 05-04-2019_TAB MODEL: CE200_69_BP
REV 2: 11-03-2021

TROUBLESHOOTING GUIDE

There is sediment in my coffee.

- If there is sediment at the bottom of the brewed coffee, this may be due to using finely ground coffee in a permanent filter(not supplied)
- To reduce the amount of sediment in the brewed coffee, use a slightly coarser grind or use a paper filter (not supplied).

There are grounds in my coffee.

- Either a permanent filter(not supplied) or a paper filter (not supplied) must be in place when brewing.
- Using too many grounds can cause the filter holder to overflow. Once cooled, clean out the filter holder and refill using the appropriate amount of coffee (1 scoop per cup).
- Finely ground coffee can clog the filter holder. For best brewing results, use a medium-grind coffee.

Brew basket drips even after the brew cycle is completed.

- The removable filter holder valve may be clogged. Rinse the filter holder with tap water and press the valve repeatedly until the clog is cleared.

Paper filter is folding over.

- The unit is designed to take a #4 cone filter. Be sure you are using this size and shape, as larger sizes may fold over. Allow the filter holder to cool before handling. Be sure the paper filter (not supplied) is folded along its two seams and is pressed firmly into the filter holder. Alternatively, you can wet the sides of the paper filter to temporarily adhere it to the filter holder.
- If the problem persists, try using a permanent filter(not supplied) instead of a paper filter.

NOTE: When using a paper filter(not supplied), **DO NOT** use a permanent filter(not supplied)

What impacts coffee brew volume?

- When you make hot coffee, the coffee grounds will absorb some of the water that is brewed, resulting in slightly less brewed coffee than amount of water used. The more coffee you use, the more water will be absorbed.

Coffee is weak

- For a stronger coffee, use the Rich Brew setting, try darker-roast grounds, or use a permanent filter (not supplied) rather than a paper filter (not supplied). If you want an even bolder flavor, you can add more coffee grounds. Additional grounds do absorb water, so you may get more concentrated coffee but overall less liquid volume.

Coffee is strong

- For milder coffee, try the Classic Brew setting using light-roast grounds and a paper filter (not supplied) rather than a permanent filter (not supplied). If you want an even milder flavor, you can put fewer grounds in the filter holder.

Brew will not start.

NOTE: The brew will begin, pause, and then continue. This process is used to evenly saturate the coffee grounds.

- Ensure the unit is powered on and the display is illuminated. If there are no lights, the machine is not getting power. Try a different outlet and press the Power button.
- Check to make sure there is water in the water reservoir.
- Make sure the carafe is in place. The brewer will not dispense coffee if the carafe is not in place. If it is not in place, the brew will remain in the brew basket, which could lead to overflow.
- If the brew still does not start, it may be time to run a clean cycle. Please refer to the Descaling Your Ninja® Coffee Brewer section.

Brew cycle is too slow.

- A full carafe brew will take approximately 12–15 minutes. If a full carafe brew takes longer than expected, you may need to descale your unit.

Carafe overflowed.

- The carafe may not have been empty prior to brewing, or the water level exceeded the Max Fill line on the water reservoir prior to brewing. Reminder, do not add additional water to the reservoir after a brew or cleaning cycle has already started.
- For Classic brew, the carafe holds 60 fl. oz. To avoid overflows, make sure carafe is empty prior to brewing and the water reservoir is not filled past the 12-Cup Line.

Brew basket overflowed.

- Check that the carafe is in place with the lid secured. If the carafe is in place, the bottom of the filter holder may be clogged. This can happen with finely ground coffee or too many coffee grounds in the filter holder. Wash brew basket pieces per the Care & Maintenance instructions
- Medium-grind coffee is recommended.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner’s manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____