

Shark
Navigator®
Lift-Away® DELUXE
NV360 Series

OWNER'S GUIDE

IMPORTANT SAFETY INSTRUCTIONS
FOR HOUSEHOLD USE ONLY

WARNING
To reduce the risk of fire, electric shock, injury, or property damage, when using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM

- 1. Inspect power cord and plug for any damage before use. DO NOT use vacuum cleaner with a damaged cord or plug. Turn off all controls before plugging in or unplugging the vacuum cleaner. Store your vacuum cleaner with the power cord secured around the two cord hooks. To minimize the risk of power cord damage, do not allow the motorized brush roll to ingest the cord. If this occurs, immediately shut off power to the vacuum and remove the cord.
- 2. This appliance has a polarized plug, if the plug does not fit fully into the outlet, reverse the plug (one blade is wider than the other). If it still does not fit, contact a qualified electrician. DO NOT force into outlet or try to modify to fit.
- 3. Your vacuum cleaner may consist of a motorized nozzle, wand, hose, and/or vacuum pod. This device contains electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
- 4. Use only identical replacement parts.
- 5. Carefully observe and follow the instructions provided below to avoid improper use of the appliance. DO NOT use the vacuum for any purpose other than those described in this manual.
- 6. Before use, carefully inspect all parts for any damage. DO NOT use if any parts are damaged.
- 7. The use of an extension cord is NOT recommended.
- 8. This vacuum cleaner contains no serviceable parts.
- 9. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children. Keep the appliance and its cord out of reach of children. DO NOT allow the appliance to be used by children. DO NOT allow to be used as a toy. Close supervision is necessary when used near children.
- 10. Always turn off the vacuum cleaner before connecting or disconnecting any motorized nozzles or other accessories.
- 11. DO NOT handle plug or vacuum cleaner with wet hands.
- 12. DO NOT use without filters in place.
- 13. Only use Shark® branded filters and accessories.
- 14. DO NOT damage the power cord: a) DO NOT pull or carry vacuum cleaner by the cord or use the cord as a handle. b) DO NOT unplug by pulling on cord. Grasp the plug, not the cord. c) DO NOT run the vacuum cleaner over the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
- 15. DO NOT put any objects into nozzle or accessory openings. DO NOT use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- 16. DO NOT use if nozzle or accessory airflow is restricted. If the air paths or the motorized floor nozzle become blocked, turn the vacuum cleaner off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
- 17. Keep nozzle and all vacuum openings away from hair, face, fingers, uncovered feet, or loose clothing.
- 18. DO NOT use if vacuum cleaner is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- 19. Use extra care when cleaning on stairs.
- 20. DO NOT leave the vacuum cleaner unattended while plugged in.
- 21. When powered on, keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibers.
- 22. DO NOT place vacuum cleaner on unstable surfaces such as chairs or tables.
- 23. Your Shark® vacuum may not be designed to stand up on its own. When taking a break from cleaning, you may need to lean it against


- furniture or a wall, or lay it flat on the floor. Using the vacuum for an application where the unit lacks stability may result in personal injury.
24. DO NOT use to pick up:
- a) Liquids
 - b) Large objects
 - c) Hard or sharp objects (glass, nails, screws, or coins)
 - d) Large quantities of dust (drywall dust, fireplace ash, or embers). DO NOT use as an attachment to power tools for dust collection.
 - e) Smoking or burning objects (hot coals, cigarette butts, or matches)
 - f) Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
 - g) Toxic materials (chlorine bleach, ammonia, or drain cleaner)
25. DO NOT use in the following areas:
- a) Poorly lit areas
 - b) Wet or damp surfaces
 - c) Outdoor areas
 - d) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)

SAVE THESE INSTRUCTIONS


ASSEMBLY

WHAT DOES THE BRUSHROLL INDICATOR LIGHT MEAN?

- Solid Green
The brushroll is on and working as it should.
- Solid Red
Turn off the vacuum and unplug it, then remove any blockages in the nozzle.
- Flashing Red
Turn off the vacuum, unplug it, and remove any blockages. Let the vacuum cool down for at least 60 minutes before restarting. See Troubleshooting section for more information.
- No Light
The brushroll is off.

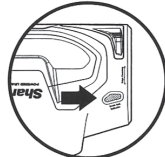

STEP 1 STEP 2

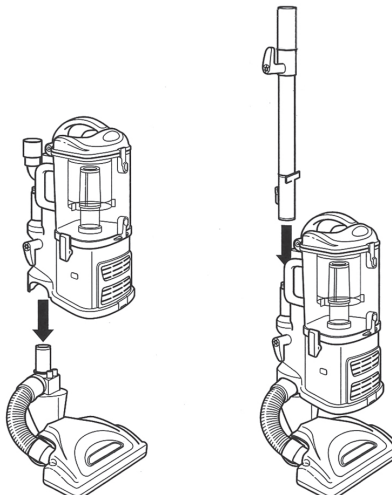


- 1 Place the floor nozzle on a level surface. Align the opening on the Lift-Away® pod with the tube on the floor nozzle, then lower pod until it clicks into place. When attaching the motorized floor nozzle, ensure that the latching mechanism is fully locked in place to ensure electrical connection has been made.
- 2 Insert the extension wand into the tube on the back of the Lift-Away pod, pressing it in until it clicks into place.

- Accessory type and quantity may vary depending on the model. -

- The images shown in this manual are for illustrative purposes only and may be subject to change. -

STEP 3

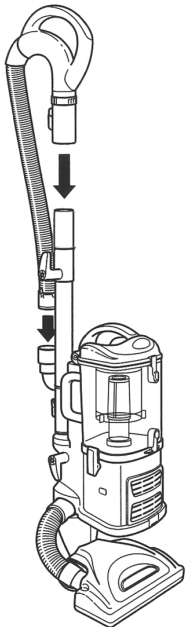


- 3 Insert the handle into the top of the extension wand until it clicks into place.

USING YOUR VACUUM IN UPRIGHT MODE



- II Brushroll ON (Carpets & Area Rugs)
- I Suction Only (Bare Floors)
- O OFF

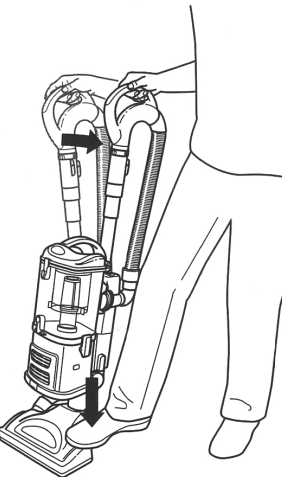


- 1 Quickly release the power cord by rotating the upper cord hook located on the back of the wand.
- 2 Press the On/Off switch to position I (Suction Only) to vacuum bare floors or to the position II to engage the motorized brushroll for vacuuming carpets and rugs.
- 3 Gently step on the floor nozzle and tilt the handle back. NOTE: The brushroll will not spin unless the nozzle is flat against the floor and the handle is tilted back.
- 4 To turn off the power, press the switch to the O position.

USING YOUR VACUUM IN LIFT-AWAY® MODE


NOTE: Use the handle on top of the dust cup to lift and carry the vacuum.

SUCTION CONTROL COLLAR

Due to the huge suction power of this vacuum, it may become necessary at times to adjust the suction control collar on the handle. If the vacuum seems difficult to push or pull, if it is lifting up area rugs, or if you are cleaning delicate above-floor surfaces such as drapes, reduce the suction by rotating the collar counterclockwise. Rotate the collar clockwise to increase suction for vacuuming floors and when using the Air-Driven Pet Brush.

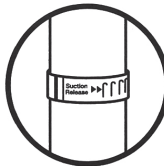

STEP 1 STEP 2 STEPS 3 + 4

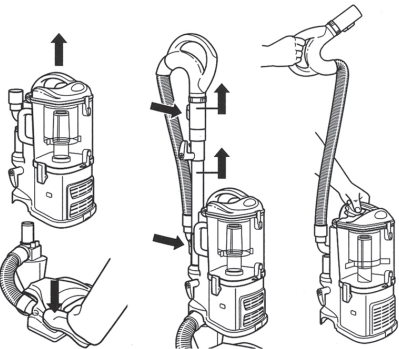

- 1 Detach the portable Lift-Away pod from the floor nozzle by pressing the red release button on the side of the pod. Gently step on the nozzle while lifting off the pod.
- 2 To clean above-floor areas with the handle, detach it from the wand by pressing the Handle Release button. To clean with a longer reach, detach the extension wand from the pod by pressing the wand release button.
- 3 Attach accessories to either the extension wand or the handle.
- 4 Press the On/Off switch to the position I for above-floor cleaning.

STORAGE

NOTE: Regularly rinse and replace the filters to maintain your vacuum's suction power.

To prevent damage from cleaning chemicals, rinse filters with cold water only. Allow all filters to air-dry for at least 24 hours before reinstalling them to prevent liquid from being drawn into electric parts.

IMPORTANT: DO NOT use soap when cleaning the filters.

RECOMMENDED CLEANING SCHEDULE:

Dust Cup

Empty after each time you vacuum.


Pre-Motor Filter Kit

XFF350 (Foam & Felt)
Clean every 3 months.

Post-Motor Filter


XHF350 (HEPA)
Clean every 1 year.

- 1 Reattach the pod to the nozzle to return to upright vac mode.
- 2 Rotate the upper cord hook to its upright position and coil the power cord loosely around the upper and lower cord hooks. Clip the plug onto the cord to secure.
- 3 Store the dusting brush and the crevice tool on the mounts on the accessory holder.

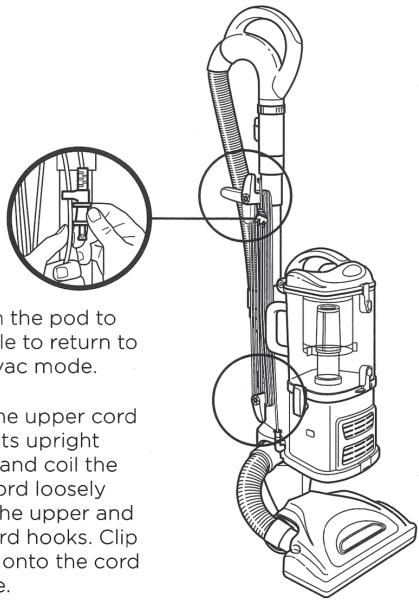

MAINTENANCE

STEP 1 STEP 2 STEP 3

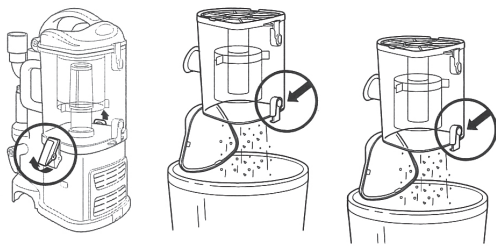

Pre-Motor
Foam Filter
Felt Filter

Post-Motor
HEPA Filter

EMPTYING THE DUST CUP

The dust cup needs to be emptied each time you vacuum and periodically during cleaning, when the dust cup appears full.

- 1 To remove the dust cup, lift the latches on the side.
- 2 Hold the dust cup over a trash receptacle and press the bottom-door release button. Tap gently to empty contents. Press the door shut again until it clicks.
- 3 If needed, turn the dust cup upside down over the trash receptacle and press the top-door release button. Tap gently to remove contents.

Use a dry cloth or paper towel to remove debris stuck to the screen inside the dust cup. Press the door shut again until it clicks.

- 4 Replace the dust cup on top of the pod. Hook the two latches onto the tabs on the sides of the dust cup and push down to lock.

CLEANING THE PRE-MOTOR FILTERS


- 1 Remove the dust cup.
- 2 Pull the 2 filters out from the top of the pod.
- 3 Rinse the filters thoroughly in lukewarm water until the water runs clear.
- 4 Squeeze out excess water and let air-dry for at least 24 hours before replacing.
- 5 Place the felt filter in first, then the foam filter.
- 6 Replace the dust cup.

NOTE: DO NOT put the filter in the washing machine or dishwasher.
NOTE: The material in the filter will discolor over time. This is normal, and will not affect the performance of the filter.

WARNING: To reduce the risk of shock and unintended operation, turn off power and unplug the power cord before performing any maintenance.

NOTE: DO NOT use soap when cleaning the filters. Hand wash filters only with water to prevent damage from cleaning chemicals. Allow ALL filters to air-dry completely before replacing them in the vacuum to prevent liquid from being drawn into electric parts. **DO NOT** use a hair dryer or other heating methods to dry.


STEP 1

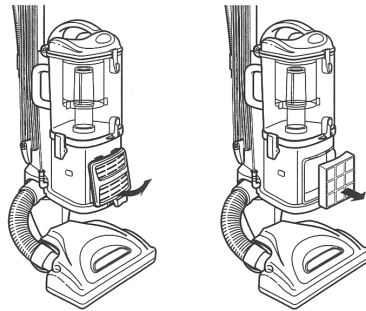

STEP 2




STEP 3

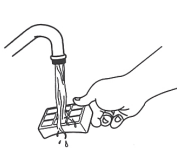


CLEANING THE POST-MOTOR HEPA FILTER

- 1 Remove the filter cover from the front of the vacuum by pulling up on the tab and pulling the cover away from the vacuum. Take out the HEPA filter by pulling it straight out.
- 2 Turn the filter over so that the dirty side is on the bottom and vigorously tap it clean against a garbage can to remove any dust.
- 3 Hold the filter under the tap with the dirty side facing down. Rinse with lukewarm water until the water runs clear. Allow filter to air-dry for 24 hours.
- 4 Once the HEPA filter is dry, reinstall it.
- 5 Replace the cover by inserting the two tabs into the holes at the top and then swinging the cover down until it clicks into place.

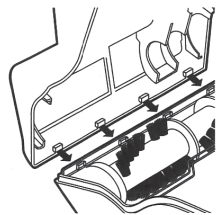

CLEANING THE AIR-DRIVEN PET BRUSH

- 1 Slide the locking latch forward and gently tilt brush housing upward to remove.
- 2 Carefully remove any blockages or debris and use scissors to cut away any buildup of hair or string around the rotating bristle brush.
- 3 To reassemble, insert the tabs on the front edge of the bottom cover into the matching holes in the top half and tilt it back down until it clicks into place.

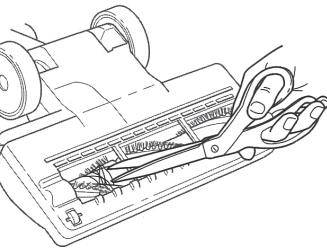


CLEANING THE MOTORIZED FLOOR NOZZLE

To clean the floor nozzle, first turn off the vacuum and unplug it. Detach the pod from the floor nozzle and remove any blockages. Clear away debris, and remove any fibers or hair wrapped around the brushroll.

Reconnect the nozzle, plug in the vacuum, and turn on the power.

TIP: Make sure you are working in a well-lit area and use a flashlight to help search for blockages.

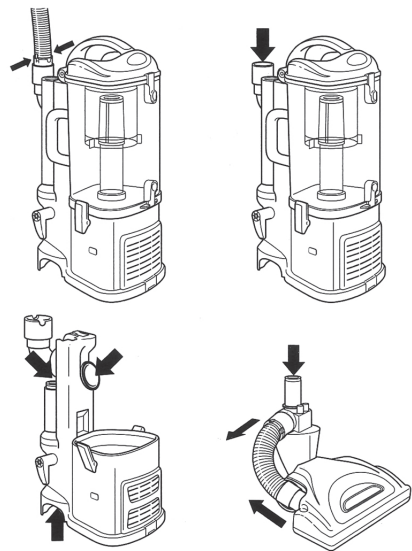

CHECKING FOR BLOCKAGES

Blockages may cause your vacuum to overheat and shut down.

To prevent this from happening, check potential blockage areas after heavy use, or if you detect a loss of suction or poor cleaning performance.

- 1 Detach the stretch hose from the back of the portable Lift-Away* pod by squeezing the tabs together and pulling up. Check the hose and pod openings for blockages.
- 2 Remove the dust cup and extension wand and separate the portable Lift-Away pod from the motorized floor nozzle. Check all openings for any blockages.
- 3 Detach the hose on the motorized floor nozzle at the top by squeezing the tabs together and pulling out, and at the bottom by pulling out the connector. Check all openings for any blockages.

TROUBLESHOOTING

WARNING: To reduce the risk of shock and unintended operation, turn off power and unplug unit before servicing.

Vacuum is not picking up debris. No suction or light suction.
(Refer to Maintenance section for more information.)

- Check the filters to see if they need cleaning. Follow instructions for rinsing and completely air-drying the filters before reinstalling them.
- The dust cup may be full. Empty the dust cup.
- Clear any blockages in the hose, hose connections, nozzle, wand, pod, or accessories. See Checking for Blockages section for more information.
- Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.
- Rotate the suction control collar on the handle clockwise to increase suction power.

Vacuum lifts area rugs.

- Turn off unit to disengage the brushroll. Move switch to position **I** (bare floors) for suction-only cleaning, and turn unit back on.
- Suction is powerful. Take care when vacuuming area rugs or rugs with delicately sewn edges.
- Rotate the suction control collar on the handle counterclockwise to decrease suction power.

Brushroll does not spin.

- If the brushroll indicator light turns red, immediately turn off the vacuum and unplug it. Remove the pod from the floor nozzle and clear any blockages. Reconnect the nozzle, plug in the vacuum, and turn on the power.
- With the power on, recline the handle, which will automatically turn on the brushroll.
- Make sure the On/Off switch is set to position **II**, Brushroll ON.

Vacuum turns off on its own or indicator light flashes red.

- If your vacuum overheats, the thermostat will automatically turn off the motor. Follow these steps to restart:
 1. Turn off the vacuum and unplug it.
 2. Empty the dust cup and clean the filters. See Emptying the Dust Cup and Cleaning and Replacing the Filters sections.
 3. Check for blockages in the (hose, wand, accessories, nozzle, and inlet openings.)
 4. Allow the unit to cool for a minimum of 60 minutes.
 5. Plug in the vacuum and turn it on.

TECHNICAL SPECIFICATIONS

Voltage: 120V- 60Hz
Watts: 1200W

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO / Elbrd: J.M / SC: 04-27-2026

OBPN: NV360_Series_IB_REV_Mv5_240110 SHNMDL: NV366_B




8 1 4 1 0 0 4 8 8

Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

QUICK START GUIDE

WHAT'S INSIDE:


- A** Vacuum Pod
- B** Motorized Floor Nozzle
- C** Wand
- D** Handle & Hose
- E** Crevice Tool
- F** Pet Multi-Tool
- G** Pet Power Brush

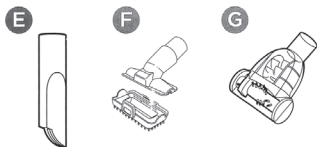

ASSEMBLY

1. Insert **Pod** onto **Floor Nozzle**.
2. Insert **Wand** into the pod.
3. Connect the **Handle** to the top of the wand, pressing until it clicks into place.
4. Connect **Hose** to the back of the pod, pressing until it clicks into place.

For proper operation, ensure all parts are firmly clicked into place.

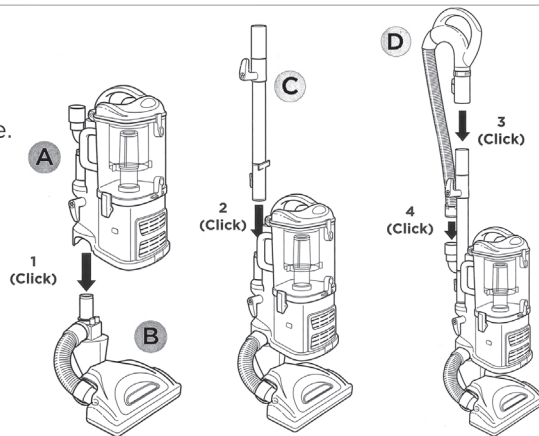

- Accessory type and quantity may vary depending on the model. -

- The images shown in this manual are for illustrative purposes only and may be subject to change. -

