









USING THE COOKING FUNCTIONS WITH RACK LEVELS

The chart below outlines the recommended rack levels along with the suggested accessories for cook functions. For best results, use only the recommended accessories for a given function and remove others from the oven.

ACCESSORY PLACEMENT

WHOLE ROAST	AIR ROAST	AIR FRY	BAKE	DEHYDRATE
				
Sheet Pan on Wire Rack on Bottom Level	Sheet Pan on Wire Rack on Bottom Level	Air Fry Basket on Sheet Pan on Wire Rack on Bottom Level	Sheet Pan on Wire Rack on Bottom Level	Air Fry Basket on Sheet Pan on Wire Rack on Bottom Level
BROIL	TOAST	BAGEL	PIZZA	REHEAT
				
Broil Rack in Sheet Pan on Wire Rack on Top Level	Wire Rack on Top Level	Wire Rack on Top Level	Wire Rack on Bottom Level	Sheet Pan on Wire Rack on Bottom Level
OR				
Wire Rack on Top Level				

- NOTE:** Crumb tray must be installed for all functions. Functions vary by model.
- NOTE:** When cooking greasy, drippy foods on one level, place the sheet pan on the wire rack below to catch the drippings. Alternatively, use the broil rack on top of the sheet pan.

HOW TO REDUCE SMOKE

Follow the guidelines below for the best oils to use to reduce the chance of smoke.

Recommended:
Canola
Refined coconut
Avocado
Vegetable
Grapeseed



Not recommended:
Olive oil
Butter
Margarine



(not included)

The unit may produce smoke when cooking on a hotter setting than what is recommended.

USING YOUR FRENCH DOOR PREMIER

USING THE COOKING FUNCTIONS

To turn on the unit, plug the power cord into an outlet and press the  (POWER) button. The unit will automatically shut off after 10 minutes of inactivity.

Whole Roast

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until WHOLE ROAST brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a cook time up to 2 hours.

NOTE: If cooking for 1 hour or less, the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes.

- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 250°F and 450°F.
- Press START/STOP to begin preheating.
- Place ingredients on the sheet pan (or in the air fry basket nested in the sheet pan). When the unit beeps to signify it has preheated, immediately place the sheet pan on the wire rack on the bottom rail. Close oven door.

NOTE: The timer will start counting down as soon as the oven has preheated. If ingredients are not ready to go into the oven, simply add more time.

- When cook time is complete, the unit will beep and “END” will appear on the display.

Air Roast

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until AIR ROAST brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a cook time up to 2 hours.

NOTE: If cooking for 1 hour or less, the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes.

- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 250°F and 450°F.
- Press START/STOP to begin preheating.
- Place ingredients on the sheet pan. When the unit beeps to signify it has preheated, immediately place the sheet pan on the wire rack on the bottom rail. Close oven door.

- When cook time is complete, the unit will

NOTE: The timer will start counting down as soon as the oven has preheated. If ingredients are not ready to go into the oven, simply turn dial to add more time.

beep and “END” will appear on the display.

Air Fry

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until AIR FRY brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a cook time up to 2 hours.
- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 250°F and 450°F.
- Press START/STOP to begin preheating.

NOTE: Food cooks faster when using the Air Fry function.

- Place ingredients in the air fry basket. If ingredients are fatty, oily, or marinated, place the basket on the sheet pan.
- When the unit beeps to signify it has preheated, immediately place the sheet pan (if using) and air fry basket on the wire rack on the bottom rail. Close oven door.

NOTE: The timer will start counting down as soon as the oven has preheated. If ingredients are not ready to go into the oven, simply add more time.

- When cook time is complete, the unit will beep and “END” will appear on the display.

Bake

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until BAKE brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a cook time up to 2 hours.

NOTE: If cooking for 1 hour or less, the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes

- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 250°F and 450°F.
- Press START/STOP to begin preheating.
- Place ingredients on the sheet pan. When the unit beeps to signify it has preheated, immediately place the pan on the wire rack. Close oven door.

NOTE: The timer will start counting down as soon as the oven has preheated. If ingredients are not ready to go into the oven, simply add more time.

- During cooking, you can turn on the light to check on progress.
- When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: For best results with baked goods such as cookies, line the sheet pan with parchment paper.

Dehydrate

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until DEHYDRATE brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a dehydrate time up to 12 hours.
- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 100°F and 200°F.
- Place ingredients in the air fry basket on the sheet pan on the wire rack. Close oven door and press START/STOP to begin dehydrating.
- When cook time is complete, the unit will

NOTE: The unit does not preheat in Dehydrate mode.

NOTE: For best results, lay ingredients flat in one layer.

beep and “END” will appear on the display.

Broil

- To select the function, press the MODE button and turn the dial until BROIL brightly illuminates.
- Press the TIME/SLICES button and turn dial to select a cook time up to 30 minutes.
- Press the TEMP/SHADE button and turn the dial to select either HI (450°F) or LO (400°F).
- Place ingredients on the broil rack nested in the sheet pan. Place the sheet pan on the wire rack. Close oven door and press START/STOP to begin cooking.
- When cook time is complete, the unit will

NOTE: The unit does not preheat in Broil mode.

beep and “END” will appear on the display.

Toast

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until TOAST brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select the number of bread slices. You may toast up to 6 slices at once.
- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a darkness level from shade 1-7.

NOTE: There is no temperature adjustment available for the Toast function. It is very important to select the exact number of slices to avoid over- or under-toasting.

- Place bread slices directly on the wire rack. Close oven door and press START/STOP to begin toasting.
- When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: You can also manually adjust the time once cooking has started to better choose your preferred shade.

Bagel

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until BAGEL brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select the number of slices. You may toast up to 6 bagel slices at once.
- Press the TEMP/SHADE button (FO100) or press the TEMP/SHADE button and turn the dial (FO101) to select a darkness level from shade 1-7.

NOTE: There is no temperature adjustment available for the Bagel function, and the unit does not preheat in Bagel mode. It is very important to select the exact number of slices to avoid over- or under-toasting.

- Place bagel slices, cut-side up, directly on the wire rack. Close oven door and press START/STOP to begin toasting.
- When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: You can also manually adjust the time once cooking has started to better choose your preferred shade.

Pizza

- To select the function, press the MODE button (FO100), or press the MODE button and turn the dial (FO101) until PIZZA brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the TIME/SLICES button and turn the dial (FO101) to select a cook time up to 2 hours.
- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) dial to select a temperature between 250°F and 450°F.
- Press START/STOP to begin preheating.
- When the unit beeps to signify it has preheated, place pizza directly on the wire rack. Close oven door and press START/STOP to begin cooking.
- When cook time is complete, the unit will beep and “END” will appear on the display.

Reheat

- To select the function, press the function MODE button (FO100), or press the MODE button and turn the dial (FO101) until REHEAT brightly illuminates.
- Press the TIME/SLICES button (FO100), or press the MODE button and turn the dial (FO101) to select a reheat time up to 2 hours.
- Press the TEMP/SHADE button (FO100), or press the TEMP/SHADE button and turn the dial (FO101) to select a temperature between 100°F and 450°F.
- Place food on the sheet pan and place the pan on the wire rack. Close oven door and press START/STOP to begin reheating.

NOTE: The timer will start counting down as soon as the oven has preheated. If ingredients are not ready to go into the oven, simply add more time.

- When cook time is complete, the unit will beep and “END” will appear on the display.


CLEANING & MAINTENANCE

EVERYDAY CLEANING

The unit should be cleaned thoroughly after every use.

- Unplug the unit from the outlet and allow it to cool down before cleaning.
- Empty crumb tray by sliding it out of the oven.



NOTE: Empty crumb tray frequently. Hand-wash when necessary.

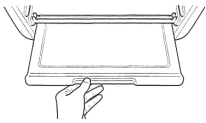

- After every use, wipe away any food splatter on the interior walls and glass door of the unit with a soft, damp sponge.
- To clean the exterior of the main unit and the control panel, wipe them clean with a damp cloth. A non-abrasive liquid cleanser or mild spray solution may be used. Apply the cleanser to the sponge, not the oven surface, before cleaning.
- When using accessories, we recommend greasing them with recommended cooking oil, or covering them with parchment paper or aluminum foil before placing food on top.

DEEP CLEANING

- Unplug the unit from the outlet and allow it to cool down before cleaning.
- Remove all accessories from the unit, including the crumb tray, and wash separately. Use a non-abrasive cleaning brush to more thoroughly wash the air fry basket. Accessories are hand-wash recommended. **DO NOT** place sheet pan or crumb tray in dishwasher.
- Use warm, soapy water and a soft cloth to wash the oven’s interior and glass door, **DO NOT** use abrasive cleaners, scrubbing brushes, or chemical cleaners, as they will damage the oven. **CAUTION: NEVER** put the main unit in the dishwasher or immerse it in water or any other liquid.
- To remove tough grease, let sheet pan soak overnight in warm, soapy water, then wash with a non-abrasive sponge or brush.
- Thoroughly dry all parts before placing them back in the oven.

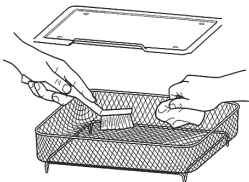

IMPORTANT: Place crumb tray below lower heating elements. **DO NOT** slide into any rack positions.

PRINTED IN MEXICO

Elbrd: J.M / SC: 04-30-2026

OBPN: FO100Series_IB_MP_

Mv10_250801

SHNMDL: FO101_B

8 1 4 1 0 0 7 5 2

