KEURIG

K-Supreme™

SINGLE SERVE COFFEE MAKER

Let's get brewing.

Please read this manual carefully before operating your unit and retain for future reference.

804106737

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS**
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
7. Close supervision is necessary when any appliance is used by or near children.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
17. Do not immerse brewer in water.

1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig® recommends using only Keurig® My K-Cup® Universal Reusable Coffee Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
3. **WARNING:** Used K-Cup® pods should be removed from the pod holder, or in part with the daily cleaning routine.
4. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
5. **CAUTION:** There are sharp needles that puncture the K-Cup pod; one above the K-Cup® pod holder, and the other in the bottom of the K-Cup pod holder. To avoid risk of injury, be aware of the needle locations.
6. **POWER CORD INSTRUCTIONS:**
   a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
   b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
   c. If a long detachable power-supply cord or extension cord is used:
   i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
   ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
   iii. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
7. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

SAVE THESE INSTRUCTIONS

Button Overview

ADD WATER
will illuminate when water is needed

DESCALE
will illuminate when your brewer needs to be descaled

Press the **STRONG Button** for bolder coffee

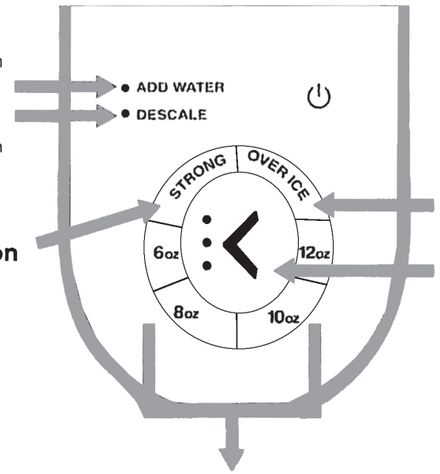

Brew your favorite beverages **OVER ICE**

BREW Button

BREW SIZES
Choose **6, 8, 10,** or **12oz**

The actual descriptions of control panel and their locations may vary, depending on the model.

Before You Brew

1 Plug & Place

Remove packing tape from brewer. Plug into a grounded outlet.

Place a large mug (10oz minimum) on the drip tray.

NOTE: If changing water tank position to the back, please complete before first brew (refer to instructions included)

2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter, install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the lock tabs engage with the brewer. Replace lid.

NOTE: Do not use distilled water.

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The ***Refurbished Product Service Center*** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the ***Refurbished Product Service Center*** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.
Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

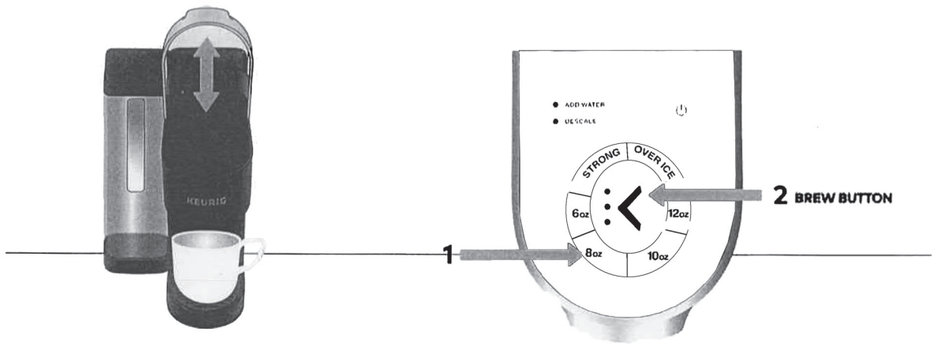

3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically.

4 Cleansing Brew

The 4 cup sizes will blink. Press the **8oz** button, then press the blinking **BREW** button to start a cleansing brew. Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

Brew Your First Cup

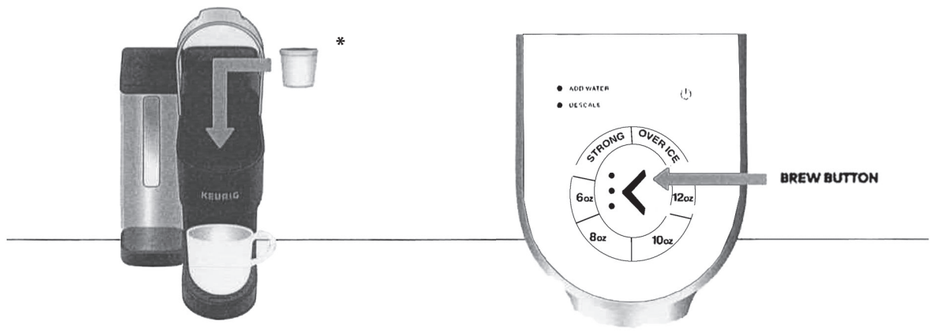

5 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

Do not remove the foil lid on the K-Cup® pod.

*** K-Cup pods not included.**

6 Brew & Enjoy!

The 4 brew size buttons will blink. Select your brew size, then press the blinking **BREW** button. For a stronger coffee, press the **STRONG** button before brewing. The **BREW** button will remain illuminated while brewing. Brewing is complete when the buttons are no longer illuminated. Lift the handle and dispose of the K-Cup® pod.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

The image shown here is for illustrative purposes only and may be subject to change.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

For bolder coffee press the **STRONG** button, followed by the **BREW** button.

For iced beverages fill a large plastic tumbler with ice. Insert any K-Cup® pod, then press the **OVER ICE** button, followed by **BREW** button.

NOTE: choose a tumbler large enough to accommodate both the ice and dispensed liquid to prevent overflow.

Multi-position Water Reservoir

Position along the left or back of the brewer to optimize counter space.

Brewer Features

Smart Start heats then brews in one simple process. No need to wait for the brewer to heat before selecting brew size. Simply power on your brewer by lifting the handle, add a K-Cup® pod, select your brew size, then press the **BREW** button. The brewer will heat, then automatically begin brewing.

Auto Off automatically turns your brewer off 5 minutes after the last brew for energy savings.

High Altitude To ensure your coffee maker works properly at higher altitudes (5,000 feet) please enable the High Altitude Brewing Mode on your coffee maker.

1. Begin with the brewer plugged in and powered off.
2. Press and hold the **BREW button** and **8oz** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Brewing Mode has been enabled.
3. High Altitude Mode will remain enabled until steps 1-2 are repeated and the **12oz** button turns off to confirm that the High Altitude Brewing mode is disabled.

Strong Brew for a bolder, more intense cup.

Over Ice brew your favorite beverages over ice.

ATTENTION! *
This brewer is only compatible with newly designed Keuring® My K-Cup® Universal Reusable Coffee Filter

Do not attempt to use any other reusable filter or previous of Keuring® My K-Cup® Universal Reusable Coffee Filter; may cause damage to brewer.

Caring for your Brewer

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Rinse away residue and oils for a great-tasting cup of coffee every time
Every 2 Months	Keurig® Water Filters	Keep your water fresh and clean to enhance the taste of your coffee
Every 3 Months or when the Descale notification turns on*	Keurig® Descale Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health of your coffee maker

***To turn off Descale notification, follow the full descaling procedure as outlined in the Use & Care Guide**

If the brewer has been in storage, or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid and drip tray with warm soapy water and rinse clean. Do not use any vinegar-based cleaning products to clean the outside of your brewer.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth as lint may remoin.

Water Tank Repositioning

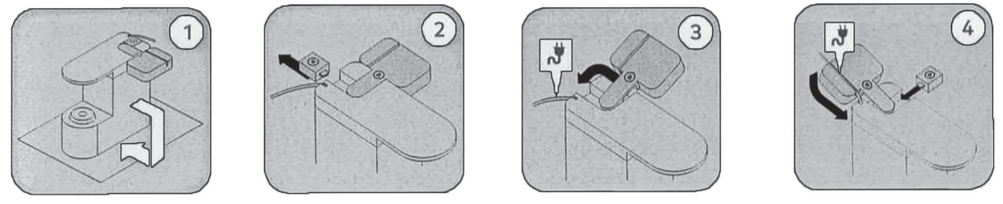

1 Flip Brewer Over

Remove the drip tray and the water tank and set them aside. On a flat surface, carefully turn the brewer over so the base is facing up. You will see two parts: the water tank base (Part B) and the locking tab (Part A).

2 Remove Part A

Slide Part A out of the brewer. It should release freely with little resistance.

3 Lift, Pivot Part B

Next, reposition part B.

- Gently pull outward to disengage from the brewer.
- Rotate upward, as shown above. Part B will remain attached to the brewer.
- Part B should now pivot freely to the second position.

Remember to move the power cord, so it does not get caught.

4 Insert B, Replace A

Replace Part B in its new position. Rotate downward so that B is parallel to the base, then slide B back into position. Remember to replace the power cord.

Slide Part A back into the second position to lock B in place. Flip the brewer back upright.

You are now ready to use your Keurig® brewer!

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO / SC: 12-08-2022 / Elbrd: J.E. / TAB
OBPN: DC0000004449 Rev. B / SHNMDL: KSK910BK_EGB_KSK910CPP_EGB_KSK910FWH_EGB KSK910GY_EGB_KSK910RD_EGB_KSK910SSG_EGB_KSK910WH_EGB_KSSK910BK_E2GB KSSK910BK_EGB

W 804106737