

IMPORTANT SAFETY INSTRUCTIONS - FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS.


READ CAREFULLY BEFORE USE. READ ALL INSTRUCTIONS BEFORE USING THIS CARPET CLEANER.

WARNING

To reduce the risk of fire, electric shock, injury, or property damage:


1. If the power cord plug does not fit fully into the outlet, contact a qualified electrician. **DO NOT** force into outlet or try to modify to fit.
2. To reduce the risk of shock and unintended operation, unplug before servicing.
3. This carpet cleaner consists of a motorized nozzle, main body, pole, handle, hose, and hand tools. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
4. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
5. Use only identical replacement parts.
6. **DO NOT** use the carpet cleaner for any purpose other than those described in this Guide.
7. **DO NOT** immerse or spray water on the body of the carpet cleaner.
8. To clean the surface, wipe with a dry cloth.
9. Keep the carpet cleaner's cord out of reach of children.
10. **DO NOT** allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.
11. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be done by children.
12. **DO NOT** handle plug or carpet cleaner with wet hands.
13. **DO NOT** use without the dirty water tank, clean solution tank, filter, brushroll, and brushroll cover in place.
14. Use only identical replacement parts. Only use Shark® branded filters and accessories.
15. **DO NOT** put any objects into nozzle opening. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
16. **DO NOT** use if nozzle airflow is restricted. If the air paths or the motorized floor nozzle become blocked, turn the carpet cleaner off. Remove all obstructions before you turn on the unit again. Keep nozzle and all carpet cleaner openings away from hair, face, fingers, uncovered feet, or loose clothing.
17. **DO NOT** use if carpet cleaner is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
18. Use extra care when cleaning on stairs.
19. **DO NOT** leave the carpet cleaner unattended while plugged in.
20. When using on any surface, always keep the carpet cleaner moving to avoid damaging the surface (e.g., carpet fibers).
21. **DO NOT** place carpet cleaner on unstable surfaces such as chairs or tables. The surrounding area may be slippery and present a risk of injury.
22. **DO NOT** use to pick up:
 - a) Large objects.
 - b) Hard or sharp objects (glass, nails, screws, or coins).
 - c) Large quantities of dust (e.g., drywall dust).
 - d) Smoking or burning objects (hot coals, cigarette butts, or matches).
 - e) Flammable or combustible materials (lighter fluid, gasoline, or kerosene).
 - f) Toxic materials (chlorine bleach, ammonia, or drain cleaner).
23. **DO NOT** use in the following areas:
 - a) Poorly lit areas.
 - b) Outdoor areas.
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
24. Turn off the carpet cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
25. During cleaning or routine maintenance, **DO NOT** cut anything other than hair, fibers, or string wrapped around the brushroll.
26. **DO NOT** modify or attempt to repair the carpet cleaner yourself. **DO NOT** use the carpet cleaner if it has been modified or damaged.

27. Turn off all controls before unplugging.
28. To reduce the risk of fire or electric shock due to internal component damage, use only Shark® cleaning fluid. See the Cleaning Fluid section of this Instruction Book.
29. **DO NOT** pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. **DO NOT** run appliance over cord. Keep cord away from heated surfaces.
30. **DO NOT** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
31. Use indoors only.
32. **DO NOT** use carpet cleaner on hard floors as it may damage your floor. To avoid damage to flooring and to avoid potential slip hazard, after use: (a) move to a hard sealed surface (avoid unsealed, wood and laminate) and (b) place unit on absorbent material like a towel to soak up any liquid.
33. **DO NOT** fill solution tanks while installed on the appliance. Remove before filling.
34. The areas around where you are cleaning may become wet, use care to avoid slipping and falling.
35. Use care when removing and reattaching the hand tool to avoid accidental activation of the cleaning solution. Do not spray solution on your skin or in your eyes.
36. **GROUNDING INSTRUCTIONS:** This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
37. **WARNING:** Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. **DO NOT** modify the plug provided with the appliance. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

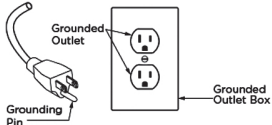

38. This appliance is for use on a nominal V circuit and has a grounding attachment plug that looks like the plug illustrated below. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.
39. **DO NOT** immerse. To reduce risk of electric shock, use only on carpet moistened by cleaning.
40. **DO NOT** use vinegar in any tanks.
41. **DO NOT** run over edges of area rugs.
42. Stalling the brush roll may result in premature failure.
43. Avoid repeated strokes over the same area, to help prevent damage to Berber carpets.
44. Check manufacturer's tag prior to cleaning area rugs for any specific cleaning guidelines. We do not recommend deep cleaning delicate rugs (including wool, cotton, silk, antique, or area rugs that do not have a manufacturer's tag).
45. **DO NOT** store unit where temperatures reach freezing levels to avoid damaging internal parts.
46. **FIRST AID** Keep out of reach of children. Causes skin and serious eye irritation. **IF IN EYES**, rinse continuously with water for minutes. Remove contact lenses if present and easy to do so. Continue rinsing. **IF ON SKIN**, wash with soap and water. If skin and eye irritation persists, seek medical attention. Please recycle container. Dispose of contents/container with a licensed waste disposal site in accordance with the requirements of the local waste disposal authority.
47. **DO NOT** dispose in drains or watercourses in concentrate form.

WHAT'S INCLUDED

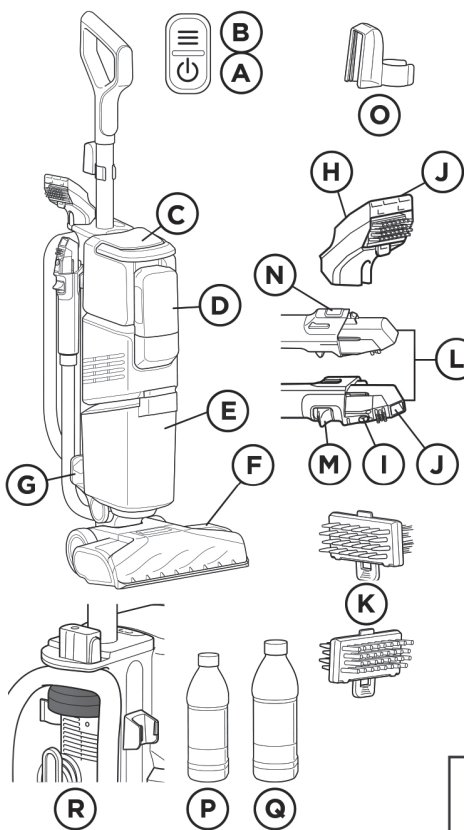

Accessory type and quantity may vary depending on the model.

- A Power Button
- B Mode Button
- C CarpetXpert™ Tank
- D StainStriker™ Tank
- E Dirty Water Tank
- F Brushroll Cover/Door
- G Selector Lever (Hand Tool or Brushroll)
- H Hand Tool
- I Spray Outlet
- J Suction Inlet
- K Reversible Bristles
- L Crevice Tool
- M Hand Tool Trigger
- N Release Button
- O Hose-Cleaning Tool (Included in some models)
- P Deep Clean Pro
- Q OXY Multiplier
- R Carry Handle





Wide-Path Tool and Shark Pet Tool included with select models, (Included in some models)


ASSEMBLY

Note: When assembling your CarpetXpert, there may be a little water in or around the water tanks. This is because we test all units before shipping to ensure the highest quality.

1. Insert pole into the top of unit until it clicks into place (**fig. 1**). Make sure the pole is properly installed to prevent it from falling out during use.
2. Store the hose-cleaning tool by clipping it onto the pole (**fig. 2**).
3. Attach hand tool to crevice tool, or store it on the tool holder (**fig. 3, 4**).
4. Be sure the rubber seal is seated in place under the dirty water tank (**fig. 5**).
5. Install the dirty water tank by placing the bottom on the nozzle lip (**fig. 6**) then tilting it forward until it clicks into place.

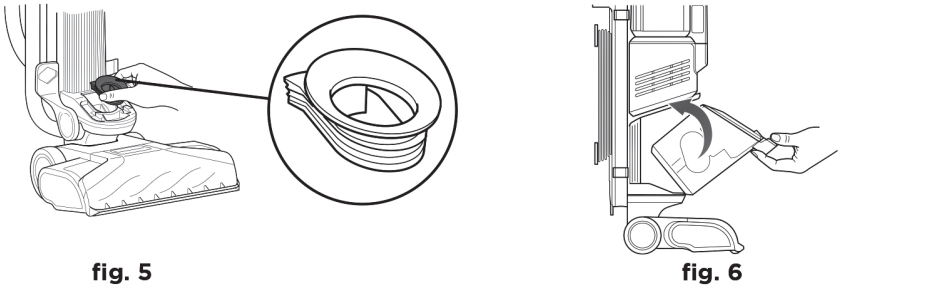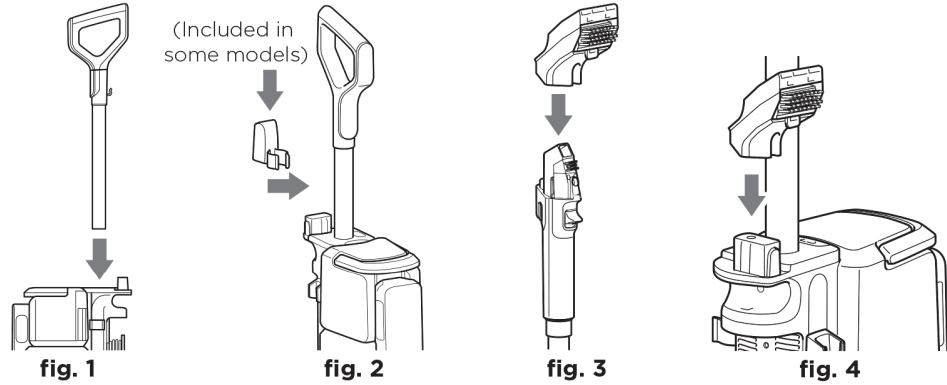

HOSE ASSEMBLY

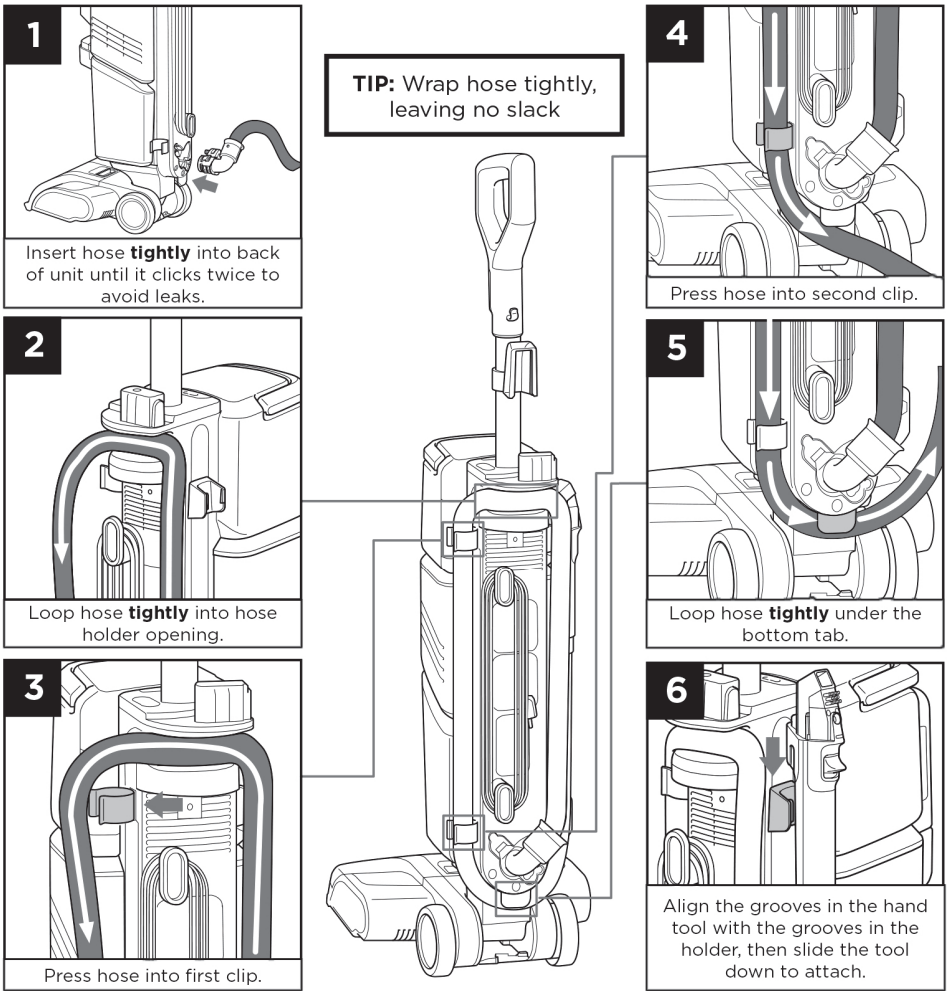

SHARK® SOLUTIONS AND TANKS

The CarpetXpert™ tanks are designed to work with Shark cleaning solutions. Do not use third party or homemade cleaners.

- **Shark Deep Clean Pro** For deep-cleaning carpets with the brushroll.
- **Shark OXY Multiplier:** Dispensed from the StainStriker tank. Combines with Deep Clean Pro from the CarpetXpert Tank to be used at the hand tool for stain cleaning.

Filling the CarpetXpert Tank (top clear tank)

1. Lift the CarpetXpert Tank by the handle to detach it, then remove the cap.
2. Add warm water to the tank up to the WATER fill line. Do not use water hotter than 140°F (60°C).
3. Add Shark Deep Clean Pro up to the CONCENTRATE fill line.
4. Reattach cap, then reinstall the CarpetXpert Tank.

Filling the StainStriker Tank (smaller, blue tank)

1. Lift the StainStriker Tank by its sides to detach it, then remove the cap.
2. Add Shark OXY Multiplier up to the MAX FILL line.
3. Reattach cap, then reinstall the StainStriker tank.




The image shown here is for illustrative purposes only and may be subject to change.

CLEANING WITH CARPETXPERT

DEEP CLEANING with the brushroll:
Uses Deep Clean Pro Formula and water

Important: Vacuum with traditional vacuum cleaner first, especially pet hair. CarpetXpert is not designed for dry vacuuming.

- Move the selector lever to UP position to use brushroll.
- Gently step on the base and tilt the handle back.
- Press power button; unit will enter Deep Clean Mode.
- Move unit forward; it will automatically dispense water and Deep Clean Pro formula.
- Move back to dry with suction only (does not dispense fluid on back stroke).
- Repeat steps 4 and 5 on the same area once.


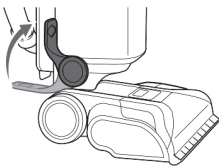


QUICK DRY MODE
Avoid over-cleaning the same spot in Deep Mode to prevent saturated carpets and long dry times. Drying may take a few hours.
Once deep clean is complete, press the Mode button to activate Quick Dry Mode. Repeated passes in Quick Dry Mode will reduce dry time.

Rinsing: Some users may want to rinse their carpet after cleaning. To do this, fill CarpetXpert Tank with only water, and repeat cleaning steps.

STAIN CLEANING with the hand tool:
Uses Deep Clean Pro Formula + OXY Multiplier

- With the unit in upright position, unwrap hose, and push the selector lever DOWN until it clicks into place.
- Suction up any wet mess, then spray the stained area (fig. 1). Scrub the stain with the bristles (fig. 2), then tilt the hand tool up (fig. 3) and drag it across the stained area to extract the mess. Repeat if needed. If stain is dry, first break up the stain with the bristles and suction up.

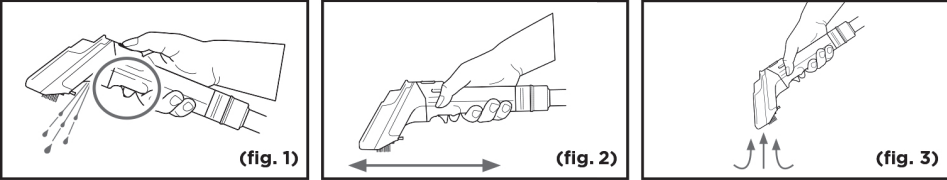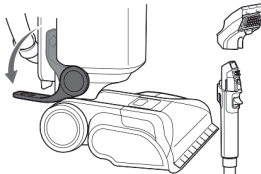


The **Hand Tool** is for general stain cleaning, while the **Crevice Tool** is intended for tight spaces like corners. The rubber side of the reversible bristles is intended for softer fabrics and only to be used with fluid, not dry. The **Hand Tool** (included in some models) is intended for larger areas like sofa cushions or stairs.

The **Pet Tool** is included with select models. The tool extracts wet pet messes, while preventing the mess from reaching the hose and the interior of the unit. Use on wet pet messes only. **DO NOT** use the tool to remove pet hair. To use, first spray the wet mess, then extract it with the Pet Tool. **DO NOT** exceed the **MAX FILL** line on the Pet Tool cup. Keep the tool level, without tipping, to prevent the mess from reaching the hose.

After use, turn off the CarpetXpert power and empty the Pet Tool cup into a toilet. Wash the cup, filter, and the rest of the tool thoroughly with soap and water after every use. tank. To avoid oversaturating, do not overspray.

Pet Tool (included in some models)

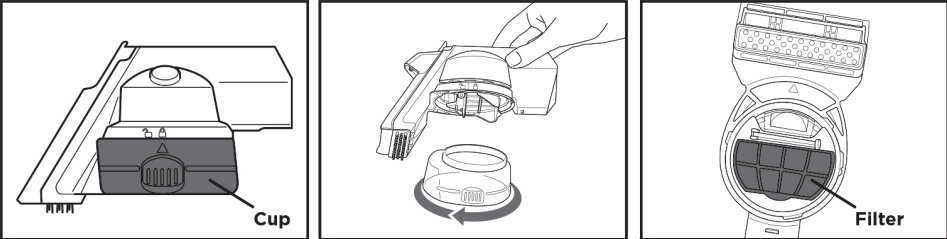

INDICATOR LIGHTS

- MODES**
- Blue (Left):** Deep Clean Mode (brushroll at floor nozzle).
- Blue (Right):** Quick Dry Mode (brushroll at floor nozzle).
- Both Green:** StainStriker (at hand tool).

- NOTIFICATIONS**
- Red:** Brushroll jam. Remove obstruction, then reinstall brushroll.
- Flashing Blue:** The dirty water tank is full. Empty the tank, then reinstall it.
- Flashing Red:** Brushroll cover open. Close cover.
- Flashing Green:** The selector lever is in the wrong position. Move lever UP to clean with brushroll. Move lever DOWN to clean with the hand tool.

MAINTENANCE


Clean unit after every use to avoid odors, bacteria, and mold.

Note: When turning off the power, it may take 2 to 3 seconds for the unit to clear the lines and power down completely.

DIRTY WATER TANK

Note: You will hear a change in motor noise/air flow when the dirty water tank is full.

- Press the release button and remove the tank.
- Lift out inner float mechanism. **DO NOT** pour out dirty water until float is removed.
- Pour dirty water down drain.
- Remove the filter cover, then lift out the filter. Wash the filter with soap and water, then allow it to air-dry completely before reinstalling.

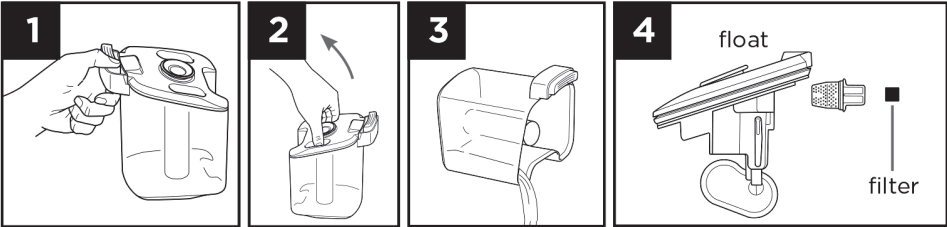


Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

BRUSHROLL

- Pull latch to remove top brushroll cover.
- Lift brushroll door to open.
- Remove the brushroll by pulling up on the side tab. If hair is wrapped, cut it away by running scissors along the groove in the brushroll. Wash brushroll, cover, and doors and allow them to air-dry before reinstalling.
- To reinstall the top brushroll cover, connect the 2 hooks at the bottom, then push forward until it clicks into place.

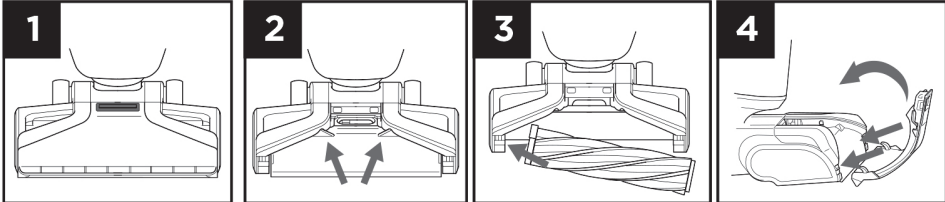


HAND TOOLS

Press the release button to detach tool. Pull tab to remove window and bristle strip. Wash tools with soap and water and allow them to air-dry before reinstalling.

HOSE

Attach the hose-cleaning tool to the end of the crevice tool and turn on power. Point tool to the floor, pull the trigger, and the cleaning solution will be sucked into the hose to clean the interior.

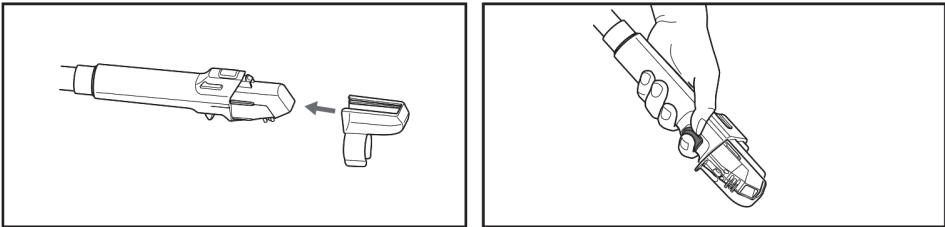

Hose Cleaning Tool (included in some models)


TROUBLESHOOTING

CHECKING FOR DEBRIS

Note: You will hear a change in motor noise/air flow when the dirty water tank is full.

To check airpath for clogs, hair, or debris:

- Unplug unit.
- Remove dirty water tank.
- Remove seal (fig. 7).
- Detach the hose (fig. 8).
- Remove the selector lever by pushing it all the way forward (fig. 9), then pulling it out sideways (fig. 10).
- Remove any debris.
- Reattach parts.

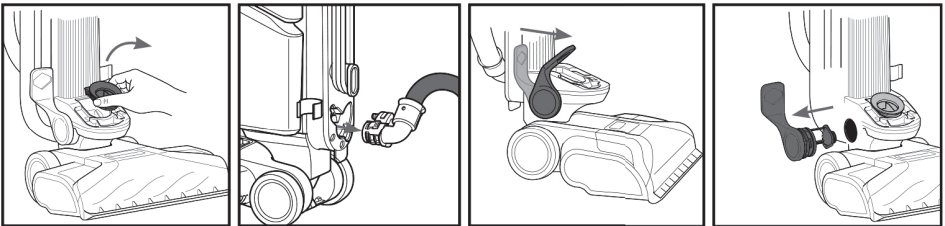

Leaking: Be sure the hose is assembled and connected properly and the caps on the tanks are tightened.

Poor suction: See Checking for Debris section, and be sure hose, dirty water tank, and seal under dirty water tank are all connected properly. Make sure the hose clicks twice when attaching to the body.

Hand tool not spraying: Be sure lever is in down position and tanks are full.

Floor nozzle not dispensing solution: Be sure lever is in the up position and tanks are full.

Oxy Multiplier is not being dispensed: Be sure tanks are attached securely. Note: The StainStriker tank dispenses at a slower rate than the CarpetXpert Tank.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____